


ESR 312/316/420/424/524/528 Storage Chassis

Installation Instruction

Revision History

Rev	Date	Modifications	Update By
1.0	04/27/2005	First Draft	Sio Fu
2.0	5/1/2006	(1) Add 32 pin universal SATAII backplane (2) Add additional 2 x 3.5" HDD installation (3) Change cable 17-1013-XX to 17-1023-XX for HDD status LED (4) Add ESR 312, 424 and 528 chassis (5) ESR 420, ESR 424, ESR 524, ESR 528 support Quad Processor (6) Add Power supply i2c FRU map (7) Thumbscrew rear top cover change to FH screws for CCC requirement (8) Support additional 2x3.5" fixed HDD on ESR-series	Sio Fu



ESR 312, ESR 316, ESR 420

ESR 425, ESR 524, ESR 528




www.tstcom.com

User Manual

Revision 2.0

US version

May 2006

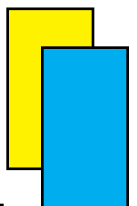

User Manual ESR 312, 316, 420, 424, 524, 528

Disclaimers

Information in this document is provided in connection with TST products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provide in TST 's Terms and Conditions of Sale for such products, TST assumes no liability whatsoever, and TST disclaims any express or implied warranty, relating to sale and/or use of TST products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. TST may make changes to specifications and product description at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined". TST reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

The ESR series storage chassis may contain design defects or errors known as errata which may causes the product to deviate from published specifications. Current characterized errata are available on TST website.

This document and function described in it is furnished under license and may only be used or copied in accordance with the terms of the license. The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by TST. TST assumes no responsibility or liability for any errors or inaccuracies that may appear in this document that may be provided in association with this document.

Except as permitted by such license, no part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the express written consent of TST

Other brands and names may be claimed as the property of others

Copyright Terabytes Server Storage Tech Corp 2006

User Manual ESR 312, 316, 420, 424, 524, 528

Limited Warranty

TST warrants to the original purchaser that the ESR 312, ESR 316, ESR 420 , ESR 424, ESR 524 and ESR 528 enclosure products, including the components therein, shall be free from defects in material and craftsmanship for a limited period of three (3) years from the date of invoice. These are the only warranties TST offers.

TST makes no other warranties of any kind, express or implied, written, oral or statutory, and expressly disclaims any implied warranties, including merchantability or fitness for any specific purpose, or freedom from patent infringement, regardless of origin, under no circumstance is TST liable for incidental or consequential damages.

Under normal use, should the product under warranty fail in material or craftsmanship, TST will, at its sole discretion

- (1) repair and return the product, freight prepaid and honor the balance of the warranty period or
- (2) replace the product, freight prepaid, and honor the balance of the warranty period

Products that have been damaged through negligence, accident or misuse of the purchaser or its agents will be, at purchaser's discretion, replaced at purchaser's expense or returned un-repaired, freight collect.

User Manual ESR 312, 316, 420, 424, 524, 528

Safety Instruction

Use the following safety guidelines to ensure your own personal safety and to help protect your server, storage system, or appliance from potential damage.

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type. These blocks are notes, cautions, and warnings, and they are used as follows:



WARNING: A WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious bodily injury.



CAUTION: A CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



NOTE: A NOTE indicates important information that helps you make better use of your system.



Read the installation instructions before connecting the system to the power source



This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.



Only trained and qualified personnel should be allowed to install, replace, or service this equipment



Do not work on the system or connect or disconnect cables during periods of lightning activity



This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



Use only approved power cable(s). If you have not been provided with a power cable for your server, storage system, or appliance, or for any AC-powered option intended for your system, purchase a power cable that is approved for use in your country. The power cable must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.



Do not spill food or liquids on your system components, and never operate the product in a wet environment.

Safety Instruction



If any of the following conditions occur, unplug the product from the electrical outlet and replace the part or contact your authorized service provider:

The system cable, extension cable, or plug is damaged.

An object has fallen into the product.

The product has been exposed to water.

The product has been dropped or damaged.



Do not push any objects into the openings of your system components. Doing so can cause fire or electric shock by shorting out interior components.



Keep your system components away from radiators and heat sources. Also, do not block cooling vents.



Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.



To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack

If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

This unit should be mounted at the bottom of the rack if it is the only unit in the rack.



Cleaning: Unplug your system from wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp (not wet) cloth for cleaning.



Use caution when pressing the component rail release latches and sliding a component into or out of a rack; the slide rails can pinch your fingers.



Allow the product to cool before removing covers or touching internal components.



Position system cables and power cables carefully; route system cables and the power cable and plug so that they cannot be stepped on or tripped over. Be sure that nothing rests on your system components' cables or power cable.

Safety Instruction



There is a danger of a new battery exploding if it is incorrectly installed. Replace the battery only with the same or equivalent type recommended by the manufacturer. Do not dispose of the battery along with household waste. Contact your local waste disposal agency for the address of the nearest battery deposit site.



Ground yourself by touching an unpainted metal surface on the chassis, such as the metal around the card-slot openings at the back of the computer, before touching anything inside your computer.

While you work, periodically touch an unpainted metal surface on the computer chassis to dissipate any static electricity that might harm internal components.



When unpacking a static-sensitive component from its shipping carton, do not remove the component from the antistatic packing material until you are ready to install the component in your computer. Just before unwrapping the antistatic packaging, be sure to discharge static electricity from your body.



When transporting a sensitive component, first place it in an antistatic container or packaging.



Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a microprocessor chip by its edges, not by its pins.



To help avoid possible damage to the system board, wait 5 seconds after turning off the computer before disconnecting a device from the computer.



When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. Some cables have a connector with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before you connect a cable, ensure that both connectors are correctly oriented and aligned.



To help protect your system/components from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).

Table of Contents

Chapter 1. Product Overview	1
1.1 Chassis Description	1
1.2 Chassis Front View	3
1.3 Chassis Front Panel Features	5
1.4 Chassis Back View	7
1.5 Chassis Dimensions	8
1.6 System Components	9
 Chapter 2. System Board and CableFeatures	 10
2.1 Front Panel Board (order #16-0102-01A)	10
2.2 System Power Board (order # 16-0101-01A)	12
2.3 Serial ATA Backplane Board (order # 16-0121-01A)	20
2.3.2.1 Multilane Serial ATA cable (17-1032-01A)	23
2.3.2.2 SFF8484 internal 32pin SAS to SFF8484 internal 32pin SAS cable (17-1030-01A)	24
2.3.2.2 SFF8484 internal 32pin SAS to SFF8087 miniSAS cable (17-1036-01A)	25
2.3.3 JP9 8-pin Serial ATA Activity and Failed signal header	26
2.3.3.1 4-pin HDD status Cable (17-1023-XX)	26
2.3.4 JP10 12-pin Hard Disk Status signal Jumper	27
2.4.5 JP11 MOSFET setup header	27
2.4.6 JP12 10 pin power connector header	27
2.4 Wide Port Serial Attached SCSI Backplane Board (order # 16-0121-01A)	28
2.4.5 JP11 MOSFET setup header	29
2.4.6 JP12 10 pin power connector header	29
2.5 SCSI Backplane Board (order # 16-0108-01A)	30
2.6 Daisy Chain the SCSI backplanes	35
2.7 Slim Power Board (16-0103-01A)	36
2.8 Slim Floppy Disk Board (Order #16-0104-01)	38
2.9 Slim CD/DVD-Rom Board (16-0105-01)	40
2.10 DB 9 Cable Pin Assignment (order # 17-1001-XX)	44
2.10 Slim-line 2.5" to 3.5" IDE Drive Adapter (order # 16-0118-01A)	45
2.11 System Fan Edge Adapter Board (order # 16-0106-01A)	47
 Chapter 3. Integration Steps	 48
3.1 Removing and Replacing the top cover	49
3.2 Installing the System Board	50
3.3 Installing Expansion Cards	52
3.4 Install and Remove a Hard Disk Drive	53
3.5 Installing or removing a Slim IDE Hard Disk Drive	56
3.6 Installing or removing an internal 3.5" Hard Disk Drive in the ESR-312 and ESR-316	58
3.7 Installing or removing an internal 3.5" Hard Disk Drive in the ESR-420, 424, 524, 528	60
3.8 Installing a Slim Floppy Disk Drive	61
3.9 Installing a Slim CD/DVD-Rom Drive	63
3.10 Installing the Rear Panel Fan	65
3.11 Replacing the Hot-Swap System Fan	66

User Manual ESR 312, 316, 420, 424, 524, 528

3.12 Replacing the Hot-Swap Power Supply Modular	67
3.13 Replacing the Backplane Board	73
3.14 Replacing the system battery	76
4. Install the system into the rack	77
4.1 Rack Safety Instruction	77
4.2 Rack Mounting Hardware	79
4.3 Install the chassis in a Rack	80
5. Space part order information	87
5.1 Kit Accessories Box order # 05-1001-01A	87
5.2 Kit System Fan, 120mm x 120mm x 38mm order # 05-1002-01A	88
5.3 Kit Hard Disk Drive Carrier order #05-1003-XXA	88
5.4 Kit Slim IDE Drive Kit for Drive 1 order # 05-1004-01A	89
5.5 Kit Slim IDE Drive Kit for Drive 2 order # 05-1005-01A	90
5.6 Kit Slim IDE Drive Kit for Drive 3 order # 05-1006-01A	91
5.7 Kit Slim-line Floppy Drive Disk order # 05-1007-01A	92
5.9 Kit Two device IDE 40pin cable order # 17-1017-01A	93
5.10 Kit, 4-pin power cable for add-in-card, 20 inches order # 17-1007-02A	93
5.11 Kit, K-Type Thermocouple order # 07-1020-01A	93
5.12 Kit Power Supply Modular, ESR-316; 650W order # 05-1009-01A	94
5.13 Kit Power Supply Modular, ESR-420, ESR-524 ; 950W order # 05-1010-01A	94
5.14 Kit Power Supply Modular, ESR-524 ; 1350W order # 05-1011-01A	95
5.15 Kit AC Power inlet Cable order # 17-1018-01A	95
5.16 Kit 28 inches bracket extender order # 05-1012-01A	97
5.17 Kit 30 inches bracket extender order # 05-101301A	97
5.18 Kit ESR-312/316 3.5" internal HDD mounting kits order #05-1028-01A	98
5.19 Kit ESR-420/424/524/528 3.5" internal HDD mounting kits order #05-1029-01A	98
5.20 Kit SCSI Backplane order # 05-1015-01A	99
5.21 Kit SCSI Backplanes (Daisy Chain 8 drives) order # 05-1016-01A	99
5.22 Kit SCSI Backplanes (Daisy Chain 12 drives) order # 05-1017-01A	100
5.23 Kit Serial ATA Backplane order # 05-1018-01A	100
5.24 Kit Fan out SATA cable, order # 17-10310-1A	101
5.25 Kit Fan out SATA cable, order # 17-10310-1A	101
5.26 Kit Fan out SATA cable, order # 17-10310-1A	101
5.27 Cable, Multilane Serial ATA cable, order # 17-1032-01A	102
5.28 Cable SFF8484 internal 32pin SAS to SFF8087 miniSAS cable order #17-1036-01A	102
5.29 Cable, Serial ATA activity LED, order # 17-1023-XXX	102
6. System Fan Specification 120mm x 120mm x 38mm	103
7. Power Supply Specification	104
7.1 650W 2+1 Redundant Power Supply	104
7.2 950W 2+1 Redundant Power Supply	106
7.3 1350W 3+1 Redundant Power Supply	108
7.4 1500W 3+1 Redundant Power Supply	110

User Manual ESR 312, 316, 420, 424, 524, 528

8. Equipment Log	115
9. Power Budget Calculation	117
9.1 650W Power Supply	117
9.2 950W Power Supply	118
9.3 1350W Power Supply	119
10. BTU usage calculation	120
10.1. 650W Power Supply	120
10.2. 950W Power Supply	120
10.3. 1350W Power Supply	120
Index	121

User Manual ESR 312, 316, 420, 424, 524, 528

List of Figures

Figure 1 ESR 312 Front View	3
Figure 2 ESR 316 Front View	3
Figure 3 ESR 420 Front View	3
Figure 5 ESR 524 Front View	4
Figure 6 ESR 528 Front View	4
Figure 7 Front Panel Indicator	5
Figure 8 Serial DB 9 connector	6
Figure 9 ESR 312/316 Rear View	7
Figure 10 ESR 420/424 Rear View	7
Figure 11 ESR 524/528 Rear View	7
Figure 12 Chassis Dimension	8
Figure 13 Front Opened View	9
Figure 14 Rear Opened View	9
Figure 15 Front Panel Board	10
Figure 16 16-pin Front Panel cable	11
Figure 17 10-pin USB cable	11
Figure 19 24-pin system board header	12
Figure 21 Front Panel I/O cable (order # 17-1014-01A)	13
Figure 20 16-pin front panel connector	13
Figure 22 PWM fan signal cable	14
Figure 24 4-pin power header	15
Figure 23 3-pin fan header	15
Figure 25 4-pin power cable	16
Figure 26 16-pin system board to front panel I/O header	16
Figure 27 10-pin system power board to backplane header	17
Figure 28 10-pin power cable	18
Figure 29 thermocouple threshod jumper header	19
Figure 30 Thermocouple header	19
Figure 31 2-pin thermocouple with cable	19
Figure 33 22 pin Serial ATA connector header	20
Figure 32 SATA or SAS passive backplane board(Direct Attached)	20
Figure 34 29 pin Serial ATA connector header	21
Figure 35 32 pin SFF8484 SAS header (backplane)	21
Figure 36 SFF8484 (32pin SAS) to PTP cable	22
Figure 37 7-pin Serial ATA connector	22
Figure 38 SFF8484 (32pin SAS) to SFF8470 multilane cable	23
Figure 39 26-pin SFF8470 connector	23
Figure 40 SFF8484 (32pin SAS) cable	24
Figure 41 32 pin SFF8484 cable connector	24
Figure 42 SFF8484 (32pin SAS) cable, 90 degree	24
Figure 43 36 pin SFF8087 cable connector	25
Figure 44 SFF8484 (32pin SAS) to SFF8087 (miniSAS) cable	25
Figure 45 LED activity Cable 17-1023-XXX	26
Figure 46 8-pin Serial ATA Hard drive status LED header	26
Figure 47 12-pin HDD status signal jumper	27

User Manual ESR 312, 316, 420, 424, 524, 528

Figure 48 SAS wide port backplane (for SAS edge or FANOUT expander	28
Figure 50 SCSI Backplane board	30
Figure 51 80-pin SCSI SCA connector	30
Figure 52 68-pin SCSI HD68 connector	32
Figure 53 HD68 SCSI cable	33
Figure 54 LVD320/SE Terminator	33
Figure 55 SCSI ID switch	34
Figure 56 Daisy Chain SCSI backplanes	35
Figure 57 SCSI cable used for daisy chain	35
Figure 58 Slim-line Power Board (order # 16-0103-01A)	36
Figure 59 Mini 4 pin DC Power cable (order # 17-1018-01A)	37
Figure 60 4 pin-to-2 pin DC Power cable (order # 17-1008-XX)	37
Figure 61 Slim-line Floppy Disk Board (order # 16-0104-01A)	38
Figure 62 34pin FDD cable (order # 17-1004-01A)	39
Figure 63 26-pin Slim-line FDD flat cable (order # 17-1019-01A)	39
Figure 64 Slim CD/DVD-Rom Board (order # 16-0105-01A)	40
Figure 66 Two drive IDE cable (order # 17-1017-01A)	41
Figure 65 Single drive IDE cable	41
Figure 67 DB9 Serial Cable (order # 17-1001-XXX)	44
Figure 69 JP1 connector layout, 2.5" to 3.5" IDE adapter	45
Figure 68 2.5" to 3.5" IDE adapter (order # 18-0007-01A)	45
Figure 70 JP2 connector layout	46
Figure 71 System Fan Edge Adapter Board	47
Figure 72 Loosen the back cover thumbscrews	49
Figure 73 Removing the back top cover	49
Figure 74 Removing the front top cover	49
Figure 75 Installing the I/O Gasket	50
Figure 76 Installing the bolt standoffs	50
Figure 77 Installing the system board	50
Figure 78 Installing the I/O Gasket for Quad Motherboard	51
Figure 79 Installing the bolt standoffs for Quad Motherboard	51
Figure 80 Installing the system board for Quad motherboard	51
Figure 81 Removing the expansion-card shielding plate	52
Figure 82 Installing the expansion-card into the system	52
Figure 83 Secure the expansion-card	52
Figure 84 Hot Swap Hard Disk Drive Trays	53
Figure 85 Push the Hard Drive tray button	54
Figure 86 Remove the HDD tray from the chassis	54
Figure 87 Remove the drive dummy blank	55
Figure 88 Install the Hard Disk Drive into the carrier	55
Figure 89 Insert the hard disk drive tray to the system	55
Figure 91 Remove the slim-line HDD mounting bracket	56
Figure 90 2.5" slimline hard disk drive location	56
Figure 92 Mount the slim HDD to the HDD tray	57
Figure 93 Install the 2.5" to 3.5" IDE adapter	57
Figure 94 Example jumper setting for 2.5" IDE hard disk drive	57
Figure 95 Remove the slim-line HDD mounting bracket	58

User Manual ESR 312, 316, 420, 424, 524, 528

Figure 96 Power Y-cable, (17-1028-04A)	58
Figure 97 Push in the slide bracket	59
Figure 98 Install the internal 3.5: HDD bracket	59
Figure 99 Extend and secure the slide bracket	59
Figure 100 Install 3.5" HDD into theHDD mounting bracket	60
Figure 101 Install the 3.5" HDD bracket into the chassis	60
Figure 102 Remove the FDD cover plate and mounting bracket	61
Figure 103 Connect 26-pin cable into the FDD adapter board	61
Figure 104 Mount the slim FDD adapter board into the chassis	61
Figure 105 Assembly the FDD into the mounting bracket	62
Figure 106 Install the slimline FDD into the chassis	62
Figure 107 Connect the 26-pin high density cable into the slimline FDD	62
Figure 108 Remove the CD-Rom covering plate and mounting bracket	63
Figure 109 Install the slim-line CD-Rom into the mounting bracket and adapter board	63
Figure 110 Install the slim CD-Rom into the chassis	64
Figure 111 Location of the rear exhaust fans	65
Figure 112 Install the rear fan into the chassis	65
Figure 113 Pulling out the hot-swap system fan	66
Figure 114 Install the fan into the fan edge board	66
Figure 115 Identify the defected power supply modular	67
Figure 116 Remove the screw that secure the 650W PSU	68
Figure 117 Remove the displacement bar of the 650W PSU	68
Figure 118 Pull out the PSU modular from its housing	68
Figure 119 Identify the defected PSU unit	69
Figure 120 Install the 2.5" to 3.5" IDE adapter	70
Figure 121 Identify the failed PSU modular	71
Figure 122 Unscrew the thumb screw and release the latch	71
Figure 123 Pull out the modular form the housing	71
Figure 124 Remove the slide rail security screws	73
Figure 125 Fully extend the slide rail	74
Figure 126 Remove the system fan mounting bracket	74
Figure 127 Remove the backplane bracket mounting screws	74
Figure 128 Take out take out the BP mounting bracket	75
Figure 129 Remove the BP form its mounting bracket	75
Figure 131 Rack mounting hardware list	79
Figure 134 Rack's mounting hole types	80
Figure 132 Four post cabinet rack	80
Figure 133 Four post open rack	80
Figure 135 Marking on the rack	81
Figure 136 Removing the rack slide security screws	82
Figure 137 Releasing the outer slide bracket	82
Figure 138 Bracket extenders	83
Figure 139 Assembly the outer slide rail and bracket extender	83
Figure 140 Position the outer slide rail into the rack	84
Figure 141 Install the outer slide rail into the rack	85
Figure 142 Slide in the chassis into the rack	86
Figure 143 Check the mounting holes are align to the rack	86
Figure 144 Kit accessories box	87

User Manual ESR 312, 316, 420, 424, 524, 528

Figure 146 Kit hard disk drive carrier	88
Figure 145 Kit system fan, 120x120x38mm	88
Figure 147 Kit slim IDE 2.5" to 3.5" hard disk drive (drive 1 location)	89
Figure 148 Kit slim IDE 2.5" to 3.5" hard disk drive (drive 2 location)	90
Figure 149 Kit slim IDE 2.5" to 3.5" hard disk drive (drive 3 location)	91
Figure 151 Kit slim-line CD/DVD-Rom	92
Figure 150 Kit slim-line floppy disk drive	92
Figure 153 Cable Kit; 4-pin DC power cable for add-in-card	93
Figure 152 Cable kit: Two-drive IDE cable	93
Figure 154 Cable kit: 2-pin thermocouple with cable	93
Figure 155 Kit power supply modular for 650W	94
Figure 156 Kit power supply modular for 950W	94
Figure 158 Cable Kit: AC Cord North America (order # 17-1018-01A)	95
Figure 159 AC Cord Australia and New Zealand	95
Figure 160 AC Cord Danish	95
Figure 157 Kit power supply modular for 650W	95
Figure 161 AC Cord Europe	96
Figure 162 AC Cord Israeli	96
Figure 163 AC Cord Italy	96
Figure 164 AC Cord Swiss	96
Figure 165 AC Cord U.K.	96
Figure 166 Kit:28 inches cabinet bracket extender	97
Figure 167 Kit:30 inches cabinet bracket extender	97
Figure 168 Kit:internal 3.5" mounting bracket for ESR312/316	98
Figure 169 Kit:28 inches cabinet bracket extender	98
Power Y-cable, (17-1028-04A)	98
Power Y-cable, (17-1028-03A)	98
Figure 170 Kit: SCSI backplane, 4 drives	99
Figure 171 Kit: SCSI backplane, 8 drives	99
Figure 172 Kit: SCSI backplane, 12 drives	100
Figure 173 Kit: Serial ATA Point-to-Point backplane	100
Figure 174 Kit: SCSI backplane, 12 drives	101
Figure 176 Kit: SCSI backplane, 12 drives	101
Figure 175 Kit: SCSI backplane, 12 drives	101
Figure 179 LED activity Cable 17-1023-XXX	102
Figure 177 Kit: SCSI backplane, 12 drives	102
Figure 178 Kit: SCSI backplane, 12 drives	102
Figure 180 System fan specification and P-V curve	103
Figure 181 650W 2+1 Redundant Power Supply	104

List of Tables

Table 2 Front Panel DB 9 Connector Pin Assignment	6
Table 1 Front Panel USB Connector Pin Assignment	6
Table 3 Chassis Dimensions	8
Table 4 16-pin Front Panel Header Pin assignment	10
Table 5 Front Panel USB header Pin assignment	11
Table 6 Front panel USB cable pin assignment	11
Table 7 24-pin Peripheral Power (JP7 and JP19) Pin assignment	12
Table 8 16-pin front panel I/O pin assignment (system board)	13
Table 9 Front Panel I/O cable Pin assignment	14
Table 10 PWN Fan signal cable Pin assignment	14
Table 11 3-pin fan header pin assignment	15
Table 12 4-pin power header pin assignment	15
Table 13 4-pin power cable list	16
Table 15 10-pin power connector header pin assignment	17
Table 14 16-pin Front Panel Header pin assignment (system power board)	17
Table 16 10-pin power cable list	18
Table 17 System power board warning signal list	18
Table 18 22-pin SATA signal segment pin assignment	20
Table 19 29-pin SAS signal segment pin assignment	21
Table 20 29 pin SAS power segment pin assignment	21
Table 21 7 pin Serial ATA data header pin assignment	22
Table 22 28pin Multilane cable pin assignment	23
Table 23 32 pin SFF8484 pin assignment	24
Table 24 36 pin SFF8087 pin assignment	25
Table 25 Serial ATA HDD status signal cable list	26
Table 26 29-pin SAS signal segment pin assignment	28
Table 27 80-pin SCA-SAS signal segment pin assignment	29
Table 28 80-pin SCSI SCA connector pin assignment	31
Table 29 68-pin SCSI HD68 connector pin assignment	32
Table 30 SCSI drive failed signal pin assignment	33
Table 31 SCSI ID settings	34
Table 32 Peripheral Power (JP1) Pin assignment	36
Table 34 4pin-to-2pin power cable list	37
Table 36 34-pin floppy connector pin assignment	38
Table 35 Mini 4-pin Power header (JP1) Pin assignment	38
Table 37 26-pin slim-line floppy drive connector pin assignment	39
Table 38. 40 pin IDE connector pinout (JP1)	40
Table 39 40-pin single drive IDE cable list	41
Table 40. Mini-4 pin drive power connector header pinout (JP2)	42
Table 41. 2.54mm pitch Audio Output connector header pinout (JP2)	42
Table 42. 2.0mm pitch Audio Output connector header pinout (JP2)	42
Table 44 50-pin slim-line CD-Rom drive connector pinout (JP5)	43
Table 45. DB9 cable pin out for 17-1001-01A (JP2)	44
Table 46. DB9 cable pin out for 17-1001-02A (JP2)	44

User Manual ESR 312, 316, 420, 424, 524, 528

Table 47. 44-pin 2.5 inch adapter IDE connector pinout (JP1)	45
Table 48. 40+2 pin IDE connector pinout (JP2)	46
Table 49 Fan edge board connector pin assignment	47
Table 50 System fan specification	103
Table 52 650W power supply specification	104
Table 51 650W PSU DC Output Characteristics	104
Table 54 950W power supply specification	106
Table 53 950W PSU DC Output Characteristics	106
Table 56 1350W power supply specification	108
Table 55 1350W PSU DC Output Characteristics	108
Figure 184 1350W 3+1 Redundant Power Supply	110
Table 58 1350W power supply specification	110
Table 57 1350W PSU DC Output Characteristics	110
Table 59 1500W power supply FRU offset address	114
Table 60 Equipment log	116
Table 61 ESR 316 power budget calculation	117
Table 62 ESR-316 total combined wattage calculation	117
Table 63 950W power supply power budget calculation	118
Table 64 ESR-420, ESR-524 total combined wattage calculation	118
Table 65 1350W power supply power budget calculation	119
Table 66 ESR-420, ESR-524 total combined wattage calculation	119

User Manual ESR 312, 316, 420, 424, 524, 528

Chapter 1. Product Overview

1.1 Chassis Description

TST ESR Series Chassis are designed to support for high density Storage and Server Board. The chassis are shipped with container designed to provide protection and prevent damage during shipment. These chassis were carefully inspected before and during the packing procedure at the factory. Evidence of any damage to these chassis should be reported to the shipper immediately.

If the wrong ESR-Series model has been received, please call your reseller or TST at 626-968-8851 to arrange for a Return Material Authorization (RMA). TST Corp cannot accept returns which do not display an RMA number on the outside of the package. Return the unit with all the original packing materials.

To complete the system, you must purchase some items separately (see below)



Ground yourself by touching an unpainted metal surface on the chassis, such as the metal around the card-slot openings at the back of the computer, before touching anything inside your computer.

While you work, periodically touch an unpainted metal surface on the computer chassis to dissipate any static electricity that might harm internal components.

The following compinents are included with the ESR series chassises


- i Rack mount chassis with slide rail
- ii 12 Hard Drive Trays for ESR-312, 16 Hard Drive Trays for ESR316; 20 Hard Drive Trays for ESR420; 24 Hard Drive Trays for ESR 424 and ESR 524, 28 Hard Drive Trays for ESR 528
- iii 3 x Serial ATA or Serial ATA multilane or SCSI or Serial Attached SCSI Backplane for ESR 312
4 x Serial ATA or Serial ATA multilane or SCSI or Serial Attached SCSI Backplane for ESR 316
5 x Serial ATA or Serial ATA multilane or SCSI or Serial Attached SCSI Backplane for ESR 420
6 x Serial ATA or Serial ATA multilane or SCSI or Serial Attached SCSI Backplane for ESR 424/524
7 x Serial ATA or Serial ATA multilane or SCSI or Serial Attached SCSI Backplane for ESR 528
- iv 650W 2+1 Redundant Power Supply with 3 modulars for ESR 316
930W 2+1 Redundant Power Supply with 3 modulars for ESR 420/424/524/528
1350W or 1500W 3+1 Redundant Power Supply with 4 modulars for ESR 420/424/524/528
- v Two Hot Swap 12cm fans.
- vi Serial DB 9 cable
- vii Dual port USB cable

The following compinents must be purchased seperately

- i One Server Board
- ii Minimum of one processor that is supported by the server board installed
- iii Minimum of one memory modular that is supported by the server board installed
- iv 3.5" Hard Disk Drive (Serial ATA, SCSI or Serial Attached SCSI)
- v 2.5" SFF Hard Disk Drive (ATA)
- vi Slim Floppy Disk Drive
- vii Slim CD/DVD Rom Drive
- viii PCI add-in-cards
- ix Other Peripheral devices

User Manual ESR 312, 316, 420, 424, 524, 528

The following components are included in the accessories box

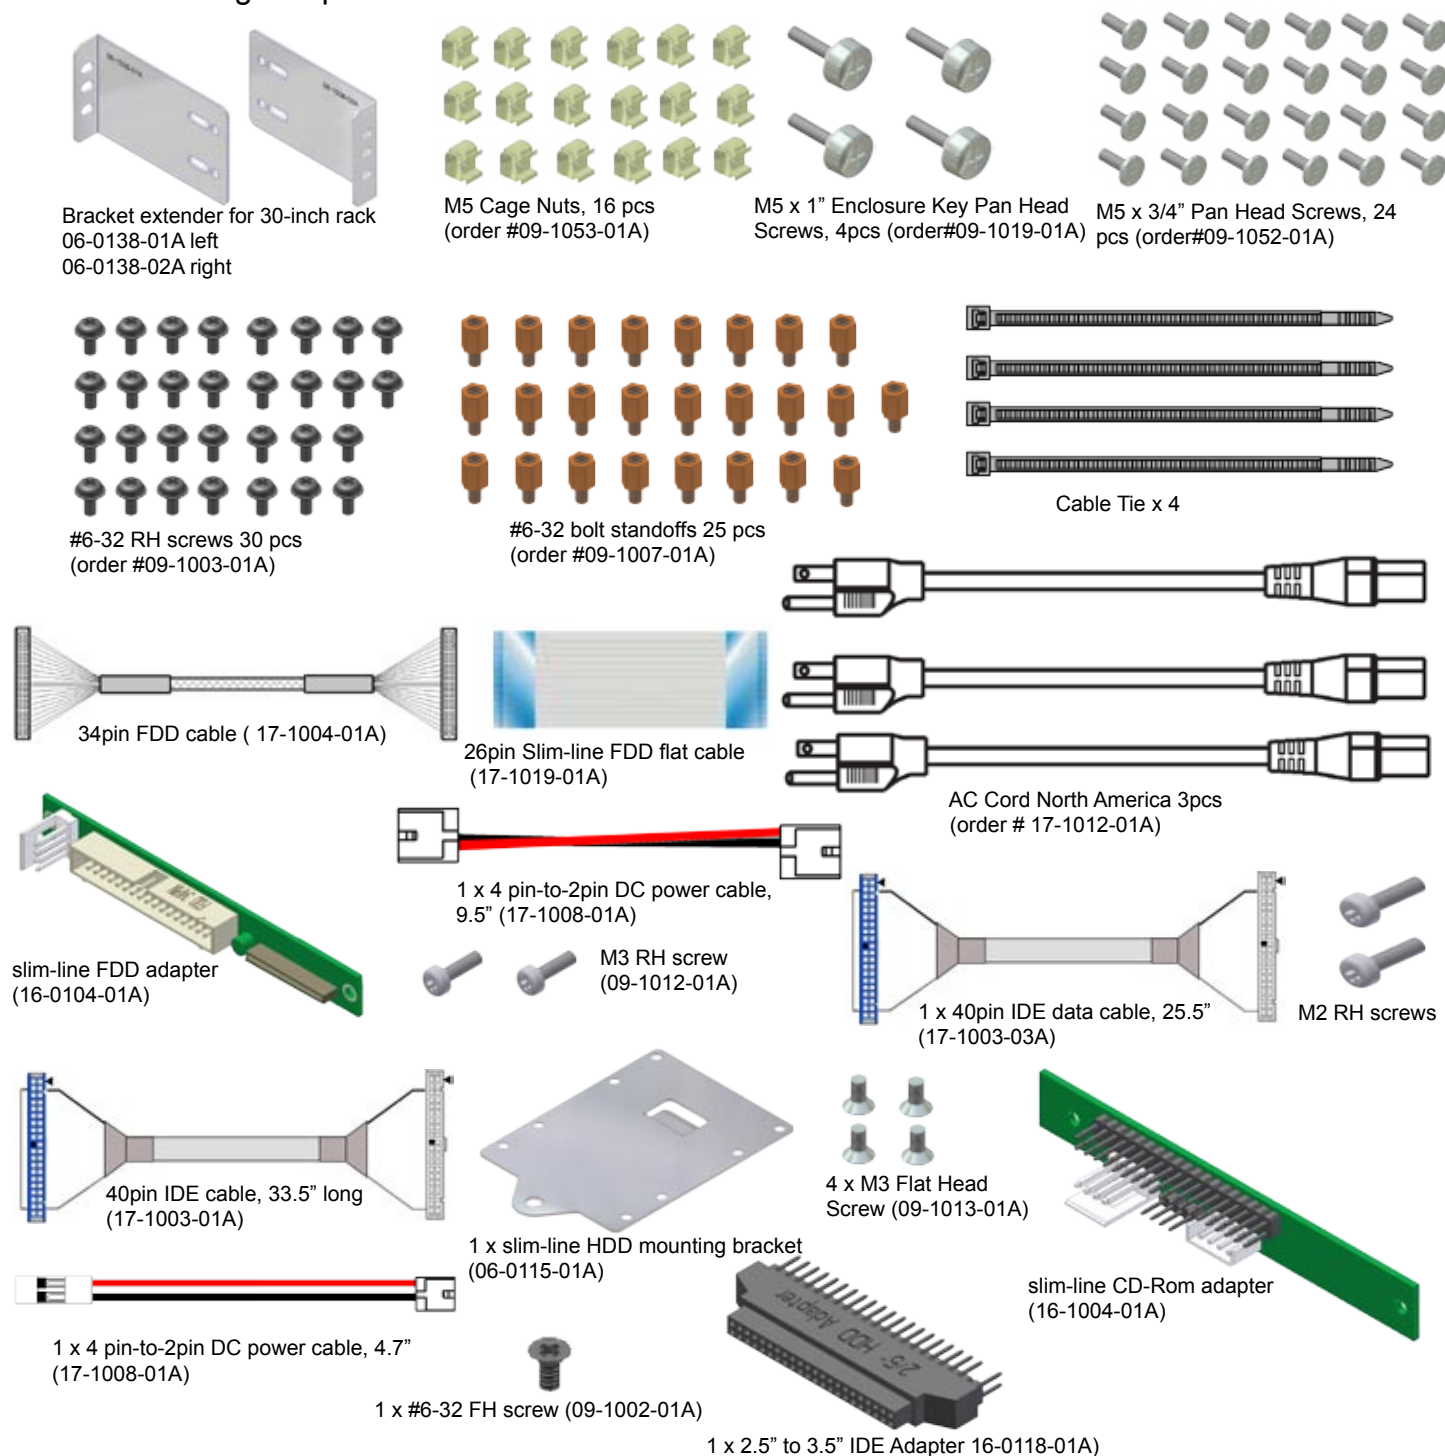

Depend on your country, the accessories box may not have the AC cord and you have to order the AC cord separately.



Use only approved power cable(s). If you have not been provided with a power cable for your server, storage system, or appliance, or for any AC-powered option intended for your system, purchase a power cable that is approved for use in your country. The power cable must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.

User Manual ESR 312, 316, 420, 424, 524, 528

1.2 Chassis Front View

ESR 312

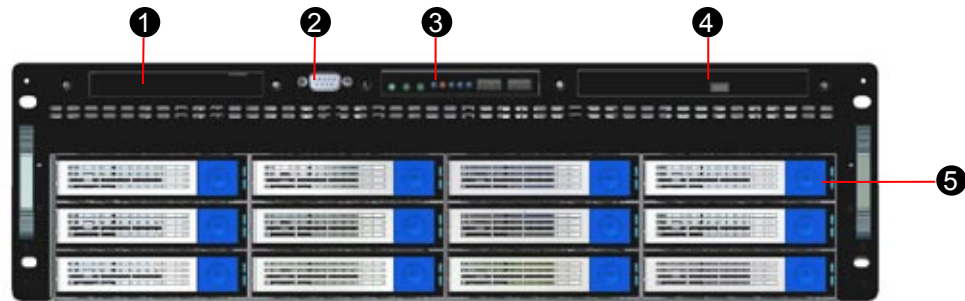


Figure 1 ESR 312 Front View

ESR 316



Figure 2 ESR 316 Front View

ESR 420

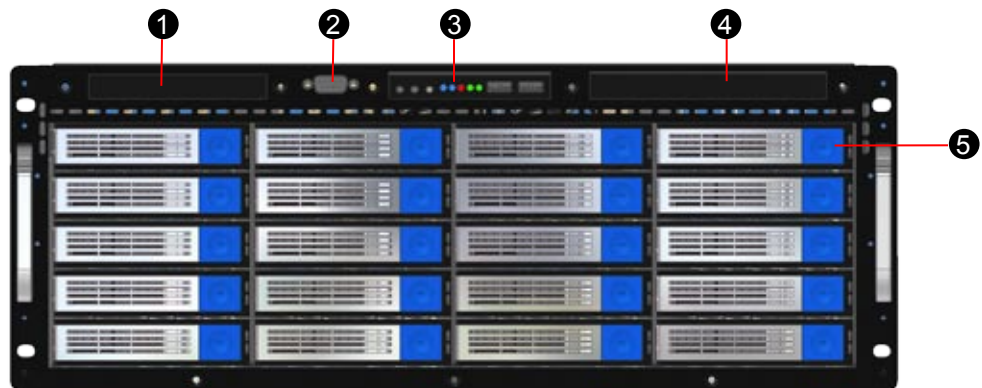


Figure 3 ESR 420 Front View

- | | |
|-------------------------|-------------------------|
| ① Slim FDD Bay | ② Serial DB 9 connector |
| ③ Front Panel Indicator | ④ Slim CD/DVD Bay |
| ⑤ HDD Trays | |

User Manual ESR 312, 316, 420, 424, 524, 528

ESR 424



Figure 4 ESR 424 Front View

ESR 524

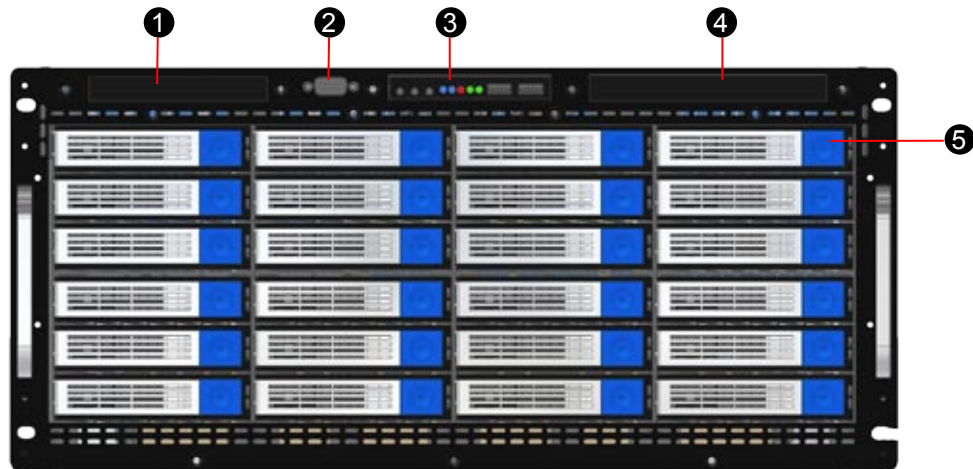


Figure 5 ESR 524 Front View

ESR 528

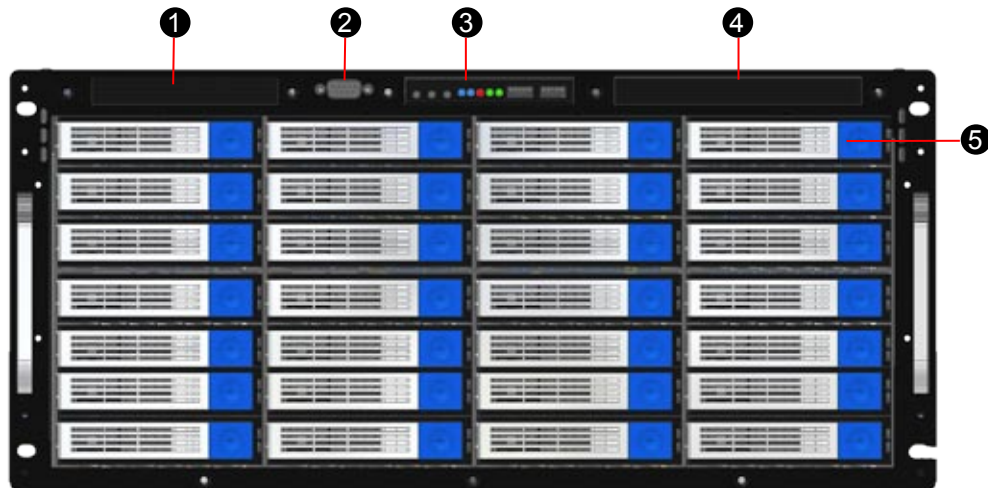


Figure 6 ESR 528 Front View

- | | |
|-------------------------|-------------------------|
| ① Slim FDD Bay | ② Serial DB 9 connector |
| ③ Front Panel Indicator | ④ Slim CD/DVD Bay |
| ⑤ HDD Trays | |

User Manual ESR 312, 316, 420, 424, 524, 528

1.3 Chassis Front Panel Features

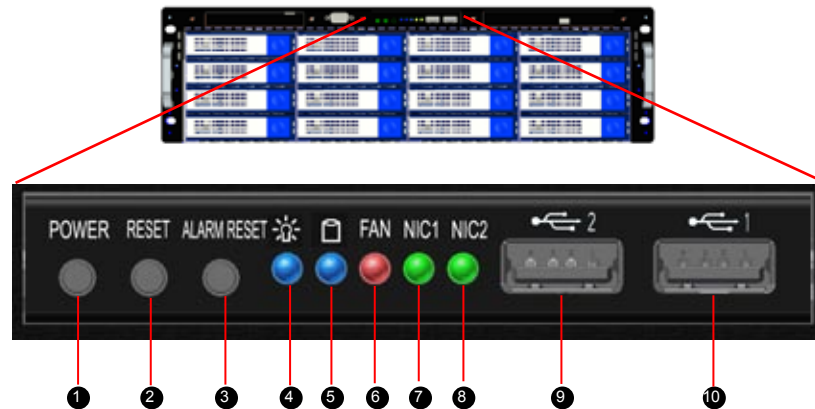


Figure 7 Front Panel Indicator

Front Panel Button and LED functions

①	Power ON/OFF switch	Toggles the system ON/OFF
②	Reset switch	Reboots and initializes the system
③	Alarm Reset switch	Reset the system alarm for Fan failed, Over-Temperature and Power Supply failed
④	System ON LED	Continuous blue light indicates the system is ON No light indicates the system is OFF
⑤	Hard Disk Activity LED	Blinking blue light indicates the hard disk drive that is directly connected to the motherboard has activity
⑥	FAN Failed LED	Blinking red light indicates either the Fan(s) and/or Power Supply Modular(s) and/or System Over Temperature. A short beep from the system alarm indicates System Fan failure, A long beep indicates chassis inside temperature exceed the preset value and a continuous beep indicates Power Supply failure
⑦	NIC 1 LED	Continuous green light indicates the system is connected to the network
⑧	NIC 2LED	Blinking green light indicates activity the system and the network to which it is connected
⑨	USB connector 2	USB connector that is used to connect external USB device. Refer Table
⑩	USB connector 1	

NOTE: Refer section 2.2.5.1 for Front Panel I/O cable pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

1.3.1 Front Panel USB Connectors Pin Assignment

Pin	Signal Name
1	Ground
2	USB Positive Signal
3	USB Negative Signal
4	USB Port Power

Table 1 Front Panel USB Connector Pin Assignment

NOTE: Refer section 2.11 for DB9 cable pin assignment

1.3.2 Front Panel Serial DB 9 Connector Pin Assignment

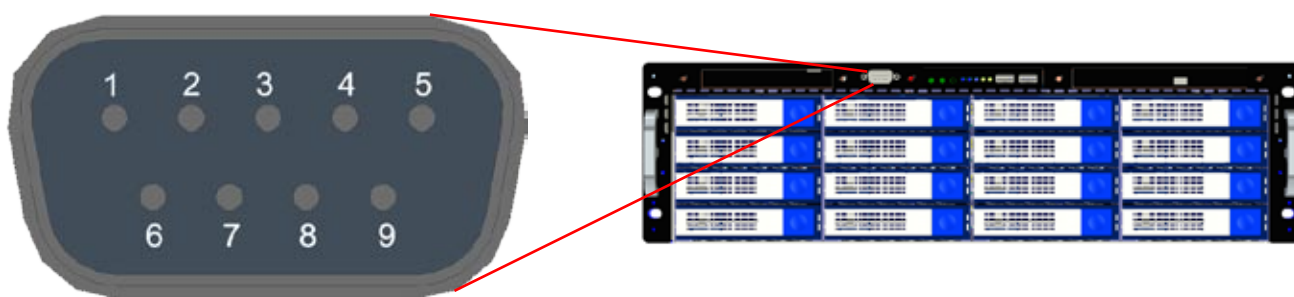


Figure 8 Serial DB 9 connector

The DB-9 (9-pin) serial port allows administrators access the system and/or control external device through a serial console session using UNIX commands such as hyper terminal. The pin assignment is tabulated below. The DB serial connector can be changed to VGA Analog 15 pin connector if your system supports. Contact your reseller for order information.

Pin	Signal Name
1	DCD (Data Carrier Detect)
2	RXD (Receive Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	GND (Ground)
6	DSR (Data Set Ready)
7	RTS (Request to Send)
8	CTS (Clear to Send)
9	RI (Ring Indicator)

Table 2 Front Panel DB 9 Connector Pin Assignment

NOTE: Refer section 2.11 for DB9 cable pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

1.4 Chassis Back View

ESR 312/316

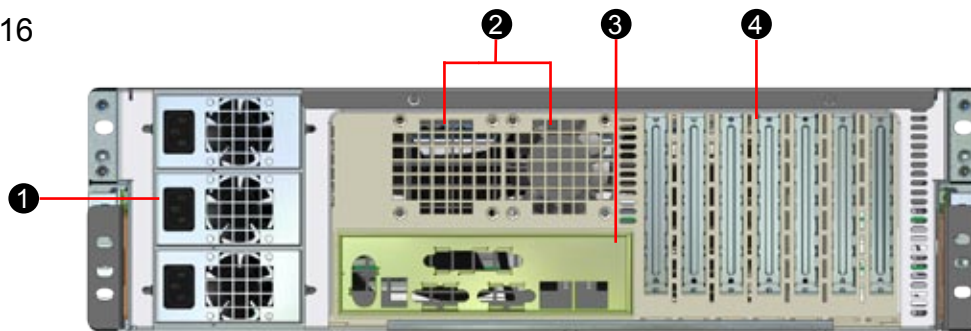


Figure 9 ESR 312/316 Rear View

ESR 420/424

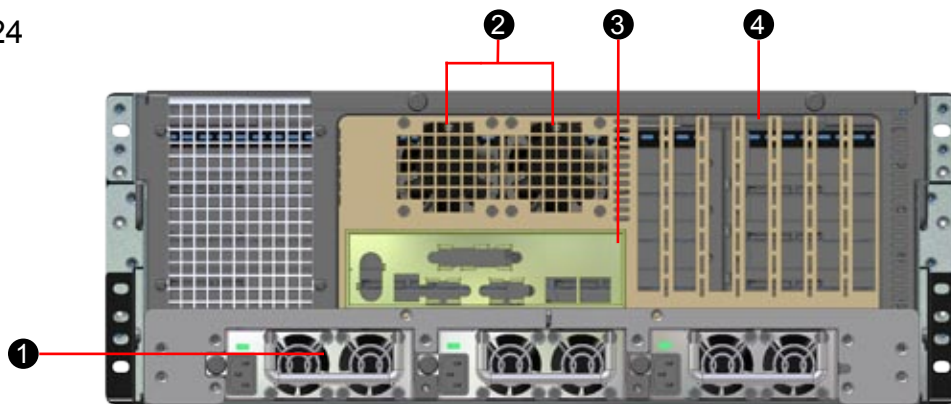


Figure 10 ESR 420/424 Rear View

ESR 524/528

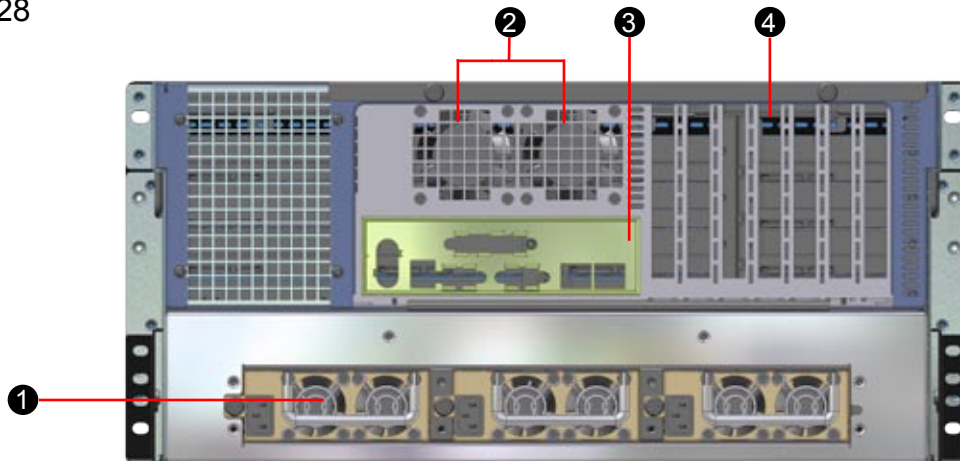


Figure 11 ESR 524/528 Rear View

- | | |
|------------------------|--------------------------|
| ① Power Supply Modular | ② Optional Rear Fan (2X) |
| ③ Rear I/O Shield | ④ PCI Slot Cutout (7X) |

User Manual ESR 312, 316, 420, 424, 524, 528

1.5 Chassis Dimensions

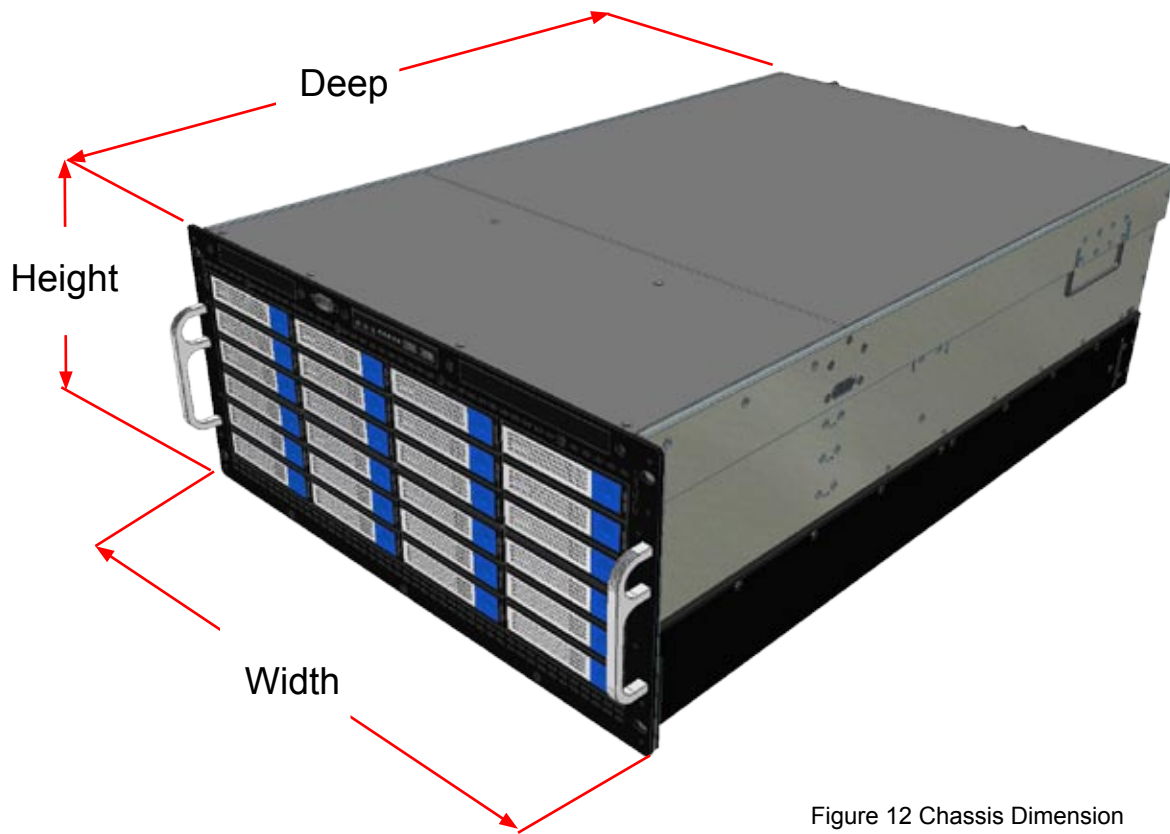


Figure 12 Chassis Dimension

	ESR-312/316	ESR-420/424	ESR-524/528
Height	5.20" (3U)	6.95" (4U)	8.70" (5U)
Width	19.0"	19.0"	19.0"
Deep	28.0"	28.0"	28.0"

Table 3 Chassis Dimensions

User Manual ESR 312, 316, 420, 424, 524, 528

1.6 System Components

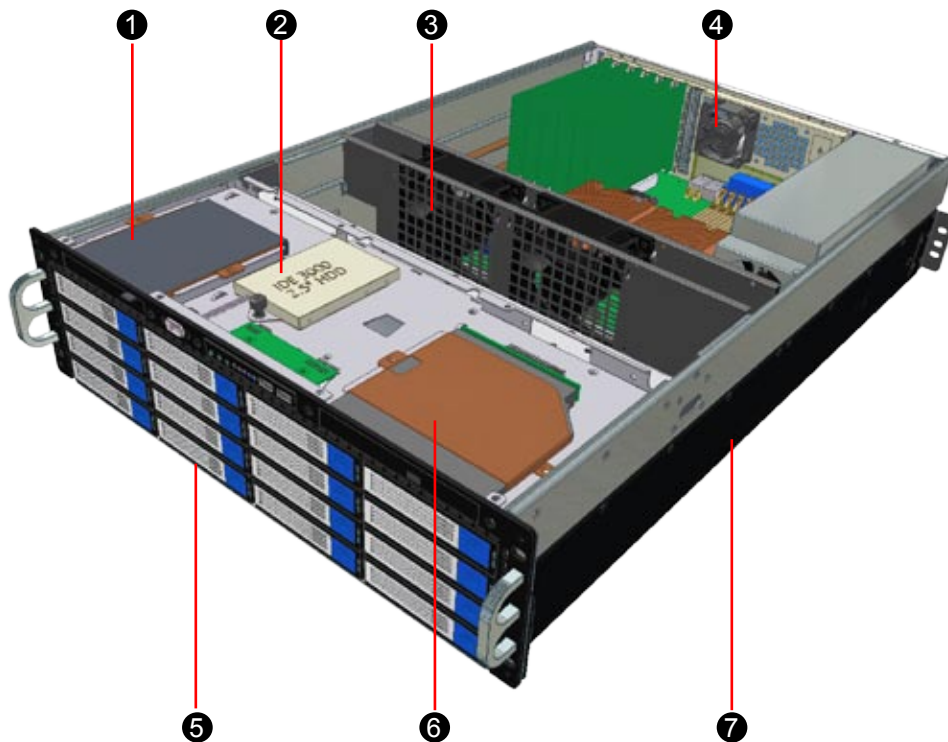


Figure 13 Front Opened View

- ① Slim Floppy Disk Drive
- ② 2.5" Hard Disk Drive
- ③ Hot Swap Fan Modular
- ④ Optional Rear Fan
- ⑤ Hard Disk Drive Tray
- ⑥ Slim CD/DVD-Rom
- ⑦ Rack Mount Slide Rail

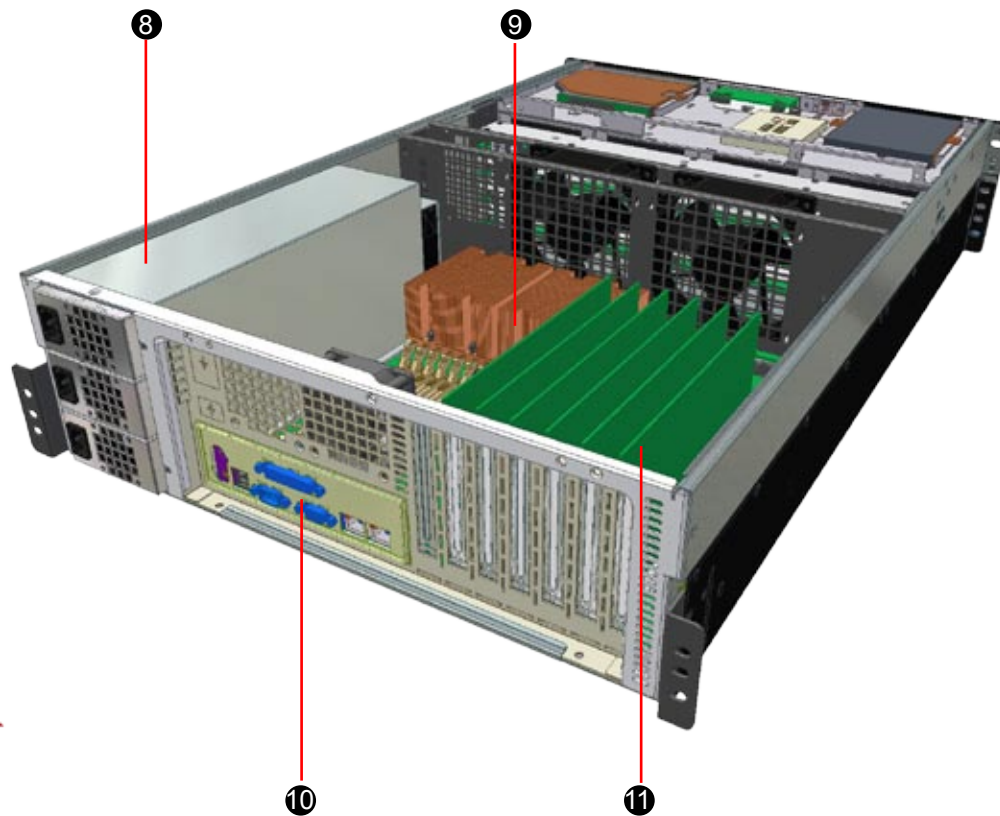


Figure 14 Rear Opened View

- ⑧ Power Supply Modular
- ⑨ Server Board
- ⑩ Rear I/O Shield
- ⑪ Add-in-cards

User Manual ESR 312, 316, 420, 424, 524, 528

Chapter 2. System Board and CableFeatures

2.1 Front Panel Board (order #16-0102-01A)

The Front Panel Board supports several push buttons and status LEDs, along with USB ports to centralize system control, monitoring, and accessibility to within a common compact design. Refer Section 1..3 for buttons and LEDs function. The following diagram overviews the board layout and pin assignments for connectivity.

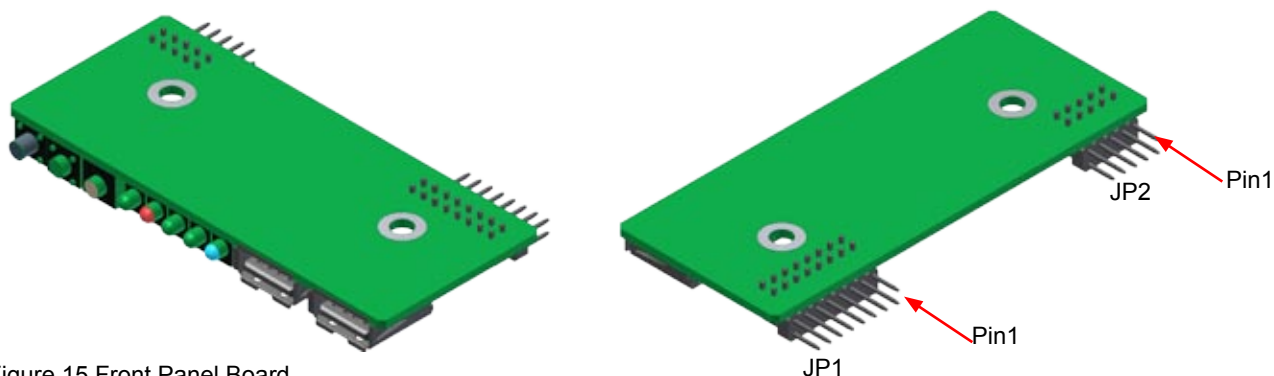


Figure 15 Front Panel Board

2.1.1 JP1 16-pin Front Panel Connector Header

The Front Panel connector header communicate between the System Power Board to provide signal command to the Front Panel Board through Front Panel Cable (order # 17-1002-01A) The pin assignment of the Front Panel Header (JP1) is presented in the table below.

Pin	Signal Name
1	Power Switch 1
2	Power Switch 2
3	System Reset Switch 1
4	System Reset Switch 2
5	Alarm Reset
6	Fail LED Negative (-)
7	Access LED Positive (+)
8	Access LED Negative (-)
9	LAN1 LED Negative (-)
10	LAN 1 LED Positive (+)
11	LAN 2 LED Negative (-)
12	LAN 2 LED Positive (+)
13	Ground
14	Ground
15	+5V
16	+5V

Table 4 16-pin Front Panel Header Pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.1.1.1 16 pin Front Panel cable (order # 17-1002-01A)



Figure 16 16-pin Front Panel cable

2.1.2 JP2 10-pin Front Panel USB Header

The Front Panel connector header communicate between the System Power Board to provide signal command to the Front Panel Board through Front Panel Cable (order # 17-1002-01A) The pin assignment of the Front Panel Header (JP1) is presented in the table below.

Name	Pin	Pin	Name
USB Port 2 Power	1	2	USB Port 1 Power
Port 2 Negative Signal	3	4	Port 1 Negative Signal
Port 2 Positive Signal	5	6	Port 1 Negative Signal
Gound	7	8	Gound
Key N/C	9	10	Overcurrent Signal N/C

Table 5 Front Panel USB header Pin assignment

2.1.2.1 10 pin Front Panel USB cable (order # 17-1006-01A)




Figure 17 10-pin USB cable

Name	Pin	Pin	Name
USB Port 2 Power	1	2	USB Port 1 Power
Port 2 Negative Signal	3	4	Port 1 Negative Signal
Port 2 Positive Signal	5	6	Port 1 Negative Signal
Gound	7	8	Gound
Empty	9	10	Empty

Table 6 Front panel USB cable pin assignment

NOTE: There is no KEY on pin 9 of the USB cable because some server board USB headers were KEY on pin 10.

User Manual ESR 312, 316, 420, 424, 524, 528

2.2 System Power Board (order # 16-0101-01A)

The power system of the ESR-series chassis consists of an intergrated power share board which consolidate all power cable to support backplane and hot-swappable system fans. The System Power Board embedded with system management senors such as fan failed signal, power failed signal and over temperature signal. Failed signal react with beeper warning and LED blinking on the front panel board. Failed signal can feedback to Server board IPMI server management through I2C connection. All data cable is consolidated on the one side of the chasis while or power cable are located on the other side to avoid interference to the data performance.

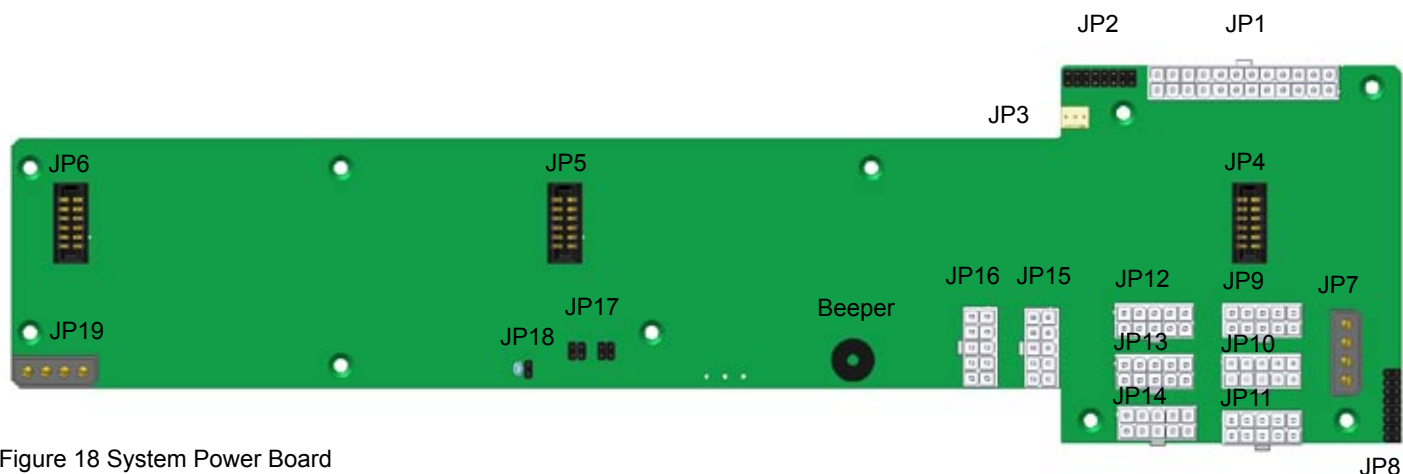


Figure 18 System Power Board

2.2.1 JP1 24-pin Power Supply to System Board Header

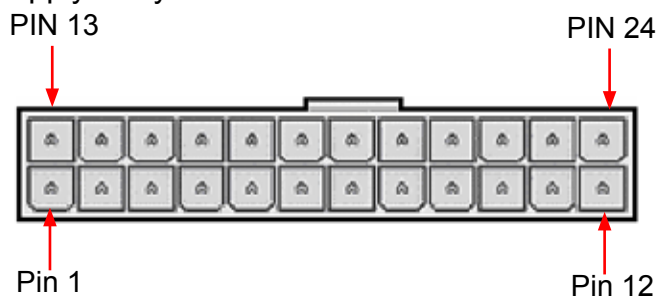


Figure 19 24-pin system board header

Name	Pin	Pin	Name
+5V	1	2	+5V
+5V	3	4	+5V
+5V	5	6	+5V
+5V	7	8	+5V
GND	9	10	GND
GND	11	12	GND
GND	13	14	+12V
+12V	15	16	+12V
+12V	17	18	+12V
GND	19	20	COM
SCL	21	22	SDA
TTL	23	24	Reset

Table 7 24-pin Peripheral Power (JP7 and JP19) Pin

User Manual ESR 312, 316, 420, 424, 524, 528

2.2.2 JP2 16-pin Front Panel to Server Board and System Fan Feedback Header

The Front Panel connector header communicate between the System Power Board and the server board to provide signal command through Front Panel I/O Cable (order # 17-1014-01A)

The system fan feedback header supports for several management features that can be utilized by the server board management system if available through the PWN fan signal cable (order #17- 1015-01A)



Figure 20 16-pin front panel connector

Name	Pin	Pin	Name
Fan 1 PWN-OUT	1	2	Fan 1 TACH-OUT
Fan 2 PWN-OUT	3	4	Fan 2 TACH-OUT
Power SW 1	5	6	Power SW 2
Reset SW 1	7	8	Reset SW 2
HDD LED +	9	10	HDD LED -
LAN 1 LED +	11	12	LAN 1 LED -
LAN 2 LED +	13	14	LAN 2 LED -
SDA	15	16	SCL

Table 8 16-pin front panel I/O pin assignment (system board)

2.2.2.1 Front Panel I/O Cable (order # 17-1014-01A)

J2 to J7 connect to the server board front panel head with PIN 1 of J1 to PIN 5 of JP2 on the 16 pin of section 2.2.2 Refer to your server board manual to connection instruction

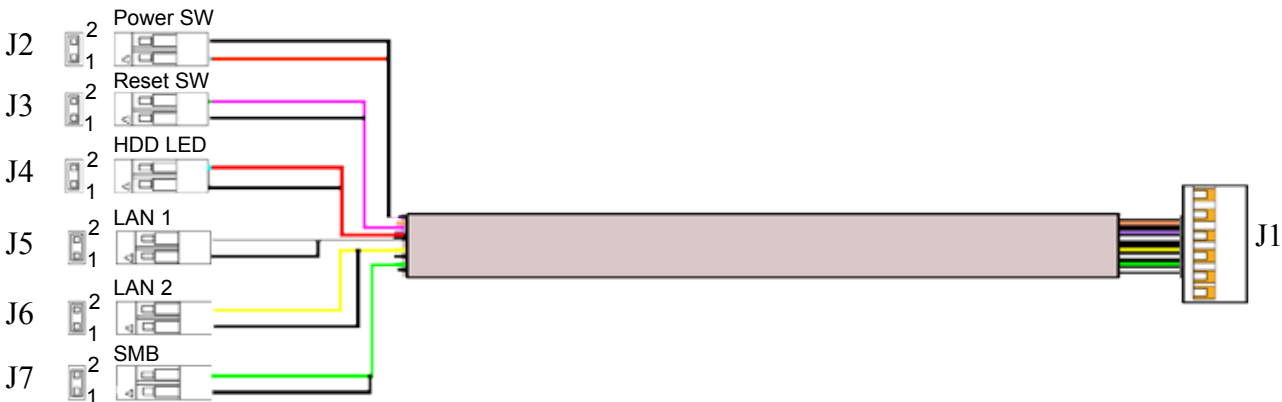


Figure 21 Front Panel I/O cable (order # 17-1014-01A)

User Manual ESR 312, 316, 420, 424, 524, 528

Pin	Color	Signal Name
J2-1	Black	Power Switch 1
J2-2	Orange	Power Switch 2
J3-1	Black	Reset Switch 1
J3-2	Violet	Reset Switch 2
J4-1	Black	HDD LED Positive (+)
J4-2	Red	HDD LED Negative (-)
J5-1	Black	LAN 1 LED Positive (+)
J5-2	Gray	LAN 1 LED Negative (-)
J6-1	Black	LAN 2 LED Positive (+)
J6-2	Yellow	LAN 1 LED Negative (-)
J7-1	Black	SDA
J7-2	Green	SCL

Table 9 Front Panel I/O cable Pin assign-

2.2.2.2 PWN Fan signal cable (order # 17-1015-01A)

J2 to J3 connect to the server board 4 pin PWM fan header or 3 pin regular fan header. PIN 1 of J1 connect to PIN 1 of the JP2 16-pin Front Panel to Server Board and System Fan Feed-back Header on section 2.2.2

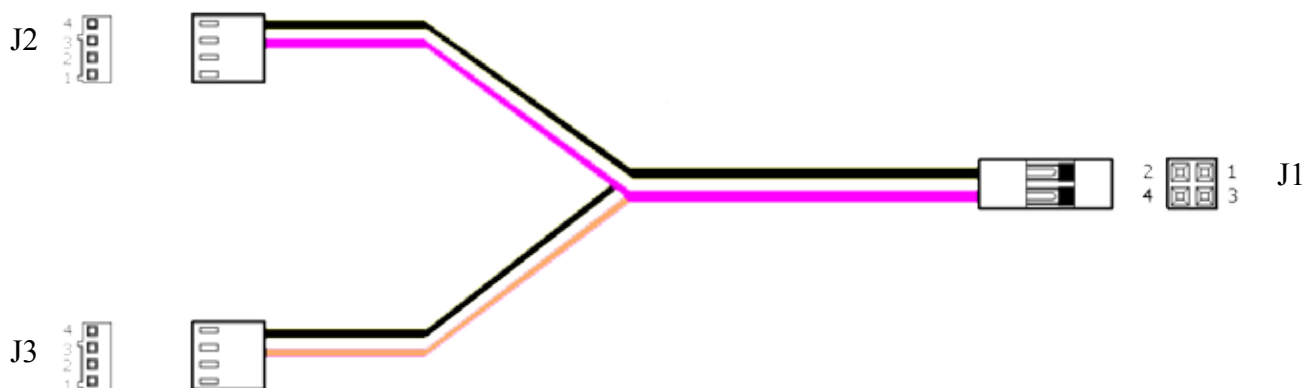


Figure 22 PWM fan signal cable

Pin	Signal Name
1	Not Use
2	Not Use
3	Fan Tach out Signal
4	Fan PWM out Signal

Table 10 PWN Fan signal cable Pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.2.3 JP3 3-pin Fan Header

The System Power board provide an additional SSI compliant 3-pin fan connector.

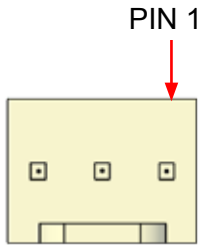


Figure 23 3-pin fan header

Pin	Name
1	Fan Tach
2	12V
3	Ground

Table 11 3-pin fan header pin assignment

2.2.4 JP4 -JP6 12-pin Hot-Swap Fan Header

JP4-JP6 connect to the hot-swap system fans

2.2.5 JP7 and JP19 4-pin Power Header

JP7 4-pin Power Header is connected to the Slim Power Board (Section 2.8)

JP19 4-pin Power Header is used to connected to high power add-in-card (such as graphic card require additional power



Figure 24 4-pin power header

Pin	Signal Name
1	+ 12V
2	Ground (COM)
3	Ground (COM)
4	+ 5V

Table 12 4-pin power header pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.2.5.1 4pin power cable (order #17-1007-XXX)

The 4-pin power cable (order #17-1007-01A) is connected from the system power bioard to the slim power board (section 2.8) Power cable (order #17-1007-02A) is connected from the system power board to the high power add-in-card. Refer the table below for cable length and order imformation.



Figure 25 4-pin power cable

Cable Order #	cable length	Instruction
17-1007-00A	8 inches	Connect to slim power board (section 2.8)
17-1007-01A	20 inches	Connect to high power add-in-card

Table 13 4-pin power cable list

2.2.6 &JP8 16-pin Front Panel Board connector header

The Front Panel connector header communicate between the System Power Board to provide signal command to the Front Panel Board through Front Panel Cable, refer to section 2.1 ,(order # 17-1002-01A) The pin assignment of the Front Panel Header (JP1) is presented in the table below.

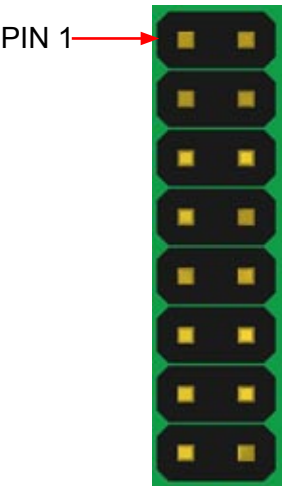


Figure 26 16-pin system board to front panel I/O header

User Manual ESR 312, 316, 420, 424, 524, 528

Pin	Signal Name
1	Power Switch 1
2	Power Switch 2
3	System Reset Switch 1
4	System Reset Switch 2
5	Alarm Reset
6	Fail LED Negative (-)
7	Access LED Positive (+)
8	Access LED Negative (-)
9	LAN1 LED Negative (-)
10	LAN 1 LED Positive (+)
11	LAN 2 LED Negative (-)
12	LAN 2 LED Positive (+)
13	Ground
14	Ground
15	+5V
16	+5V

Table 14 16-pin Front Panel Header pin assignment (system power board)

2.2.7 JP9-JP16 10-pin power out headers

The 10-pin power out headers are connected to the backplane board to provide power to hard disk drives. The pin assignment of the 10-pin power header is presented in the table below.

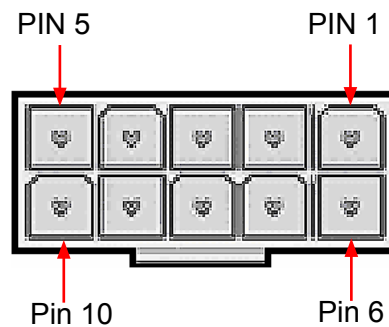


Figure 27 10-pin system power board to backplane header

Name	Pin	Pin	Name
+ 5V	1	2	Fan 1 TACH-OUT
Fan 2 PWN-OUT	3	4	Fan 2 TACH-OUT
Power SW 1	5	6	Power SW 2
Reset SW 1	7	8	Reset SW 2
HDD LED +	9	10	HDD LED -

Table 15 10-pin power connector header pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.2.7.1 10-pin power cable (order#17-1010-XXX)

Connect JP9-JP16 to backplane board 10-pin header to provide DC power to the backplane board. The following table defines the cable length and order number



Figure 28 10-pin power cable

Cable Order #	cable length	Instruction
17-1010-01A	2.5 inches	ESR 316 to ESR 524 require 1
17-1010-02A	3.5 inches	ESR 316 require 1, ESR420 - ESR 524 require 2
17-1010-03A	4.75 inches	ESR-316 to ESR 420 require 1, ESR 524 requires 2
17-1010-04A	6 inches	ESR 316 to ESR 524 require 1

Table 16 10-pin power cable list

2.2.8 Beeper

The beeper provides warning signals and is itemized in the following table

Beep	Reason	Reaction
Short	Fan failed	Replace the system fan (section 3.9)
Long	Over Temperature	check computer room ambient temperature
Continue	Power Supply failed	Replace power supply modular

Table 17 System power board warning



Do not exceed the operation ambient temperature of the ESR-series chassis, which is 95 degrees F (35 degrees C)

User Manual ESR 312, 316, 420, 424, 524, 528

2.2.9 Two 4-pin Thermocouple Threshold Jumper Headers

These jumpers define the thermocouple threshold setting, if the temperature feedback from the thermocouple exceed the threshold setting, the beeper will alarm and the fan failed LED on the front panel will turn on.

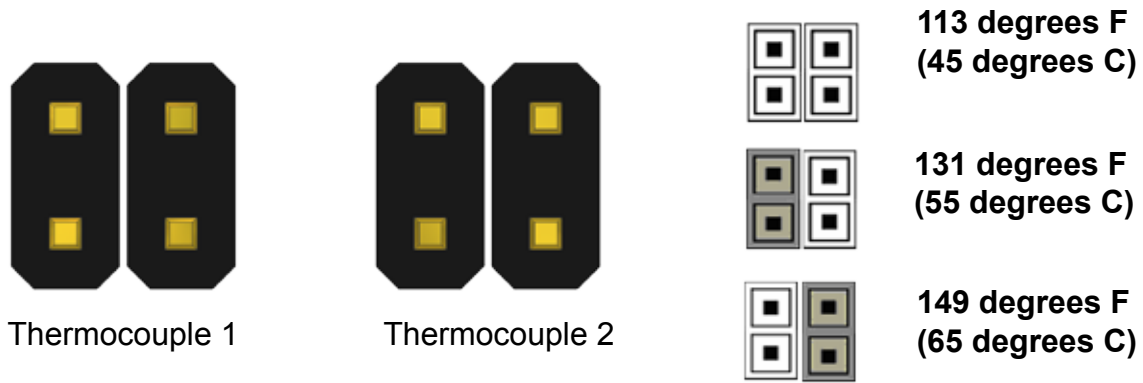


Figure 29 thermocouple threshod jumper header

2.2.10 Thermocouple Header

There is one Thermocouple embedded on the system power board (Thermocouple 1) to monitor the system temperature, The system allow one extra K-Type thermocouple to monitor the system hot point

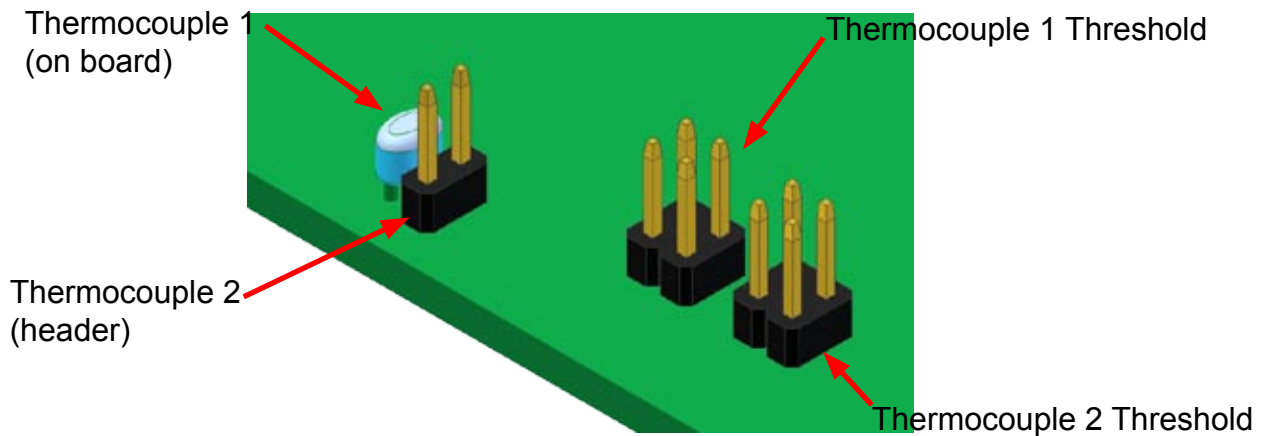


Figure 30 Thermocouple header

2.2.10.1 K-Type Thermocouple (order# 17-1020-01A)

Connect the 2 Pin cable thermocouple to the thermocouple 2 header. PIN 1 is labled with a triangle mark



Figure 31 2-pin thermocouple with cable

User Manual ESR 312, 316, 420, 424, 524, 528

2.3 Serial ATA Backplane Board (order # 16-0121-01A)

Serial ATA backplane board supports four hot-swap Serial ATA or Serial Attached SCSI hard disk drive. The following diagram overviews the board layout and pin assignments for connectivity.

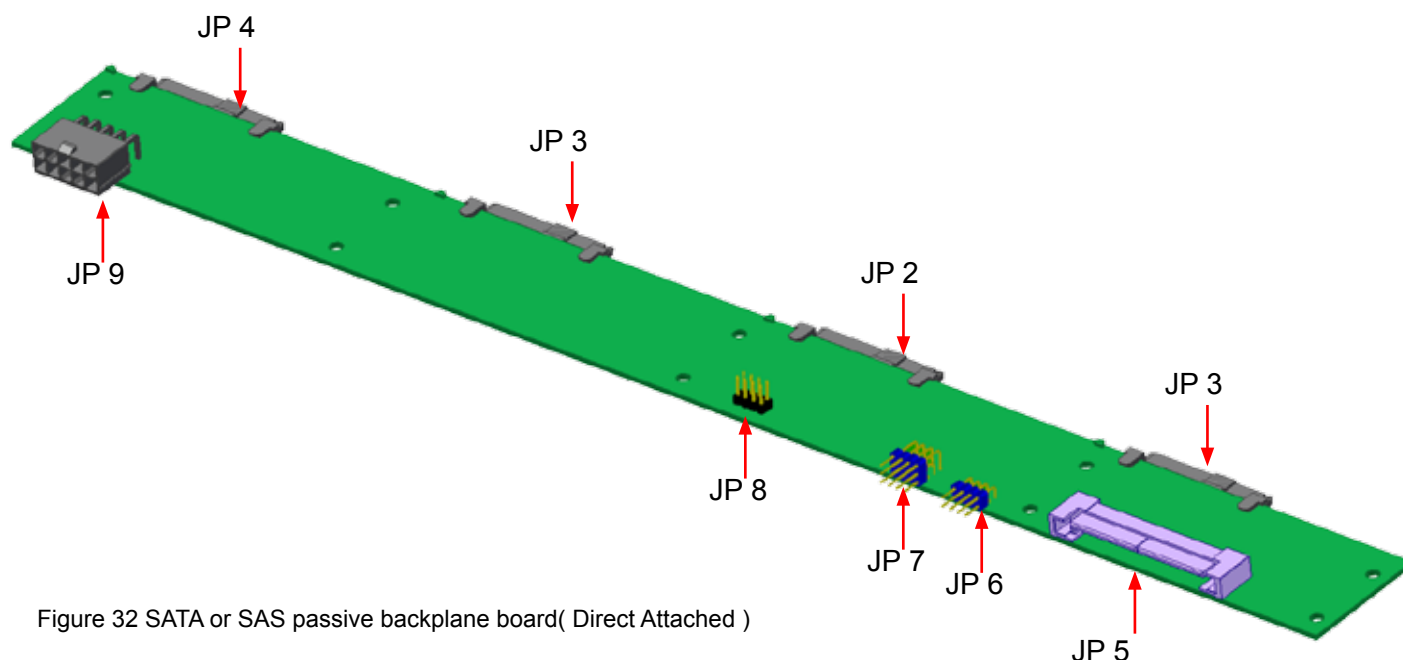


Figure 32 SATA or SAS passive backplane board(Direct Attached)

2.3.1 JP1 to JP4 22-pin Serial ATA Connector Header

JP1 to JP4 connect the backplane to the Serial ATA hard disk drive, backplane revision 3 pin assignment is shown on the table below

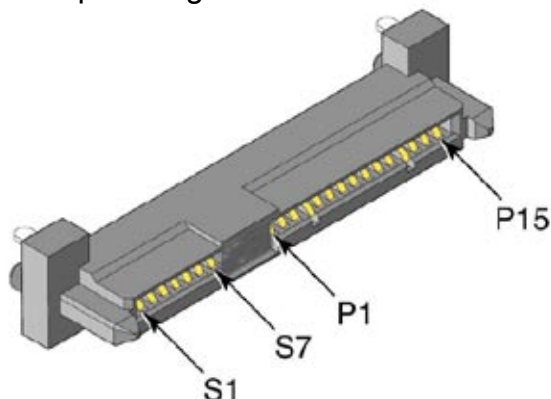


Figure 33 22 pin Serial ATA connector header

Pin	Signal Name
S1	Ground
S2	DRV TX Positive
S3	DRV TX Negative
S4	Ground
S5	DRV RX Negative
S6	DRV RX Positive
S7	Ground

Pin	Signal Name
P1	+ 3.3V
P2	+ 3.3V
P3	+ 3.3V
P4	Ground
P5	Ground
P6	Ground
P7	+ 5V
P8	+ 5V
P9	+ 5V
P10	Ground
P11	See Note Below
P12	Ground
P13	+12V
P14	+12V
P15	+12V

Table 18 22-pin SATA signal segment pin assignment



NOTE: Pin 11 on the 22 pin connector power segment will receive drive activity signal directly from the hard disk drive. Refer section 2.3.4 for jumper setting to enable or disable Pin 11 function. The default setting is disable

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.1 JP1 to JP4 29-pin Serial ATA Connector Header

JP1 to JP4 with Serial Attached SCSI, backplane revision 2 pin assignment is shown on the table below

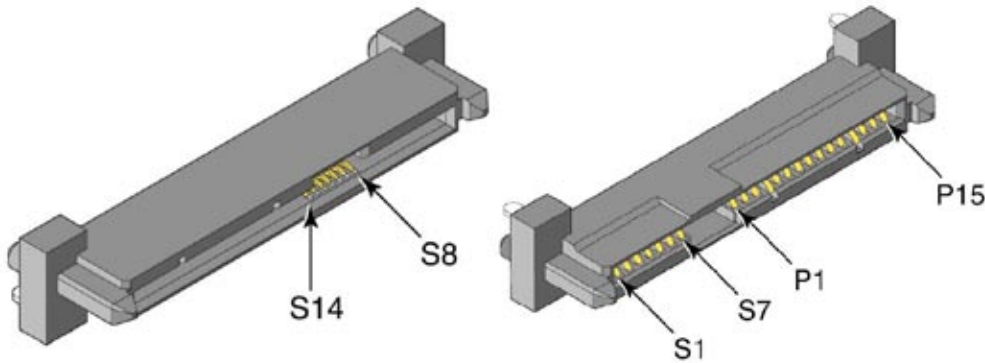


Figure 34 29 pin Serial ATA connector header

Pin	Signal Name
S1	Ground
S2	DRV TX Positive
S3	DRV TX Negative
S4	Ground
S5	DRV RX Negative
S6	DRV RX Positive
S7	Ground

Pin	Signal Name
S8	n/a
S9	n/a
S10	n/a
S11	n/a
S12	n/a
S13	n/a
S14	n/a

Pin	Signal Name
P1	+ 3.3V
P2	+ 3.3V
P3	+ 3.3V
P4	Ground
P5	Ground
P6	Ground
P7	+ 5V
P8	+ 5V
P9	+ 5V
P10	Ground
P11	See Note Below
P12	Ground
P13	+12V
P14	+12V
P15	+12V

Table 19 29-pin SAS signal segment pin assignment



NOTE: This configuration is a temporary solution for Serial Attached SCSI Hard Disk drive, it won't support host redundant and drive activity LEDs

2.3.2 JP5 32-pin Serial Attached SCSI Connector Header

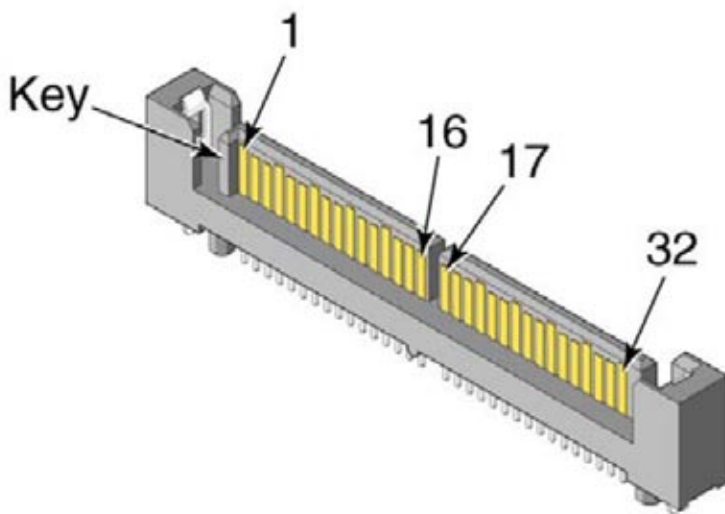


Figure 35 32 pin SFF8484 SAS header (backplane)

Name	Pin	Pin	Name
GND	1	17	side band
HDD T3+	2	18	side band
HDD T3-	3	19	side band
GND	4	20	GND
HDD R3-	5	21	HDD T1+
HDD R3+	6	22	HDD T1-
GND	7	23	GND
HDD T2+	8	24	HDD R1-
HDD T2-	9	25	HDD R1+
GND	10	26	GND
HDD R2-	11	27	HDD T0+
HDD R2+	12	28	HDD T0-
GND	13	29	GND
side band	14	30	HDD R0-
side band	15	31	HDD R0+
side band	16	32	GND

Table 20 29 pin SAS power segment pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.2.1 Fan out Serial ATA cable (17-1031-01A)

The 7 pin Serial ATA cable is used to connect the Serial ATA backplane to the Serial ATA controller. The length of the cable is 24 inch. Each cable has a drive number marked on for easier cable management.

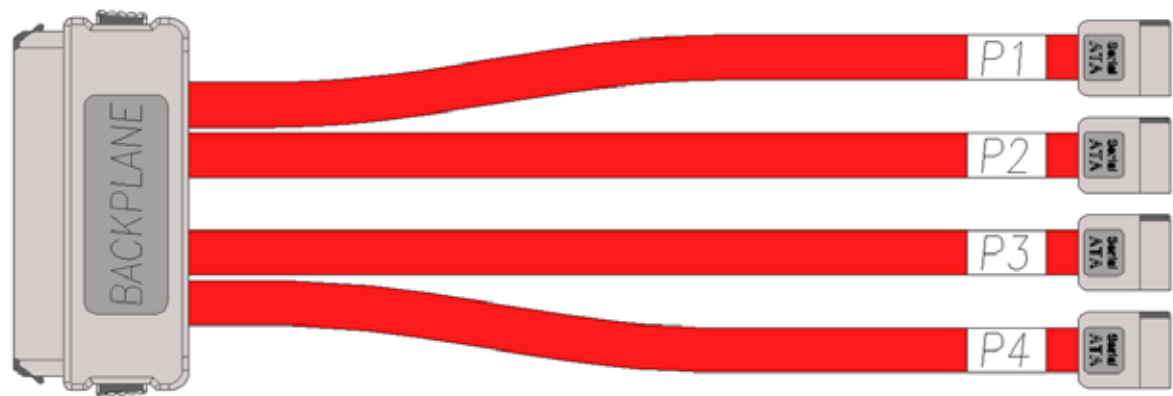


Figure 36 SFF8484 (32pin SAS) to PTP cable

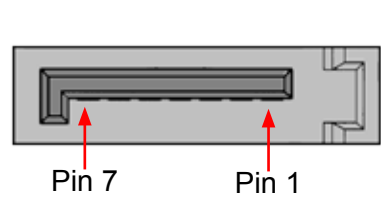


Figure 37 7-pin Serial ATA connector

Pin	Signal Name
1	Ground
2	DRV TX Positive
3	DRV TX Negative
4	Ground
5	DRV RX Negative
6	DRV RX Positive
7	Ground

Table 21 7 pin Serial ATA data header pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.2.1 Multilane Serial ATA cable (17-1032-01A)

The 7 pin Serial ATA cable is used to connect the Serial ATA backplane to the Serial ATA controller. The length of the cable is 24 inch. Each cable has a drive number marked on for easier cable management.



Figure 38 SFF8484 (32pin SAS) to SFF8470 multilane cable

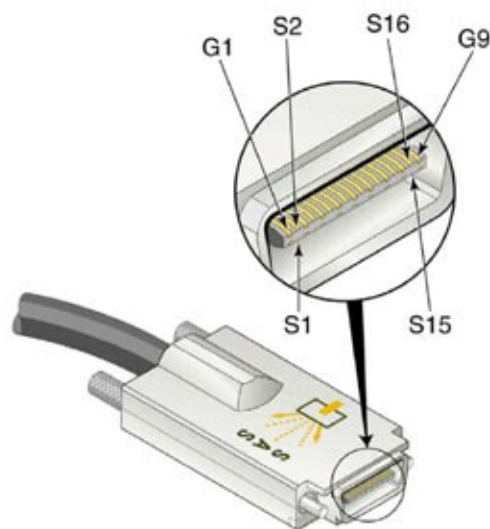


Figure 39 26-pin SFF8470 connector

Name	Pin
HDD R0+	S1
HDD R0-	S2
HDD R1+	S3
HDD R1-	S4
HDD R2+	S5
HDD R2-	S6
HDD R3+	S7
HDD R3-	S8
HDD T3-	S9
HDD T3+	S10
HDD T2-	S11
HDD T2+	S12
HDD T1-	S13
HDD T1+	S14
HDD T0-	S15
HDD T0+	S16
GOUND	G1 - G9

Table 22 28pin Multilane cable pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.2.2 SFF8484 internal 32pin SAS to SFF8484 internal 32pin SAS cable (17-1030-01A)



Figure 40 SFF8484 (32pin SAS) cable

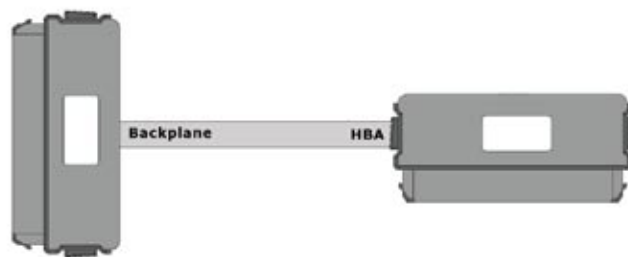


Figure 41 SFF8484 (32pin SAS) cable, 90 degree

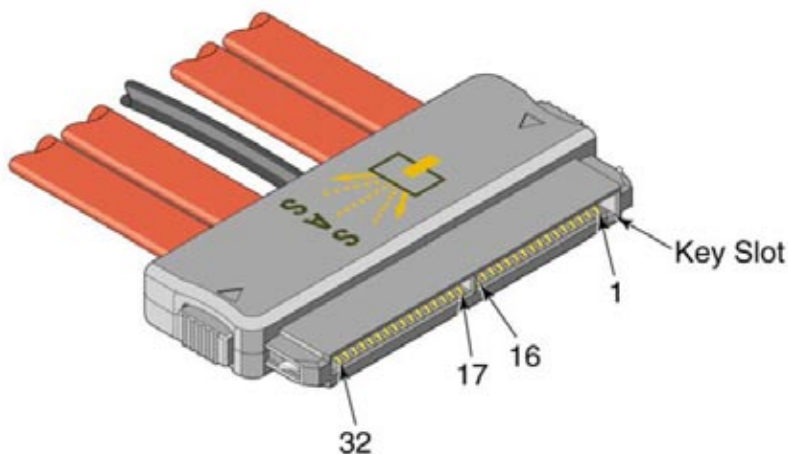


Figure 42 32 pin SFF8484 cable connector

Name	Pin	Pin	Name
GND	1	17	side band
HDD R0+	2	18	side band
HDD R0-	3	19	side band
GND	4	20	GND
HDD T0-	5	21	HDD R2+
HDD T0+	6	22	HDD R2-
GND	7	23	GND
HDD R1+	8	24	HDD T2-
HDD R1-	9	25	HDD T2+
GND	10	26	GND
HDD T1-	11	27	HDD R3+
HDD T1+	12	28	HDD R3-
GND	13	29	GND
side band	14	30	HDD T3-
side band	15	31	HDD T3+
side band	16	32	GND

Table 23 32 pin SFF8484 pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.2.2 SFF8484 internal 32pin SAS to SFF8087 miniSAS cable (17-1036-01A)

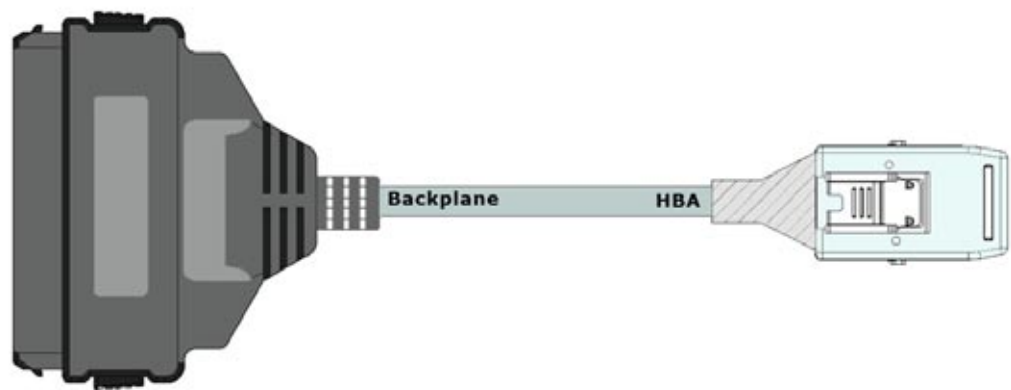


Figure 43 SFF8484 (32pin SAS) to SFF8087 (miniSAS) cable

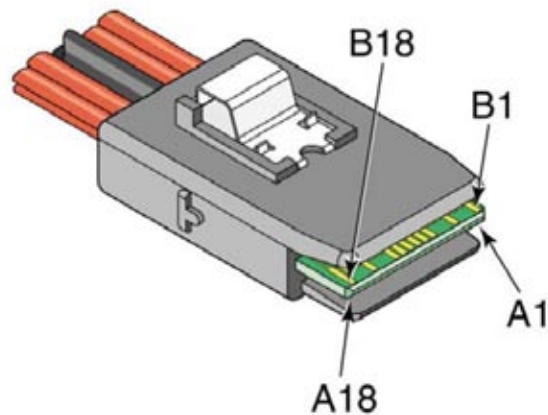


Figure 44 36 pin SFF8087 cable connector

Name	Pin
HDD R0+	A2
HDD R0-	A3
HDD R1+	A5
HDD R1-	A6
sideband 0	A8
sideband 1	A9
sideband 2	A10
sideband 6	A11
HDD R2+	A13
HDD R2-	A14
HDD R3+	A16
HDD R3-	A17
HDD T0+	B2
HDD T0-	B3
HDD T1+	B5
HDD T1-	B6
sideband 7	B8
sideband 3	B9
sideband 4	B10
sideband 5	B11
HDD T2+	B13
HDD T2-	B14
HDD T3+	B16
HDD T3-	B17
GND	A1, A4, A7, A12, A15, A18
GND	B1, B4, B7, B12, B15, B18

Table 24 36 pin SFF8087 pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.3 JP9 8-pin Serial ATA Activity and Failed signal header

Connect the upper 4 pin to the Serial ATA controller activity signal header and connect the lower 4 pin to Serial ATA controller failed signal header.

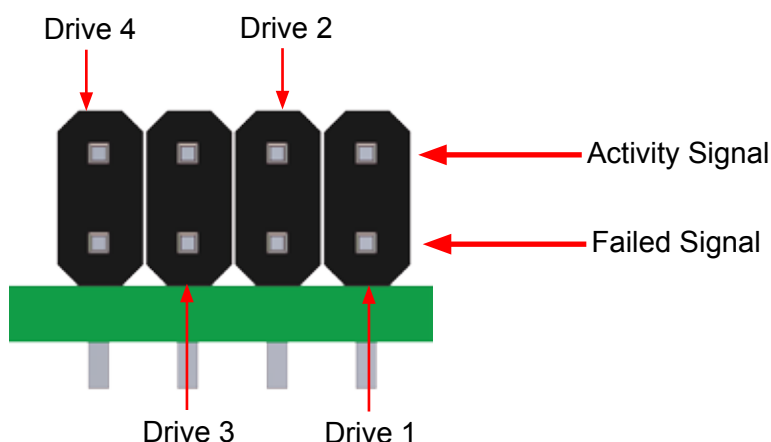


Figure 45 8-pin Serial ATA Hard drive status LED header

2.3.3.1 4-pin HDD status Cable (17-1023-XX)

The 4 pin HDD status activity cable that is connected from the 8-pin Serial ATA Activity and Failed signal header to the Serial ATA controller status LED header. Refer to your SATA controller documentation, Each cable has a drive number marked on for easier cable management. Refer the cable part number for markings.

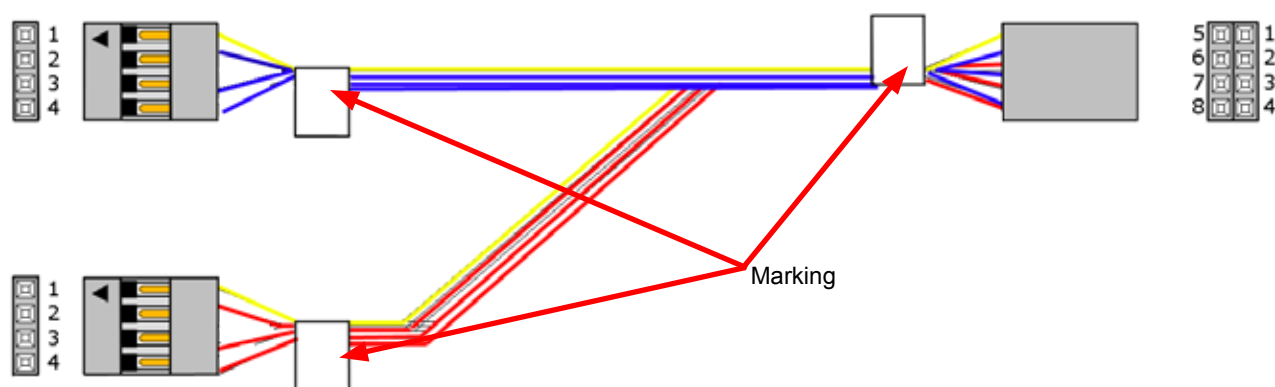


Figure 46 LED activity Cable 17-1023-XXX

Cable Order #	Markings	Instruction
17-1023-01A	HDD "0-3"	Connect to Drive 0-3 on the backplane
17-1023-02A	HDD "4-7"	Connect to Drive 4-7 on the backplane
17-1023-03A	HDD "8-11"	Connect to Drive 8-11 on the backplane

Table 25 Serial ATA HDD status signal cable list



NOTE: Hard drive that support Pin 11 activity signal include all Western Digital model, Maxtor DiamondMAX 10 , MaXLine III and MaXLine III+

User Manual ESR 312, 316, 420, 424, 524, 528

2.3.4 JP10 12-pin Hard Disk Status signal Jumper

The jumper set the hard disk drive status LED signal either from the Hard Disk Drive pin 11 or from the Serial ATA controller. Following the table below for jumper setting information. The default setting has jumper on 1-2 for signal from the Serial ATA controller.

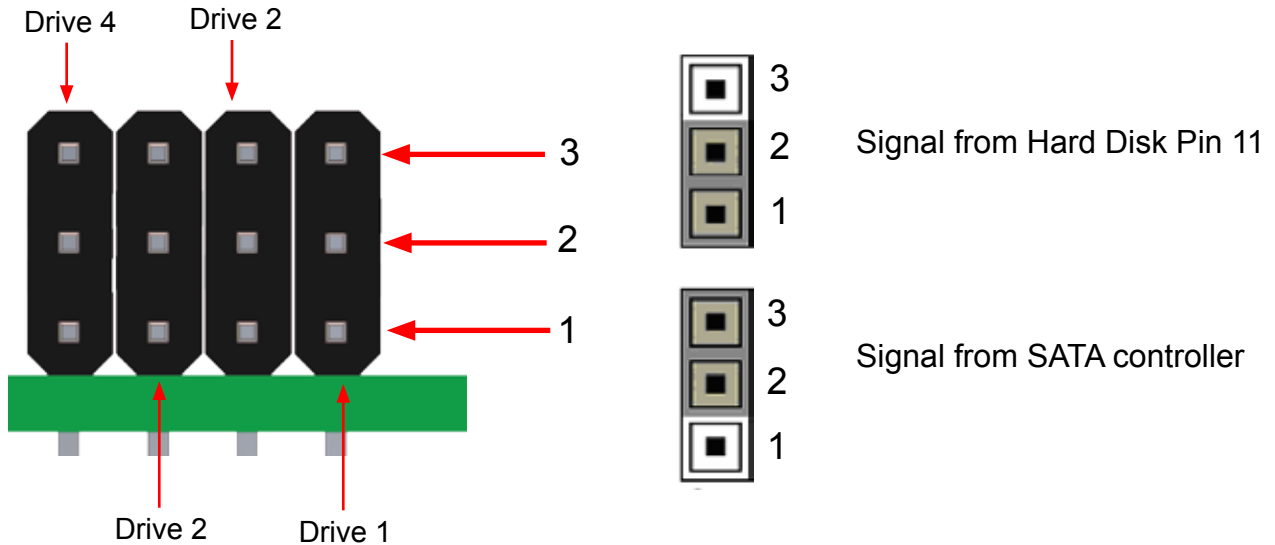


Figure 47 12-pin HDD status signal jumper



NOTE: Hard drive that support Pin 11 activity signal include all Western Digital model, Maxtor DiamondMAX 10 , MaXLine III and MaXLine III+

2.4.5 JP11 MOSFET setup header

JP11 is for MOSFET setup, no use for end-user.

2.4.6 JP12 10 pin power connector header

JP12 10-pin power connector is connected to the system power board to provide power to the Serial ATA backplane and hard disk drives.

User Manual ESR 312, 316, 420, 424, 524, 528

2.4 Wide Port Serial Attached SCSI Backplane Board (order # 16-0121-01A)

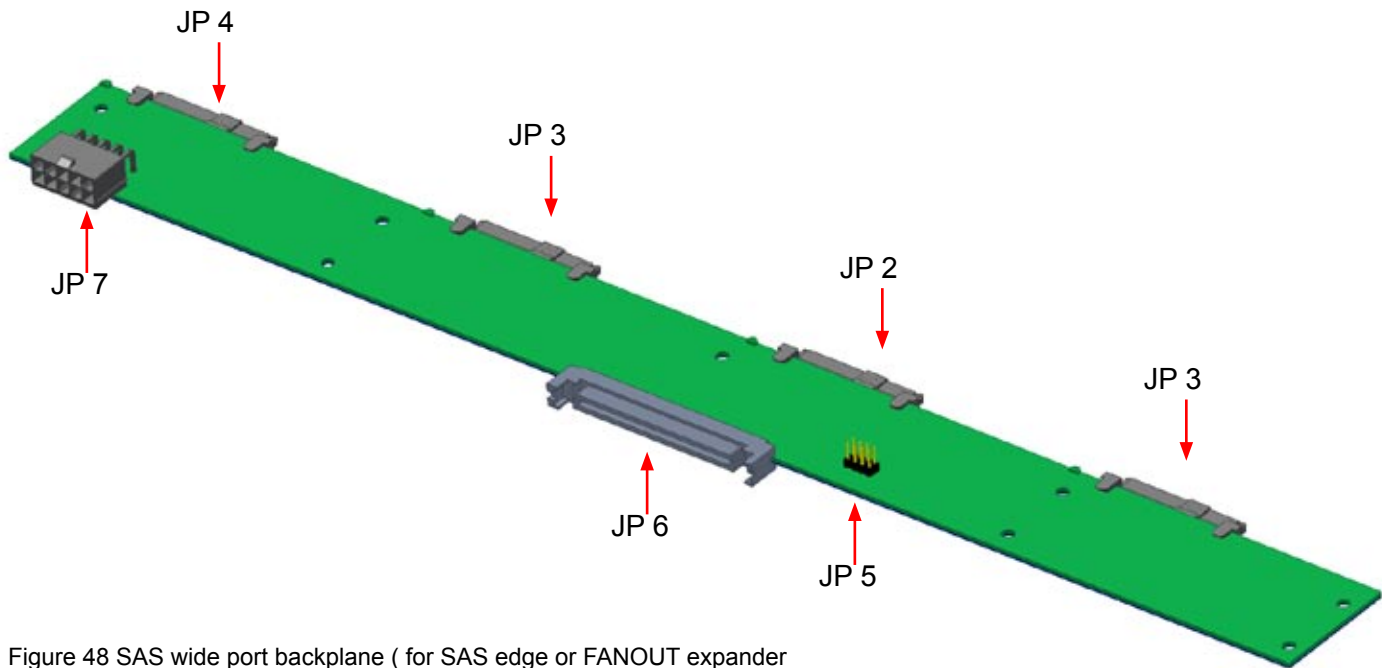


Figure 48 SAS wide port backplane (for SAS edge or FANOUT expander

2.4.1 JP1 to JP4 29-pin Serial ATA Connector Header

JP1 to JP4 with Serial Attached SCSI, backplane revision 2 pin assignment is shown on the table below

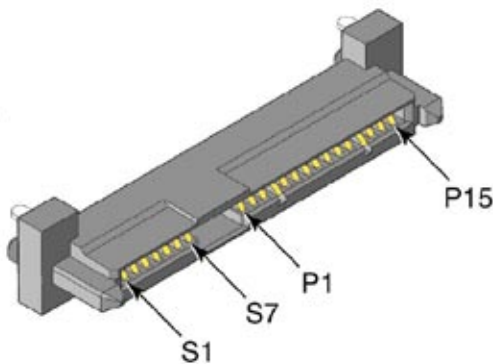


Figure 49 29 pin Serial ATA connector header

Pin	Signal Name
S1	Ground
S2	DRV TX-E Positive
S3	DRV TX-E Negative
S4	Ground
S5	DRV RX-E Negative
S6	DRV RX-E Positive
S7	Ground

Pin	Signal Name
S8	Ground
S9	DRV TX-F Positive
S10	DRV TX-F Negative
S11	Ground
S12	DRV RX-F Negative
S13	DRV RX-F Positive
S14	Ground

Pin	Signal Name
P1	+ 3.3V
P2	+ 3.3V
P3	+ 3.3V
P4	Ground
P5	Ground
P6	Ground
P7	+ 5V
P8	+ 5V
P9	+ 5V
P10	Ground
P11	See Note Below
P12	Ground
P13	+12V
P14	+12V
P15	+12V

Table 26 29-pin SAS signal segment pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.4.1 JP1 to JP4 80-pin SCA Connector Header

JP1 to JP4 connect the backplane to the SCSI hard disk drive, the pin assignment is shown on the table below

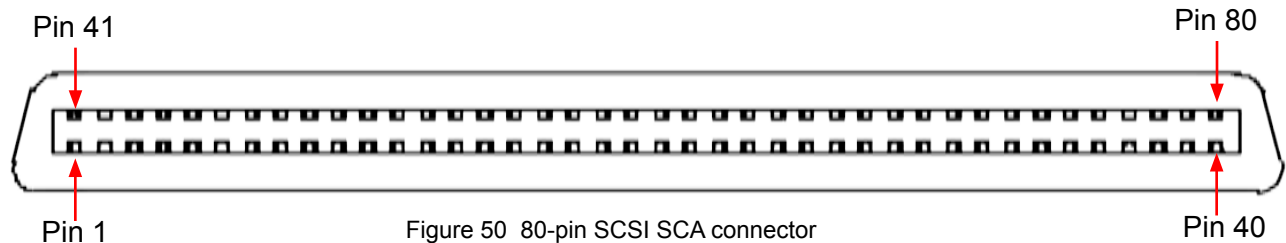


Figure 50 80-pin SCSI SCA connector

Name	Pin	Pin	Name
LED ACT 0	1	2	LED ACT 1
LED ACT 2	3	4	LED ACT 3
GND	5	6	GND
HDD 1 TX-E -	7	8	HDD 1 TX-E +
GND	9	10	HDD 1 RX-E -
HDD 1 RX-E +	11	12	GND
HDD 0 TX-E -	13	14	HDD 0 TX-E +
GND	15	16	HDD 0 RX-E -
HDD 0 RX-E +	17	18	GND
GND	19	20	HDD 0 RX-F -
HDD 0 RX-F +	21	22	GND
HDD 0 TX-F -	23	24	HDD 0 TX-F +
GND	25	26	HDD 1 RX-F -
HDD 1 RX-F +	27	28	GND
HDD 1 TX-F -	29	30	HDD 1 TX-F +
GND	31	32	GND
LED FAILURE 1	33	34	LED FAILURE 0
LED FAILURE 3	35	36	LED FAILURE 2
LED ACT 1	37	38	LED ACT 0
LED ACT 3	39	40	LED ACT 2

Name	Pin	Pin	Name
LED FAILURE 0	41	42	LED FAILURE 1
LED FAILURE 2	43	44	LED FAILURE 3
GND	45	46	GND
HDD 2 RX-E +	47	48	HDD 2 RX-E -
GND	49	50	HDD 2 TX-E +
HDD 2 TX-E -	51	52	GND
HDD 3 RX-E +	53	54	HDD 3 RX-E -
GND	55	56	HDD3 TX-E +
HDD 3 TX-E -	57	58	GND
GND	59	60	HDD 3 RX-F -
HDD 3 RX-F +	61	62	GND
HDD 3 TX -F -	63	64	HDD3 TX -F+
GND	65	66	HDD 2 RX-F -
HDD 2 RX-F +	67	68	GND
HDD 2 TX-F -	69	70	HDD 2 TX-F+
GND	71	72	GND
N/A	73	74	N/A
N/A	75	76	N/A
N/A	77	78	N/A
N/A	79	80	N/A

Table 27 80-pin SCA-SAS signal segment pin assignment

2.4.5 JP11 MOSFET setup header

JP11 is for MOSFET setup, no use for end-user.

2.4.6 JP12 10 pin power connector header

JP12 10-pin power connector is connected to the system power board to provide power to the Serial ATA backplane and hard disk drives.



NOTE: Please check with the user guide form the expander board for expander functions and instructions

User Manual ESR 312, 316, 420, 424, 524, 528

2.5 SCSI Backplane Board (order # 16-0108-01A)

SCSI blackplane board supports four hot-swap SCA SCSI hard disk drive. The following diagram overviews the board layout and pin assignments for connectivity.

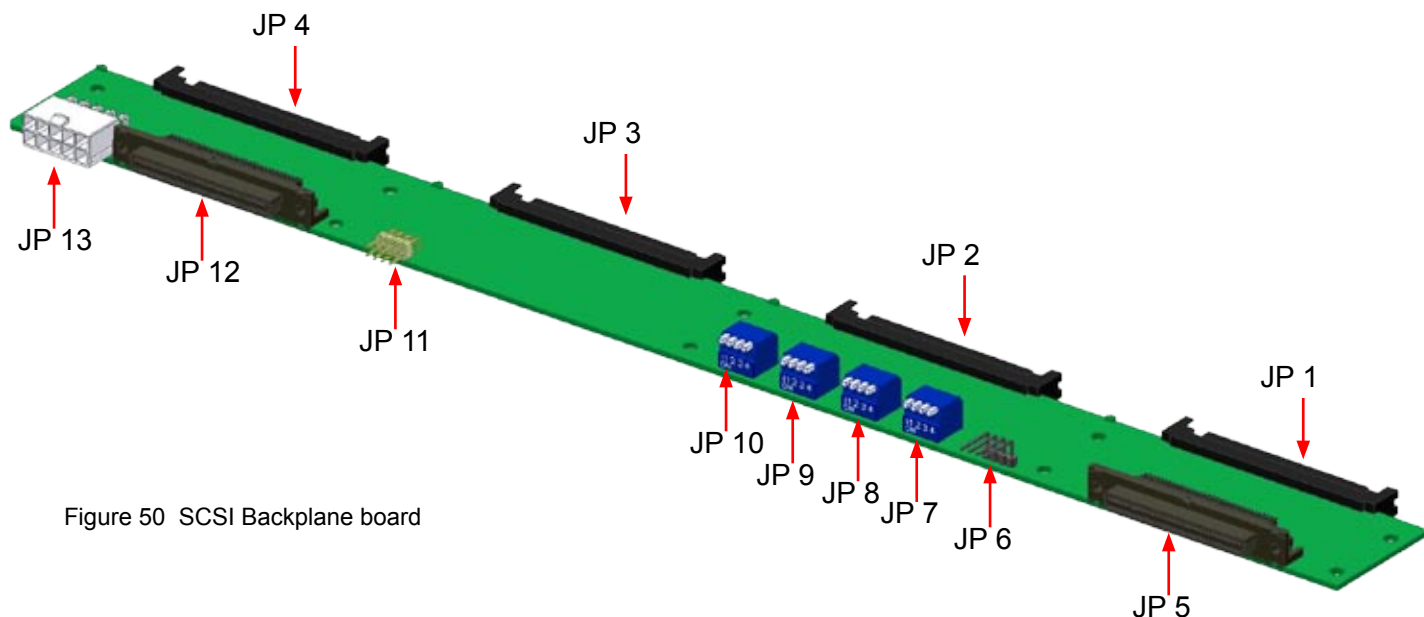


Figure 50 SCSI Backplane board

2.5.1 JP1 to JP4 80-pin SCA Connector Header

JP1 to JP4 connect the backplane to the SCSI hard disk drive, the pin assignment is shown on the table below

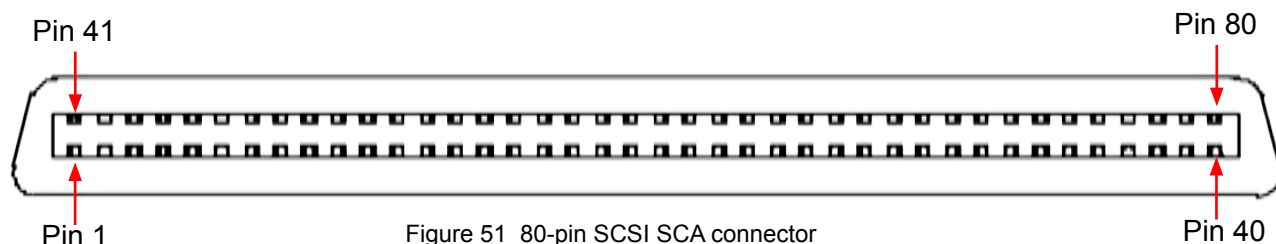


Figure 51 80-pin SCSI SCA connector

Name	Pin	Pin	Name
P12V	1	2	P12V
P12V	3	4	P12V
NC 3V 1	5	6	NC 3V 2
BP SCSI D11N	7	8	BP SCSI D10N
BP SCSI D9N	9	10	BP SCSI D8N
BP SCSI ION	11	12	BP SCSI REQN
BP SCSI CDN	13	14	BP SCSI SELN
BP SCSI MSGN	15	16	BP SCSI RSTN
BP SCSI ACKN	17	18	BP SCSI BSYN
BP SCSI ATNN	19	20	BP SCSI DP0N
BP SCSI D7N	21	22	BP SCSI D6N
BP SCSI D5N	23	24	BP SCSI D4N
BP SCSI D3N	25	26	BP SCSI D2N
BP SCSI D1N	27	28	BP SCSI D0N
BP SCSI DP1N	29	30	BP SCSI DP15N

User Manual ESR 312, 316, 420, 424, 524, 528

Name	Pin	Pin	Name
BP SCSI D14N	31	32	BP SCSI D13N
BP SCSI D12N	33	34	P5V
P5V	35	36	P5V
Unsed	37	38	GND
Unsed	39	40	Unsed
GND	41	42	GND
GND	43	44	SCSI MATED
NC 3V CHG	45	46	BP SCSI DIFSNS
BP SCSI D11P	47	48	BP SCSI D10P
BP SCSI D9P	49	50	BP SCSI D8P
BP SCSI IOP	51	52	BP SCSI REQ P
BP SCSI CDP	53	54	BP SCSI SELP
BP SCSI MSGP	55	56	BP SCSI RSTP
BP SCSI ACKP	57	58	BP SCSI BSYP
BP SCSI ATNP	59	60	BP SCSI DP0P
BP SCSI D7P	61	62	BP SCSI D6P
BP SCSI D5P	63	64	BP SCSI D4P
BP SCSI D3P	65	66	BP SCSI D2P
BP SCSI D1P	67	68	BP SCSI D0P
BP SCSI DP1P	69	70	BP SCSI D15P
BP SCSI D14P	71	72	BP SCSI D13P
BP SCSI D12P	73	74	SCSI MATED
GND	75	76	GND
HD ACT LED L	77	78	Unused
Unused	79	80	Unused

Table 28 80-pin SCSI SCA connector pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.5.2 JP5 and JP12 HD68 Connector Header

JP5 or JP12 is 68 pin SCSI connector. Either one of the connector is used to interface the SCSI backplane with either on-board SCSI channel of the system board or and add-in SCSI controller. The other connector is used to for termination or daisy chain with another SCSI backplane board

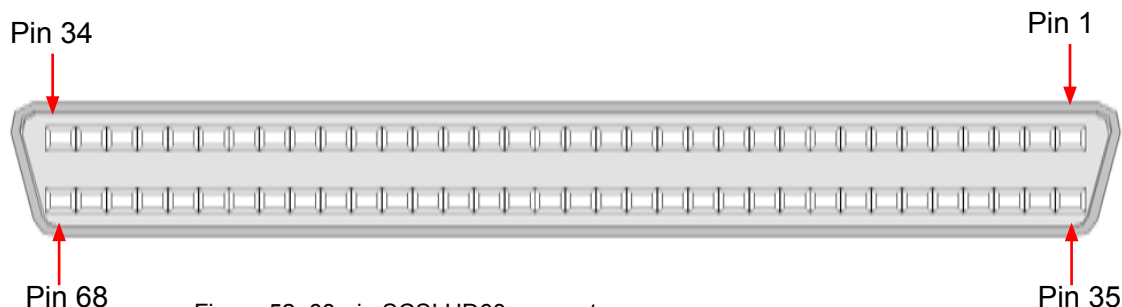


Figure 52 68-pin SCSI HD68 connector

Name	Pin	Pin	Name
BP SCSI D12P	1	2	BP SCSI D12N
BP SCSI D13P	3	4	BP SCSI D13N
BP SCSI D14P	5	6	BP SCSI D14N
BP SCSI D15P	7	8	BP SCSI D15N
BP SCSI DP1P	9	10	BP SCSI DP1N
BP SCSI D0P	11	12	BP SCSI D0N
BP SCSI D1P	13	14	BP SCSI D1N
BP SCSI D2P	15	16	BP SCSI D2N
BP SCSI D3P	17	18	BP SCSI D3N
BP SCSI D4P	19	20	BP SCSI D4N
BP SCSI D5P	21	22	BP SCSI D5N
BP SCSI D6P	23	24	BP SCSI D6N
BP SCSI D7P	25	26	BP SCSI D7N
BP SCSI DP0P	27	28	BP SCSI DP0N
GND	29	30	GND
BP SCSI DIFSNS	31	32	GND
TERMI PWR	33	34	TERMI PWR
TERMI PWR	35	36	TERMI PWR
Unused	37	38	Unused
GND	39	40	GND
BP SCSI ATNP	41	42	BP SCSI ATNN
GND	43	44	GND
BP SCSI BSYP	45	46	BP SCSI BSYN
BP SCSI ACYP	47	48	BP SCSI ACKN
BP SCSI RSTP	49	50	BP SCSI BSTN
BP SCSI MSGP	51	52	BP SCSI MSGN
BP SCSI SELP	53	54	BP SCSI SELN
BP SCSI CDP	55	56	BP SCSI CDN
BP SCSI REQ P	57	58	BP SCSI REQ N
BP SCSI IOP	59	60	BP SCSI ION
BP SCSI D8P	61	62	BP SCSI D8N
BP SCSI D9P	63	64	BP SCSI D9N
BP SCSI D10P	65	66	BP SCSI D10N
BP SCSI D11P	67	68	BP SCSI D11N

Table 29 68-pin SCSI HD68 connector pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.5.2.1 HD-68 SCSI Cable from backplane to host (order# 17-1016-01A)

The HD-68 pin cable is used to connect the SCSI backplane to the SCSI controller. The length of the HD-68 pin cable is 21.5 inch



Figure 53 HD68 SCSI cable



NOTE: Use the cable provide by TST USA only, the cable length is designed to rprevent reflection resonance

2.5.2.2 HD-68 SCSI LVD320/SE Terminator (order# 16-0117-01A)

The LVD320/SE terminator is connected to the HD68 connector header of the SCSI backplane, it is used to avoid reflections from the ends of the SCSI bus. If the SCSI bus is not terminated, the signal pulses will reflect off these the open end and travel back along the bus in the other direction, which results in adding and cancelling of signal amplitudes that will distort and corrupt the SCSI singal.

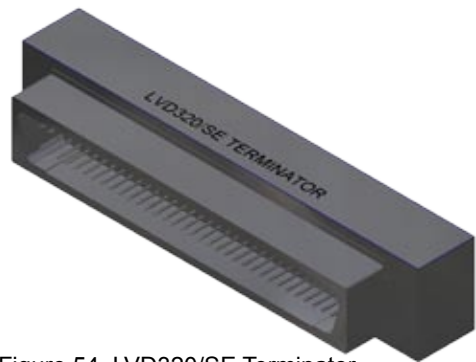


Figure 54 LVD320/SE Terminator



NOTE: Make sure the SCSI ID number are not duplicate in the SCSI channel

2.5.3 JP6 Drive failed LED Header

JP6 connect to the SCSI controller through a 4 pin cable to report SCSI hard disk drvie failed. It is connected with LED signal cable same as the cable listed in Table 26

Name	Pin	Pin	Name
Drive 1 failed signal	1	2	Drive 2 failed signal
Drive 3 failed signal	3	4	Drive 4 failed signal

Table 30 SCSI drive failed signal pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.5.4 JP7 - JP10 Drive failed LED Header

JP7 to JP10 are piano switch to select the Drive SCSI ID, refer the following table to set the SCSI ID of the SCSI backplane

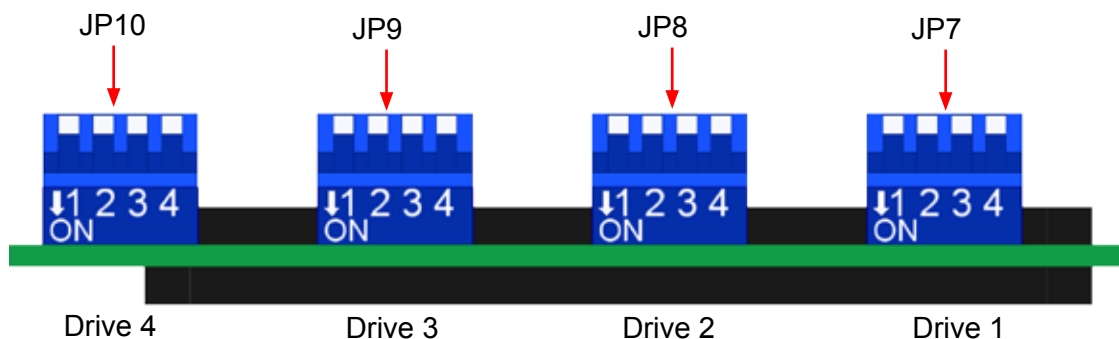


Figure 55 SCSI ID switch

SCSI ID	Piano Switch 1	Piano Switch 2	Piano Switch 3	Piano Switch 4
0	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON

Table 31 SCSI ID settings



NOTE: Avoid setting SCSI ID 7 for SCSI Hard Disk Drive because most of the HBA default ID is set to ID 7



NOTE: Make sure the SCSI ID number are not duplicate in the SCSI channel

2.5.5 JP11 MOSFET setup header

JP11 is for MOSFET setup, no use for end-user.

2.5.6 JP12 10 pin power connector header

JP12 10-pin power connector is connected to the system power board to provide power to the SCSI backplane and hard disk drives.

User Manual ESR 312, 316, 420, 424, 524, 528

2.6 Daisy Chain the SCSI backplanes

You can daisy chain the SCSI backplanes by connecting the 68-pin connector as shown with the SCSI daisy chain cable (order# 17-1016-02A)

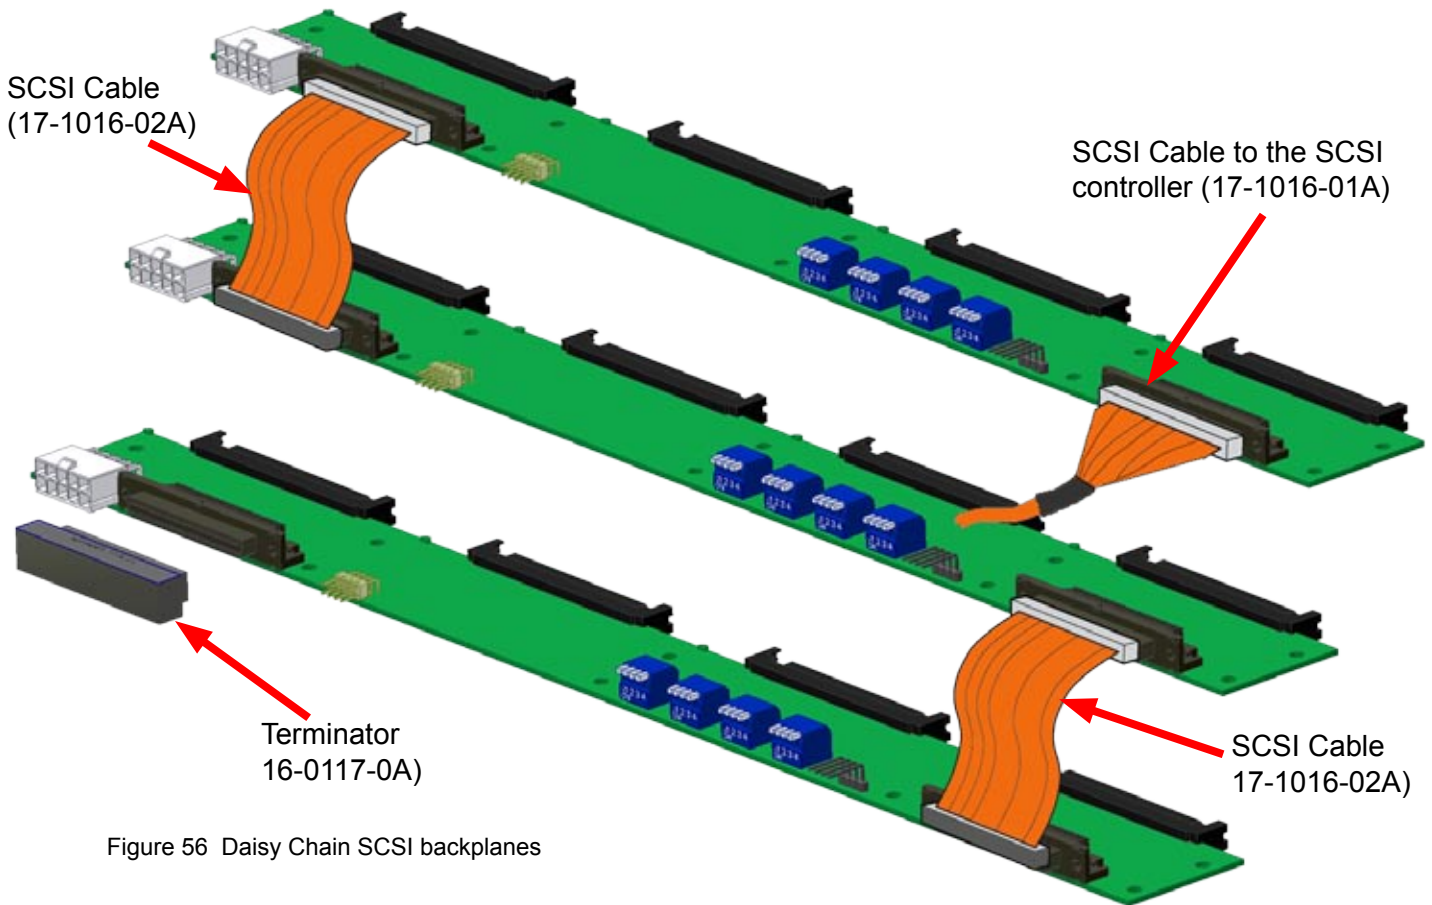


Figure 56 Daisy Chain SCSI backplanes



NOTE: Make sure the SCSI ID number are not duplicate in the SCSI channel

2.6.1 HD-68 SCSI Cable Daisy (order# 17-1016-02A)



Figure 57 SCSI cable used for daisy chain



NOTE: Use the cable provide by TST USA only, the cable length is designed to prevent reflection resonance

User Manual ESR 312, 316, 420, 424, 524, 528

2.7 Slim Power Board (16-0103-01A)

The ESR series chassis provides a Slim Power Board to enable easy cable management. The Slim Power Board provides power to slim-line device such as slim FDD, slim CD-Rom and 2.5" IDE hard disk drive. The Slim Power Board has preinstall in the chassis.

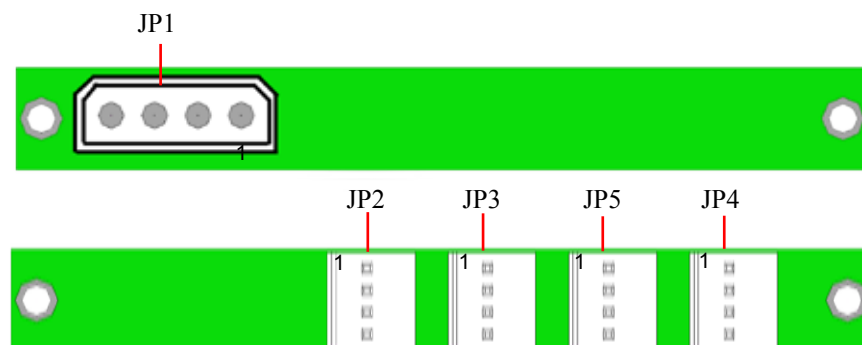


Figure 58 Slim-line Power Board (order # 16-0103-01A)

2.7.1 JP1 4 pin Peripheral Power Connector header

Jumper 1 (JP1) connector has 4 pins and is cabled to the System Power Board JPX to provide power to the Slim Power Board through DC power cable (order # 17-1007-01A) Refer section 2.1.X for the cable pin assignment.

Pin	Signal Name
1	+ 12V
2	Ground (COM)
3	Ground (COM)
4	+ 5V

Table 32 Peripheral Power (JP1) Pin assignment

2.7.2 JP2-JP4 4 pin mini Power Connector header

JP2 to JP4 provides DC power to slim-line device through mini 4pin DC power cable (order # 17-1018-01A) and 4pin-to-2pin DC power cable (order # 17-1008-XX)

Pin	Signal Name
1	+ 12V
2	Ground (COM)
3	Ground (COM)
4	+ 5V

Table 33 Mini Power (JP2-JP4) Pin assignment

NOTE: The power cable used to connect the slim CD/DVD-Rom and the slim power board is included in the slim power board in JP2

User Manual ESR 312, 316, 420, 424, 524, 528

2.7.3 Mini 4 pin DC power cable (17-1018-01A)

J1 and J2 of Mini 4 pin DC power cable has the same pin assignment and polarity, therefore, connect either J1 or J2 to the slim Floppy Disk PCB and connect the other end of the cable to the Slim Power Board. Refer section 3.7 for instruction.



Figure 59 Mini 4 pin DC Power cable (order # 17-1018-01A)

2.7.4 4 pin-to-2 pin DC power cable (17-1008-XX)

Connect J1 to the 2.5" IDE hard disk device PCB and connect J2 to the Slim Power Board. Refer section 3.6 for instruction. XX refer as extension number for cable length which is shown on the table below



Figure 60 4 pin-to-2 pin DC Power cable (order # 17-1008-XX)

Cable Order #	Cable length (inch)	Instruction
17-1008-01A	4.7"	Connect to Drive 1. Refer to section 3.10
17-1008-02A	7.0"	Connect to Drive 2. Refer to section 3.10
17-1008-03A	11.5"	Connect to Drive 3. Refer to section 3.10

Table 34 4pin-to-2pin power cable list

User Manual ESR 312, 316, 420, 424, 524, 528

2.8 Slim Floppy Disk Board (Order #16-0104-01)

The ESR series chassis provides a Slim Floppy Disk Board bay that can be configured for a slim-line floppy disk drive. The floppy disk drive is mounted on a tool-less tray which allow for easy installation and removal from the chassis. Refer section 3.7 for instruction. The Slim Power Board has preinstall in the chassis.

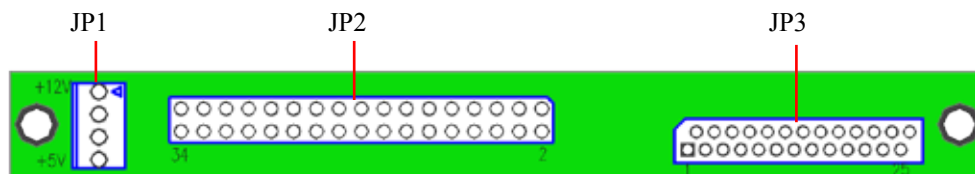


Figure 61 Slim-line Floppy Disk Board (order # 16-0104-01A)

2.8.1 JP1 4 pin Peripheral Power Connector header

Pin	Signal Name
1	+ 12V
2	Ground (COM)
3	Ground (COM)
4	+ 5V

Table 35 Mini 4-pin Power header (JP1) Pin assignment

2.8.2 JP2 34 pin Floppy Disk Connector header

Name	Pin	Pin	Name
GND	1	2	FD DENSEL0
GND	3	4	2M MEDIA
GND	5	6	FD DRATE0 L
GND	7	8	FD INDEX L
GND	9	10	FD MTR0 L
GND	11	12	FD DS1 L
GND	13	14	FD DS0 L
GND	15	16	FD MTR1 L
Unused	17	18	FD DIR L
GND	19	20	FD STEP L
GND	21	22	FD WDATA L
GND	23	24	FD WGATE L
GND	25	26	FD TRK0 L
Unused	27	28	FD WP L
GND_FDD	29	30	FD RDATA L
GND	31	32	FD HDSEL L
MSEN0	33	34	FD DSKCHG L

Table 36 34-pin floppy connector pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

2.8.2.1 34pin Floppy Disk Drive cable (07-1004-01A)

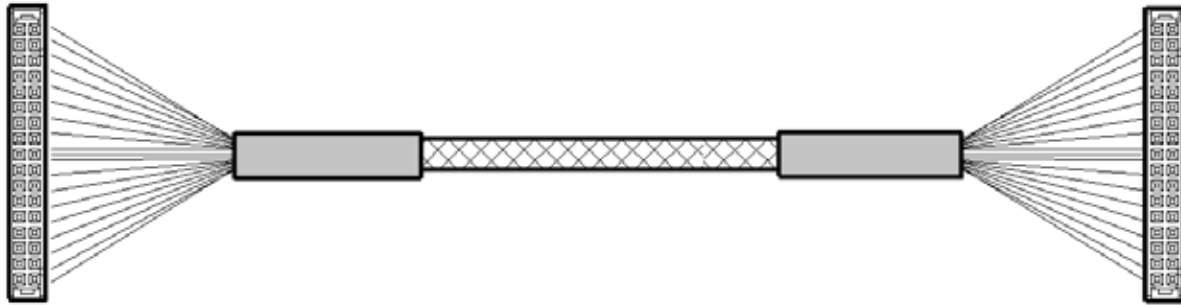


Figure 62 34pin FDD cable (order # 17-1004-01A)

2.8.3 JP3 26 pin Slim-line Floppy Drive Connector Header

Name	Pin	Pin	Name
+ 5V	1	2	INDEX
+ 5V	3	4	DRIVE SELECT 0
+ 5V	5	6	DISK CHANGE
N.C.	7	8	READY
HD (HIGH: HD)	9	10	MOTOR ON
N.C.	11	12	DIRECTION SELECT
MODE SELECT	13	14	STEP
GND	15	16	IDE SDD <14>
GND	17	18	IDE SDD <15>
GND	19	20	TRACK 00
GND	21	22	WRITE PROTECT
GND	23	24	READ DATA
GND	25	26	SIDE ONE SELECT

Table 37 26-pin slim-line floppy drive connector pin assignment

2.8.3.1 26 pin Slim-line Floppy Drive flat cable (17-1019-01A)



Figure 63 26-pin Slim-line FDD flat cable (order # 17-1019-01A)

User Manual ESR 312, 316, 420, 424, 524, 528

2.9 Slim CD/DVD-Rom Board (16-0105-01)

The ESR series chassis provides a slim-line CD/DVD-Rom bay that can be configured for either CDROM or DVD. The peripheral drive is mounted on a tool-less tray which allow for easy installation and removal from the chassis. Refer section 3.8 for instruction. The following table defines the connector pin assignments on the slim CD/DVD-Rom Board. This board is located in the accessories box.

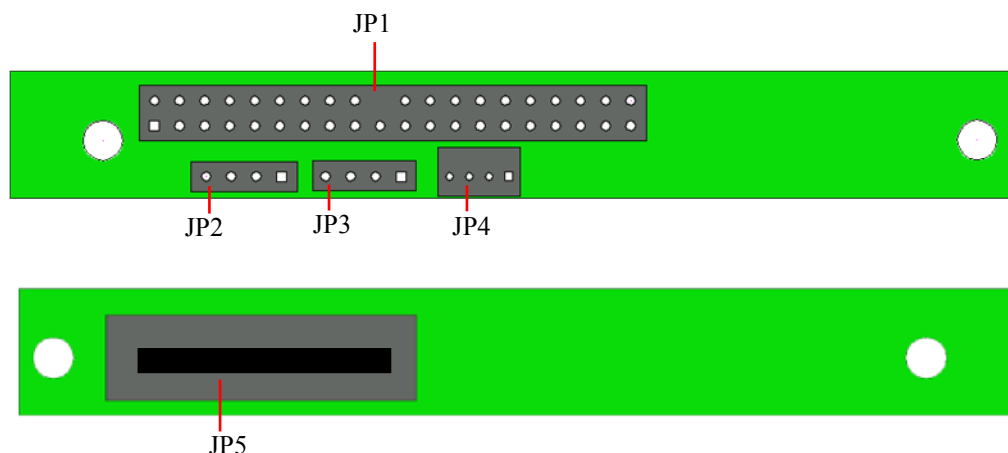


Figure 64 Slim CD/DVD-Rom Board (order # 16-0105-01A)

2.9.1 JP1 40pin IDE head pin assignment

Jumper 1 (JP1) connector has 40 pins and is cabled to the IDE cable. The PCB support cable select only so Master/Slave is determined by the IDE cable.

Name	Pin	Pin	Name
RST IDE S L	1	2	GND
IDE SDD <7>	3	4	IDE SDD <8>
IDE SDD <6>	5	6	IDE SDD <9>
IDE SDD <5>	7	8	IDE SDD <10>
IDE SDD <4>	9	10	IDE SDD <11>
IDE SDD <3>	11	12	IDE SDD <12>
IDE SDD <2>	13	14	IDE SDD <13>
IDE SDD <1>	15	16	IDE SDD <14>
IDE SDD <0>	17	18	IDE SDD <15>
GND	19	20	Unused
IDE SDDREQ	21	22	GND
IDE SDIOW L	23	24	GND
IDE SDLOR L	25	26	GND
IDE SIORDY	27	28	IDEP ALE H
IDE SDDACK L	29	30	GND
IDE IDE S	31	32	NC IDEIO16 L
IDE SDA<1>	33	34	NC CBL DET S
IDE SDA<0>	35	36	IDE SDA<2>
IDE SDCS0 L	37	38	IDE SDCS1 L
IDE SEC HD ACT L	39	40	GND

Table 38. 40 pin IDE connector pinout (JP1)

User Manual ESR 312, 316, 420, 424, 524, 528

2.9.2 One-to-One IDE cable (order # 17-1003-XX)

Connect (J1) connector to the server board and J2 to the slim CD/DVD-Rom Board. XX refer as extension number for cable length which is shown on the table below

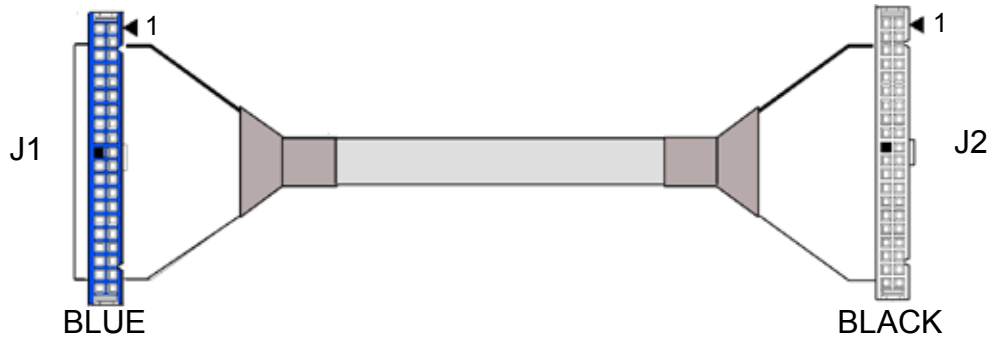


Figure 65 Single drive IDE cable

Cable Order #	Cable length (inch)	Instruction
17-1003-01A	33.5"	Connect to the Slim CD/DVD-Rom Board
17-1003-02A	27.5"	Connect to Drive 1. Refer to section 3.10
17-1003-03A	25.5"	Connect to Drive 2. Refer to section 3.10
17-1003-04A	21.5"	Connect to Drive 3. Refer to section 3.10

Table 39 40-pin single drive IDE cable list

2.9.3 Two Drives IDE cable (order # 17-1017-01A)

The 33 inch long Two Drive IDE cable is used for IDE channel that require both the Master and Slave Drive, it is compliant with ATA 5.0 Standard for cable select setting. Connect (J1) connector to the server board and J2 to the Slave Drive and J3 to the Master Drive. The length between J2 and J3 is 10 inch

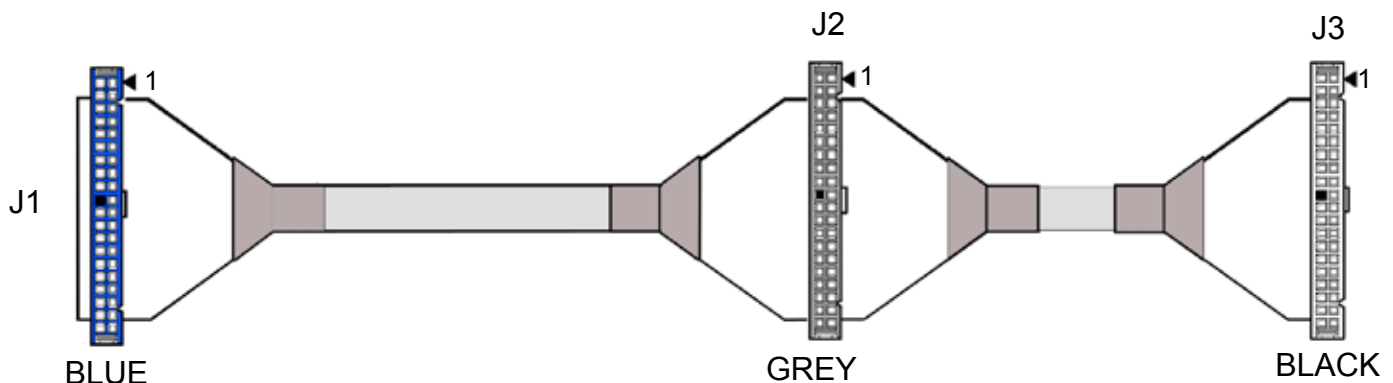


Figure 66 Two drive IDE cable (order # 17-1017-01A)

NOTE: All IDE cable used in the ESR-Series are high density and high quality 80-conductor Ultra DMA cables

User Manual ESR 312, 316, 420, 424, 524, 528

2.9.24 JP2 Power Input header pin assignment

Require to connect to the power source to power up the Slim CD/DVD Rom. Refer section 3.6 for instruction.

Pin	Name
1	+12V
2	GND
3	GND
4	+5V

Table 40. Mini-4 pin drive power connector header pinout (JP2)

NOTE: The power cable used to connect the slim CD/DVD-Rom and the slim power board is included in the slim power board. Refer to section 2.8.2

2.9.5 JP3 2.54mm pitch Audio output header

The Slim CD/DVD-Rom Board provides with analogue audio output connector that can be connected to an audio amplifier or a sound card's internal audio input connector using a sound cable terminated with a standard MPC-3 type, 4 pin connector.

Pin	Name
1	Left Signal
2	GND
3	GND
4	Right Signal

Table 41. 2.54mm pitch Audio Output connector header pinout

NOTE: The audio output cable is not included with the ESR series chassis

2.9.6 JP4 2.0mm pitch Audio output header

Pin	Name
1	Left Signal
2	GND
3	GND
4	Right Signal

Table 42. 2.0mm pitch Audio Output connector header pinout (JP2)

NOTE: The audio output cable is not included with the ESR series chassis

User Manual ESR 312, 316, 420, 424, 524, 528

2.9.7 JP5 50 pin Direct Plug Connector

JP5 is the 50pin Direct Plug slim CD/DVD-Rom connector that provides interconnect between the drive, power supply and server board. The 50 pin direct plug connector pinout is listed in the table below. Refer Section 3.8 for installation instruction.

Name	Pin	Pin	Name
RSV LCM	1	2	RSV RCM
RSV GND	3	4	GND
RST IDE S L	5	6	IDE SDD <8>
IDE SDD <7>	7	8	IDE SDD <9>
IDE SDD <6>	9	10	IDE SDD <10>
IDE SDD <5>	11	12	IDE SDD <11>
IDE SDD <4>	13	14	IDE SDD <12>
IDE SDD <3>	15	16	IDE SDD <13>
IDE SDD <2>	17	18	IDE SDD <14>
IDE SDD <1>	19	20	IDE SDD <15>
IDE SDD <0>	21	22	IDE SDDREQ
GND	23	24	IDE SDIOR L
IDE SDLOW L	25	26	GND
IDE SIORDY	27	28	IDE SDDACK L
IRQ IDE S	29	30	NC IDEIO16 L
IDE SDA<1>	31	32	NC CBL DET S
IDE SDA<0>	33	34	IDE SDA<2>
IDE SDCS0 L	35	36	IDE SDCS1 L
IDE SEC HD ACT L	37	38	+5V
+5V	39	40	+5V
+5V	41	42	+5V
GND	43	44	GND
GND	45	46	GND
IDEP ALE H	47	48	GND
	49	50	

Table 44 50-pin slim-line CD-Rom drive connector pinout (JP5)

User Manual ESR 312, 316, 420, 424, 524, 528

2.10 DB 9 Cable Pin Assignment (order # 17-1001-XX)

The ESR-Series chassis provide with DB9 Serial ports which allows administrators access the system and/or controll external device through a serial console session using UNIX commands such as hyper terminal. The pin assignment of J1 is tabled on section 1.3.2. However, there are at least two types of pin assignment on J2, which are describe on the tables below.

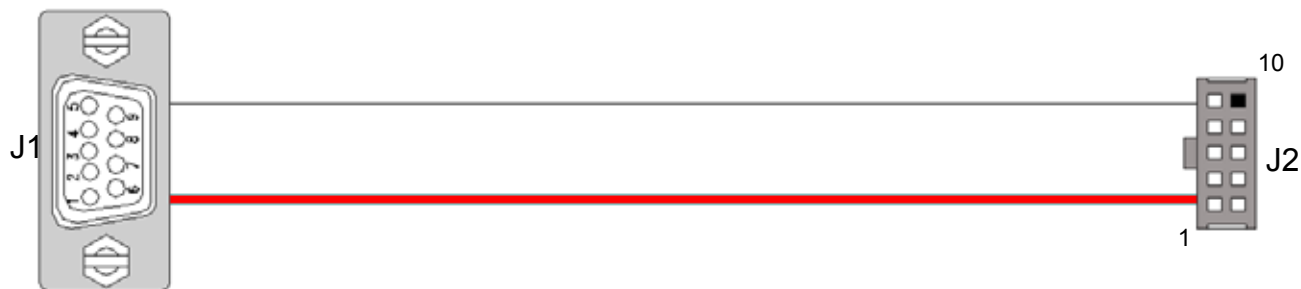


Figure 67 DB9 Serial Cable (order # 17-1001-XXX)

2.10.1 DB 9 Cable Pin Assignment for standard DB9 specification (order # 17-1001-01A)

The ESR-Series chassis provide with the standard serial port DB9 specification cable. The pin assignment of J2 is shwon on the table below.

Name	Pin	Pin	Name
DCD (Data Carrier Detect)	1	2	DSR (Data Set Ready)
RXD (Receive Data)	3	4	RTS (Request To Send)
TXD (Transmit Data)	5	6	CTS (Clear To Send)
DTR (Data Terminal Ready)	7	8	RI (Ring Indicator)
GND	9	10	Key

Table 45.DB9 cable pin out for 17-1001-01A (JP2)

2.10.2 DB 9 Cable Pin Assignment for inter S875WP1-E board (order # 17-1001-02A)

The intel S875WP-E server board has its unique DB9 pin assignment header that is different than the regular DB 9 serial specification. If you are using the intel S875WDP-E, you need to order this DB9 cable . The cable pin assignment of 17-1001-02A is shown below.

Name	Pin	Pin	Name
DCD (Data Carrier Detect)	1	2	RXD (Receive Data)
TXD (Transmit Data)	3	4	DTR (Data Terminal Ready)
GND	5	6	DSR (Data Set Ready)
RTS (Request To Send)	7	8	CTS (Clear To Send)
RI (Ring Indicator)	9	10	Key

Table 46.DB9 cable pin out for 17-1001-02A (JP2)

NOTE: If you see another DB-9 pin assignment which is different than the above two pinout. Please email this information to the author at sio@tstcom.com

User Manual ESR 312, 316, 420, 424, 524, 528

2.10 Slim-line 2.5” to 3.5” IDE Drive Adapter (order # 16-0118-01A)

The ESR-Series chassis provide with Slim-line 2.5” to 3.5” IDE drive Adapter. PIN 1 location of the adapter is shown on the figure below. See section 3.5 for instruction on installing a slim-line IDE Hard Disk Drive

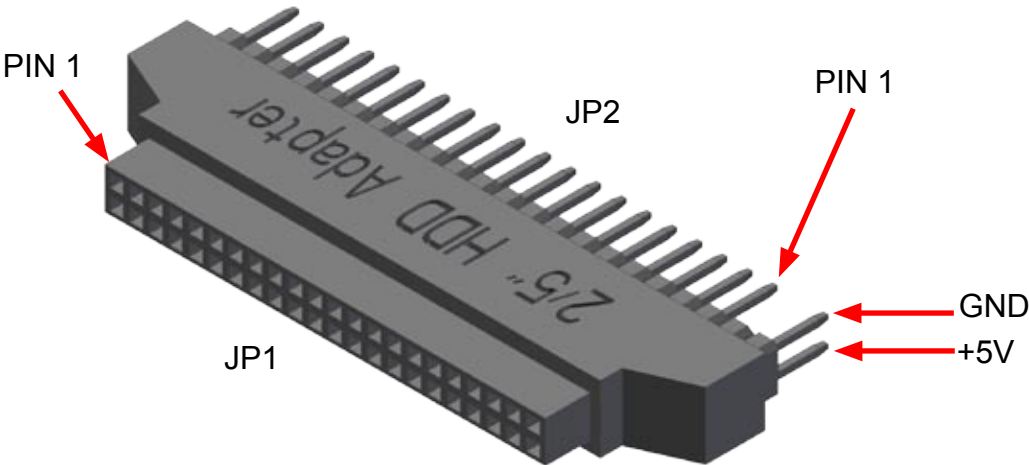


Figure 68 2.5” to 3.5” IDE adapter (order # 18-0007-01A)

2.10.1 JP1 44pin 2.5” IDE head pin assignment

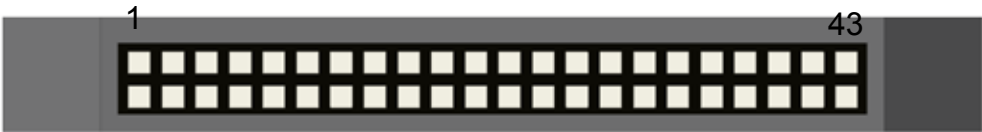


Figure 69 JP1 connector layout, 2.5” to 3.5” IDE adapter

Name	Pin	Pin	Name
RST IDE S L	1	2	GND
IDE SDD <7>	3	4	IDE SDD <8>
IDE SDD <6>	5	6	IDE SDD <9>
IDE SDD <5>	7	8	IDE SDD <10>
IDE SDD <4>	9	10	IDE SDD <11>
IDE SDD <3>	11	12	IDE SDD <12>
IDE SDD <2>	13	14	IDE SDD <13>
IDE SDD <1>	15	16	IDE SDD <14>
IDE SDD <0>	17	18	IDE SDD <15>
GND	19	20	Unused
IDE SDDREQ	21	22	GND
IDE SDIOW L	23	24	GND
IDE SDLOR L	25	26	GND
IDE SIORDY	27	28	IDEPALE H
IDE SDDACK L	29	30	GND
IDE IDE S	31	32	NC IDEIO16 L
IDE SDA<1>	33	34	NC CBL DET S
IDE SDA<0>	35	36	IDE SDA<2>
IDE SDCS0 L	37	38	IDE SDCS1 L
IDE SEC HD ACT L	39	40	GND
+5V (LOGIC)	41	42	+5V (MOTOR)
GND	43	44	RESERVED

Table 47. 44-pin 2.5 inch adapter IDE connector pinout (JP1)

User Manual ESR 312, 316, 420, 424, 524, 528

2.10.2 JP2 2+40pin IDE head pin assignment

JP2 will match regular 40pin IDE cable as shown on Section 2.9.2 and Section 2.9.3. Install cable shown on section 2.7.4, with Gound signal on A and +5V on B,

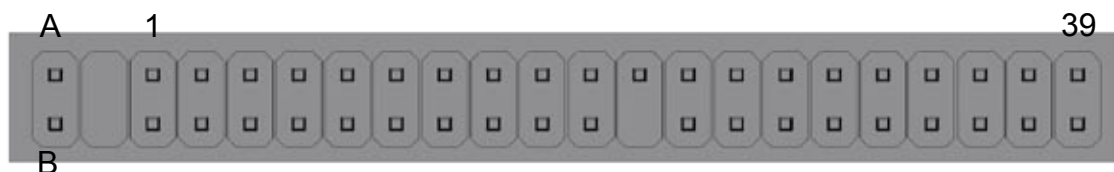


Figure 70 JP2 connector layout

Name	Pin	Pin	Name
GND	A	B	+5V
RST IDE S L	1	2	GND
IDE SDD <7>	3	4	IDE SDD <8>
IDE SDD <6>	5	6	IDE SDD <9>
IDE SDD <5>	7	8	IDE SDD <10>
IDE SDD <4>	9	10	IDE SDD <11>
IDE SDD <3>	11	12	IDE SDD <12>
IDE SDD <2>	13	14	IDE SDD <13>
IDE SDD <1>	15	16	IDE SDD <14>
IDE SDD <0>	17	18	IDE SDD <15>
GND	19	20	Unused
IDE SDDREQ	21	22	GND
IDE SDIOW L	23	24	GND
IDE SDLOR L	25	26	GND
IDE SIORDY	27	28	IDEPALE H
IDE SDDACK L	29	30	GND
IDE IDE S	31	32	NC IDEIO16 L
IDE SDA<1>	33	34	NC CBL DET S
IDE SDA<0>	35	36	IDE SDA<2>
IDE SDCS0 L	37	38	IDE SDCS1 L
IDE SEC HD ACT L	39	40	GND

Table 48. 40+2 pin IDE connector pinout (JP2)



Connecting the adapter to the drive incorrectly can serverly damage or destroy your hard disk drive. The location of PIN 1 on the hard drive depends on the model of hard drive you are using, If you are unsure of the location of PIN 1 on your hard drive, contact the hard disk drive manufacturer before attempting to connect the drive.

User Manual ESR 312, 316, 420, 424, 524, 528

2.11 System Fan Edge Adapter Board (order # 16-0106-01A)

The ESR series support two hot-swap system fans and the interconnect between the fan and the system monitor board is through the Fan Edge Adapter Board. The fan is connected the edge board through the 3 pin connector (4 pin connector if it is PWM fan)

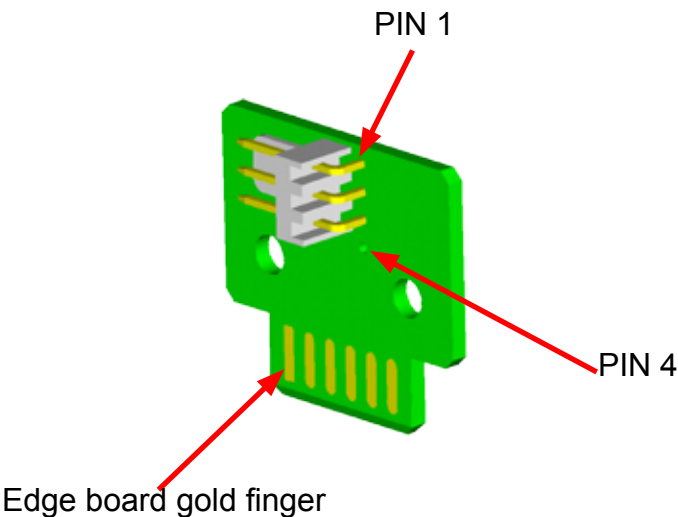


Figure 71 System Fan Edge Adapter Board

Pin	Signal Name
1	Gound
2	+12V
3	Fan Tach out Signal
4	Fan PWM out Signal

Table 49 Fan edge board connector pin assignment

User Manual ESR 312, 316, 420, 424, 524, 528

Chapter 3. Integration Steps

This section provides procedures for installing, removing and replacing components and assemblies in your ESR seires storage system:



Unless otherwise noted, each procedure assumes the following conditions:

You have read the safety instructions of this user manual. Always follow the instructions closely. While working on the system, do not attempt to service the system except as explained in this guide and elsewhere in TST Corp USA documentation.

You can install, replace or reinstall a part by performing the removal procedure in reverse order, unless additional information is provided.

Recommended Tools

Phillips-head screwdriver
5mm nut driver
Wrist grounding strap
Standard flat-blade screwdriver



The Power Button on the front panel DOES NOT turn off the AC power, you MUST unplug the AC power cords



To maintain and ensure regulation compliance, the fully integrated system should be tested, certified and/or documented to illustrate compliance to the regional regulations and laws for where the product will be sold. The peripherals such as hard disk drive, CD-Rom and add-in-cards choosen for integration should have individual regulatory approvals.

User Manual ESR 312, 316, 420, 424, 524, 528

3.1 Removing and Replacing the top cover



WARNING: DO NOT USE TOP THUMB SCREW TO LIFT CHASSIS! These thumb screws are used only to install and remove the top cover only!

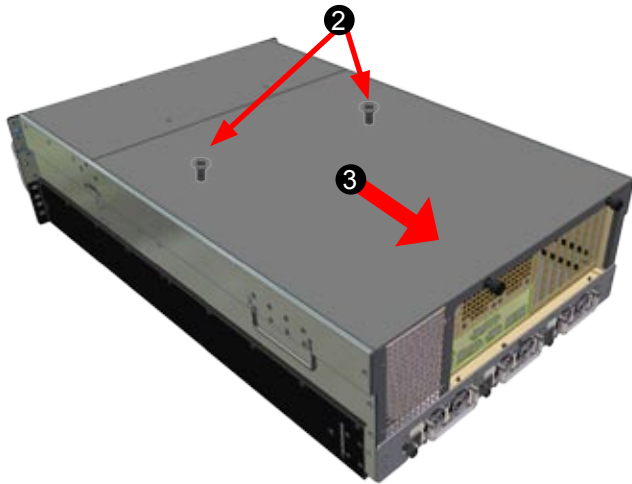


Figure 72 Loosen the back cover thumbscrews

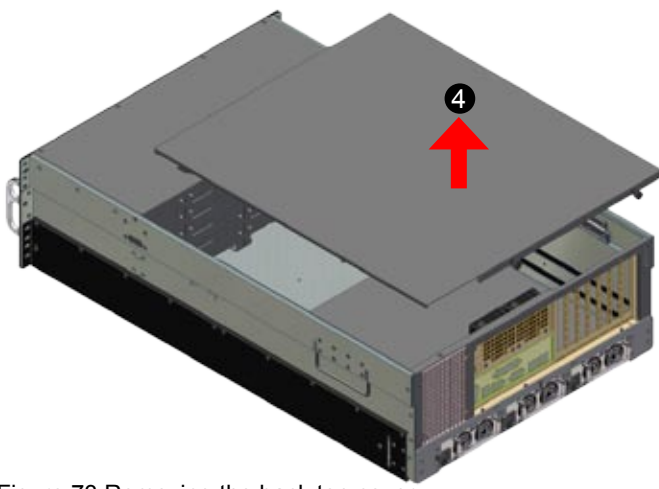


Figure 73 Removing the back top cover

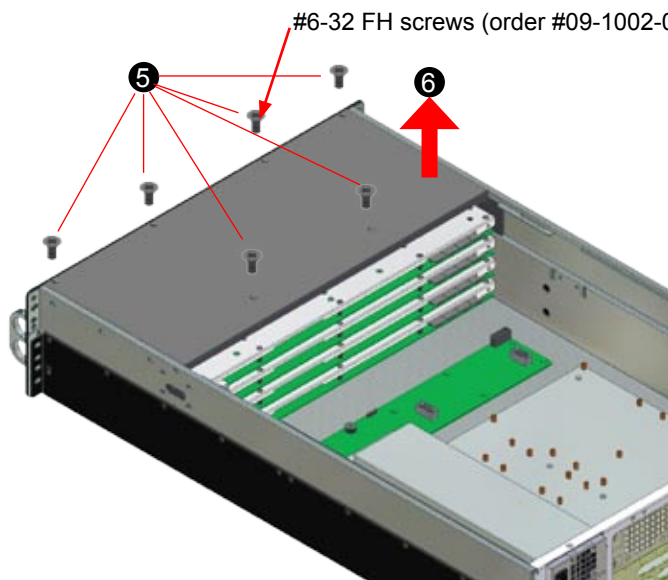


Figure 74 Removing the front top cover

3.1.1 Removing the top cover

- ① Ensure that the work surface is flat and clean to prevent scratching the computer cover
- ② Loosen and remove two #6-32 Flat Head screws that secure the rear cover of the chassis.
- ③ Slide the back cover backward and grasp the cover at both ends.
- ④ Remove the back cover and put it aside and away from the immediate working area as shown on figure xxx
- ⑤ Untighten six flat head #6-32 6mm screws of the front cover as shown on the figure.
- ⑥ Pull the front cover up and put it aside and away from the immediate working area
- ⑦ Pull the front cover up and put it aside and away from the immediate working area

3.1.2 Replacing the top cover

- ① Ensure that no tools or parts are left inside the system and that any cables are routed so that they will not be damaged by the cover.
- ② Reserve steps of section 3.1.1

User Manual ESR 312, 316, 420, 424, 524, 528

3.2 Installing the System Board



Before you perform this procedure, read the safety instructions of this manual



See safety instructions in your System Board Information document.



Make sure the bolt standoffs install on the right position. Failure to do so may damage the system board installed

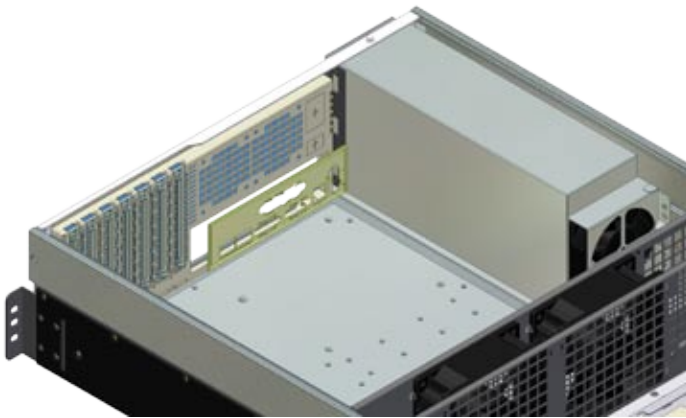


Figure 75 Installing the I/O Gasket

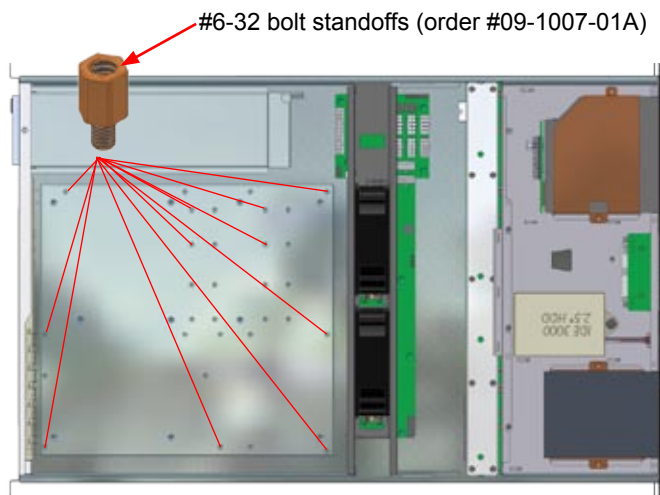


Figure 76 Installing the bolt standoffs

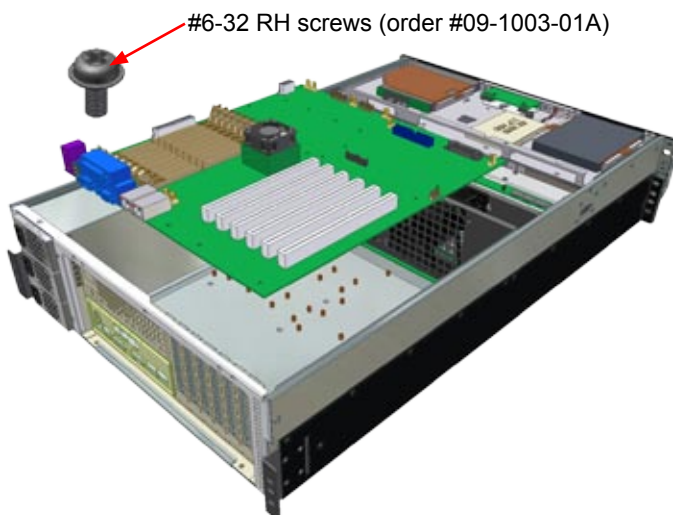


Figure 77 Installing the system board

- ❶ Remove the top cover (see section 3.1.1)
- ❷ Install the I/O gasket (I/O shield) comes with the server board, position one edge so the groove is outside the backpanel wall and push it to the I/O opening until it is seated. Make sure it snaps into place all the way round (Refer to your System Board information document for further instruction)
- ❸ Check with your server board mounting holes' location. Install the #6-32 bolt standoffs according to your system board mounting location. The #6-32 bolt standoffs are located in accessories box.
- ❹ With the standoffs installed into the correct locations, carefully place the system board into the chassis and ensure the board I/O insert into the I/O gasket cutout
- ❺ Tighten and secure the system board with the round head #6-32 screw from the accessories box.
- ❻ Install the Front Panel cable, Power Supply cable, and other device connectors to the system board. (Refer to your System Board information document for further instruction)
- ❼ Close the top cover (see section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.1.2 Installing a Quad Processor Server Board in ESR-420, 424, 524 and 528



Before you perform this procedure, read the safety instructions of this manual



See safety instructions in your System Board Information document.



Make sure the bolt standoffs install on the right position. Failure to do so may damage the system board installed

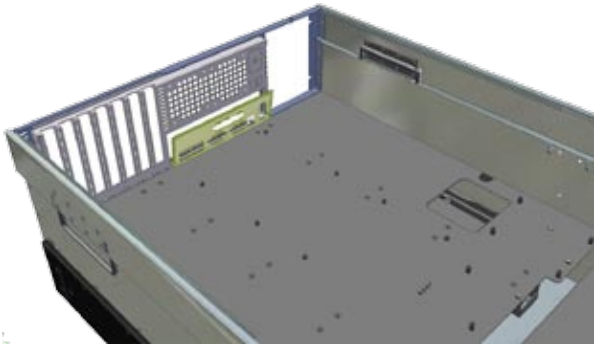


Figure 78 Installing the I/O Gasket for Quad Motherboard

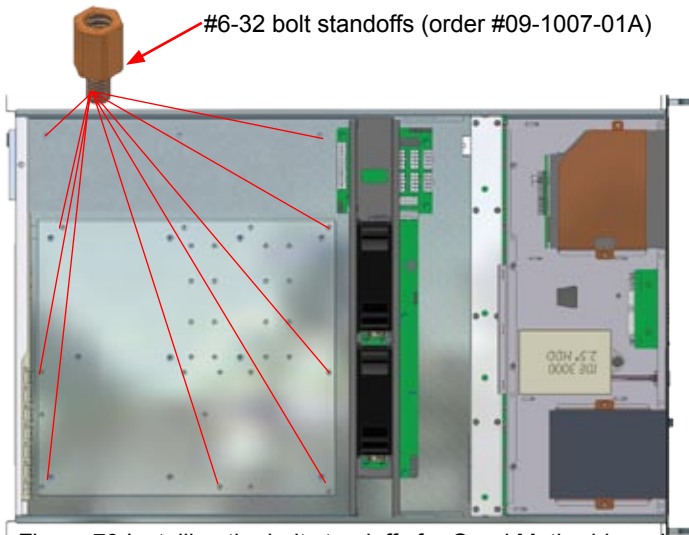


Figure 79 Installing the bolt standoffs for Quad Motherboard

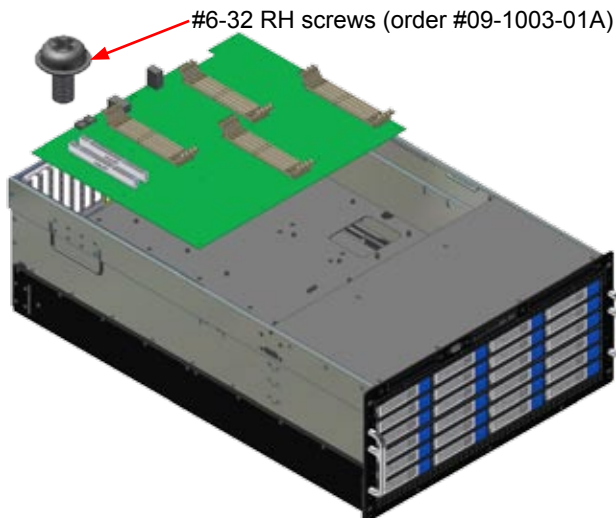


Figure 80 Installing the system board for Quad motherboard

- ❶ Remove the top cover (see section 3.1.1)
- ❷ Install the I/O gasket (I/O shield) comes with the server board, position one edge so the groove is outside the backpanel wall and push it to the I/O opening until it is seated. Make sure it snaps into place all the way round (Refer to your System Board information document for further instruction)
- ❸ Check with your server board mounting holes' location. Install the #6-32 bolt standoffs according to your system board mounting location. The #6-32 bolt standoffs are located in accessories box.
- ❹ With the standoffs installed into the correct locations, carefully place the system board into the chassis and ensure the board I/O insert into the I/O gasket cutout
- ❺ Tighten and secure the system board with the round head #6-32 screw from the accessories box.
- ❻ Install the Front Panel cable, Power Supply cable, and other device connectors to the system board. (Refer to your System Board information document for further instruction)
- ❼ Close the top cover (see section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.3 Installing Expansion Cards



Before you perform this procedure, read the safety instructions of this manual



See safety instructions in your Add-in-Cards Information document.

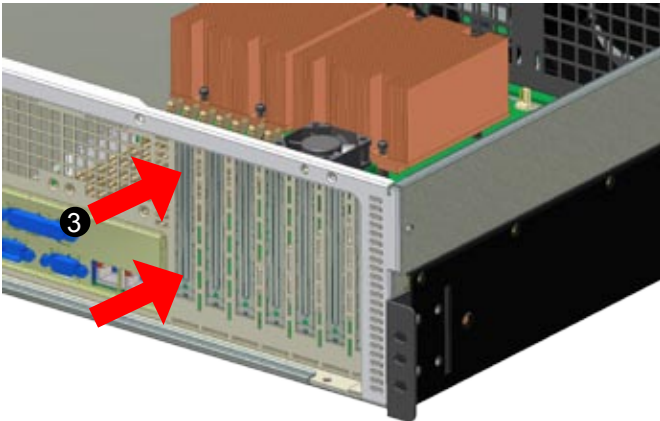


Figure 81 Removing the expansion-card shielding plate

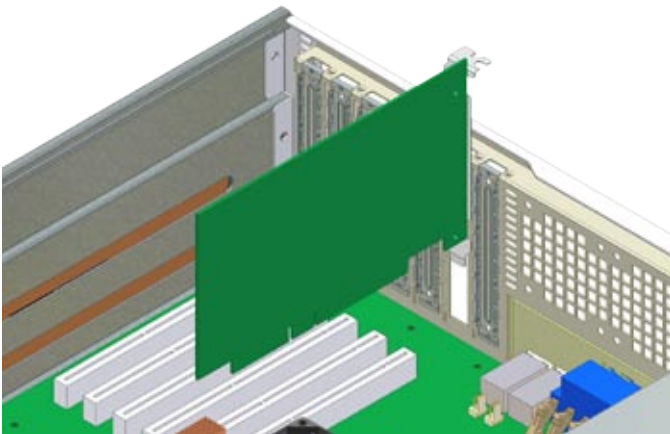


Figure 82 Installing the expansion-card into the system

#6-32 RH screws (order #09-1003-01A)

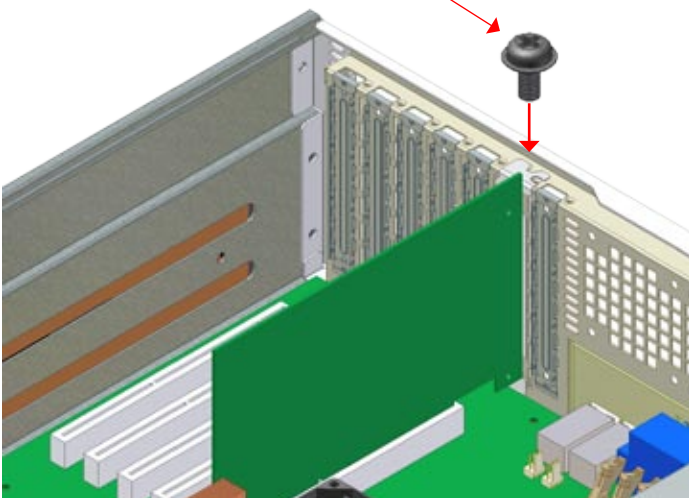


Figure 83 Secure the expansion-card

- ① Unpack the expansion card and prepare it for installation. For instructions, see the documentation accompanying the card.
- ② Remove the top cover (see section 3.1.1) Disconnect cables of the system if necessary
- ③ Remove the expansion-card shielding plate by pushing it toward the chassis. Put it into the accessories box for future use.
- ④ Position the expansion-card so that the card-edge connector from the system board aligns with the expansion-card connector

Insert the card-edge connector firmly into the expansion-card connector until the card is fully seated.

- ⑤ Tighten and secure the expansion-card with the round head #6-32 screw from the accessories box or from the package of the expansion-card
- ⑥ Reconnect the expansion-card cables, including those for the new card
- ⑦ Close the top cover (see section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.4 Install and Remove a Hard Disk Drive



Before you perform this procedure, read the safety instructions of this manual



NOTICE: Extra care must be taken when handling and storing the hard drives. The carriers provide some protection, but the hard drives can be damaged by rough handling. When removing the hard drives from the storage system, place them on a padded surface. Never drop the hard drives.



NOTICE: To avoid damage, never leave a drive carrier partially removed from the ESR storage system. Rotating a carrier handle next to an unseated drive carrier will result in serious damage to the unseated drive carrier.



NOTICE: To avoid data loss when removing a hard drive from an active RAID array, you must first use the array management software to prepare the drive for removal. See your array management software documentation for more information.



NOTICE: Always wear a wrist grounding strap when handling equipment with static-sensitive components.



NOTICE: Hard drive bays must be populated in order to maintain system thermals. Hard drive trays must either have a hard drive or drive dummy blank installed in them.

3.4.1 Hot Swap Hard Disk Drive Trays (order # 03-1007-01A)

All the system configured with the ESR series storage chassis configure with hot swap backplane, each hard drive must be mounted to a hot swap drive tray, making insertion and extraction of the drive from the chassis very simple. Each drive tray has its own dual purpose latching mechanism made of high quality aluminum alloy which is used to both insert/extract drives from the chassis and lock the tray in place. Each drive tray supports a pair of light pipe providing drive status/activity and drive failed indicator, located on the backplane, to be viewable from the front of the chassis



NOTICE: Depending on the controller used, SATA hard disk drives may not report errors using the drive's status indicator. Visit www.tstcom.com for compatible SATA controller list that support drive's status indicator.

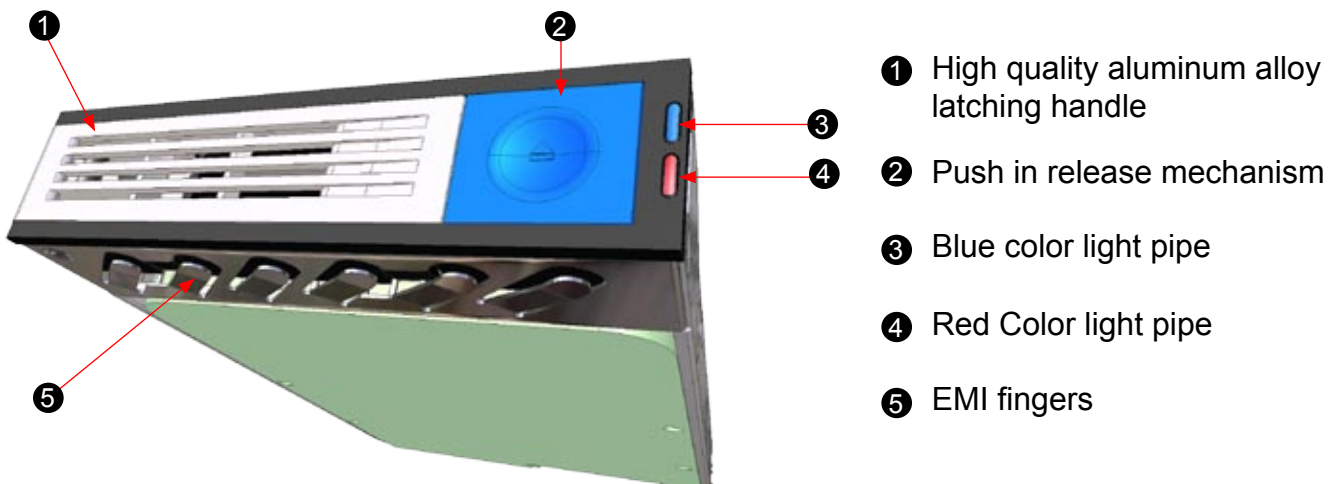


Figure 84 Hot Swap Hard Disk Drive Trays

User Manual ESR 312, 316, 420, 424, 524, 528

3.4.2 Before You Begin

Before attempting to remove or install a drive while the system is running, see the documentation for the RAID controller card ensure that the system is configured correctly to support hot-pluggable drive removal and insertion.

3.4.3 Removing a Hard Disk Drive

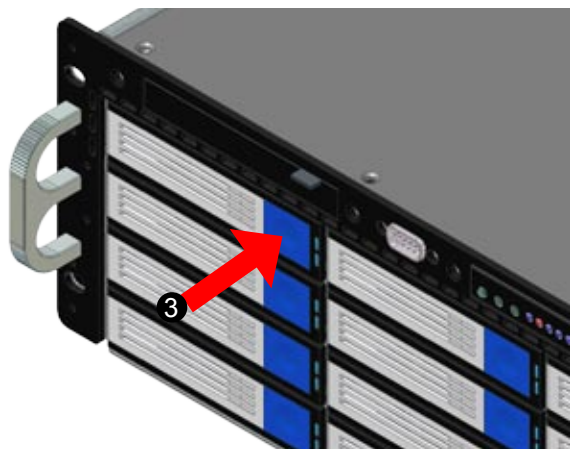


Figure 85 Push the Hard Drive tray button

- ❶ Use your array management software to prepare the drive for removal.
- ❷ Wait until the LED indicators on the drive carrier stop flashing.
- ❸ Push the button in the front of the hard-drive carrier as shown
- ❹ Open the hard-drive carrier handle.
- ❺ Gently but firmly pull the hard-drive carrier from its slot.



Figure 86 Remove the HDD tray from the chassis

User Manual ESR 312, 316, 420, 424, 524, 528

3.4.4 Installing or removing a Hard Disk Drive from its Carrier



NOTICE: To avoid damage, never leave a drive carrier partially removed from the ESR storage system. Rotating a carrier handle next to an unseated drive carrier will result in serious damage to the unseated drive carrier.

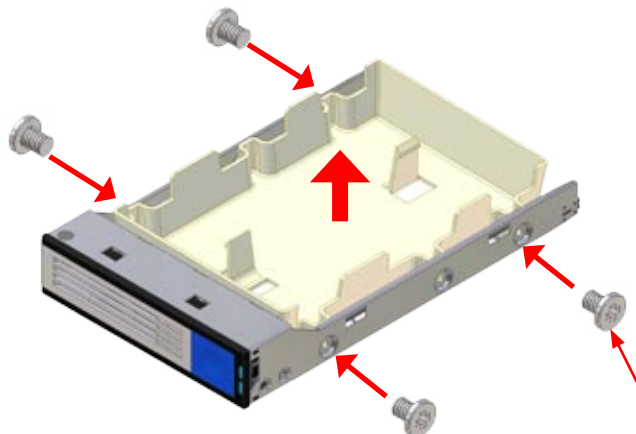


Figure 87 Remove the drive dummy blank

- ❶ Remove the hard drive tray from the system (see section 3.4.3)
- ❷ Remove the hard drive dummy blank from the carrier by remove the four Pan Head screws (order #09-1009-01A) that secure the drive dummy blank

#6-32 PH screws (order #09-1009-01A)

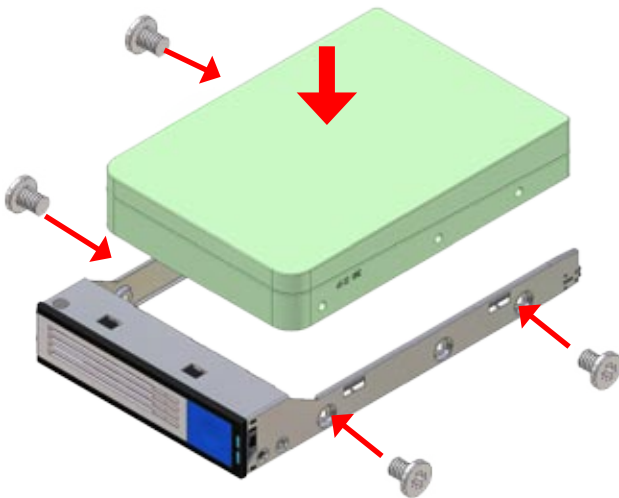


Figure 88 Install the Hard Disk Drive into the carrier

- ❸ Remove the drive dummy blank from the carrier and put it aside for future use
- ❹ Insert the replacement hard disk drive into the carrier
- ❺ Insert the four Pan Head screws and secure the hard disk drive to the carrier
- ❻ Gently insert the hard disk tray into the drive bay
- ❼ Close the aluminum handle to lock it in place



Figure 89 Insert the hard disk drive tray to the system

User Manual ESR 312, 316, 420, 424, 524, 528

3.5 Installing or removing a Slim IDE Hard Disk Drive

All the system configured with the ESR series storage chassis can support up to 3 slim-line 2.5" IDE hard drive. Refer section 2.8.4, section 2.10.2 and section 2.10.3 for cable selection guide. The location refer to the drive number is shown on the figure below.



Before you perform this procedure, read the safety instructions of this manual



NOTICE: Extra care must be taken when handling and storing the hard drives. Hard drives can be damaged by rough handling. When removing the hard drives from the storage system, place them on a padded surface. Never drop the hard drives.



Connecting the adapter to the drive incorrectly can serverly damage or destroy your hard disk drive. The location of PIN 1 on the hard drive depends on the model of hard drive you are using, If you are unsure of the location of PIN 1 on your hard drive, contact the hard disk drive manufacturer before attempting to connect the drive.

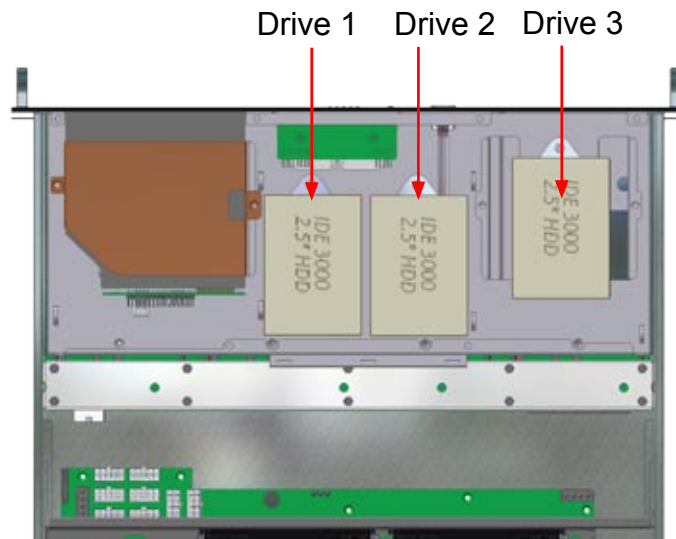


Figure 90 2.5" slimline hard disk drive location

#6-32 FH screws (order #09-1002-01A)

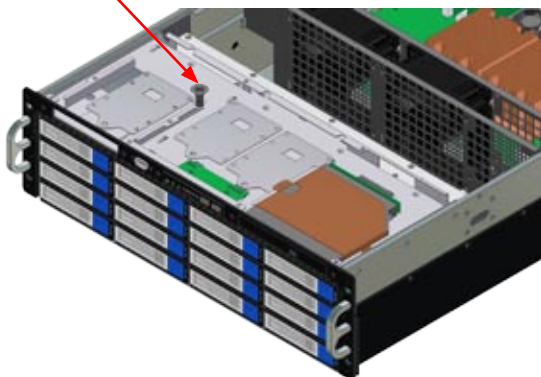


Figure 91 Remove the slim-line HDD mounting bracket

- 1 Unpack the 2.5" slim-line hard disk drive and prepare it for installation. For instructions, see the documentation accompanying the hard drive
- 2 Remove the top cover (see section 3.1.1) Disconnect cables of the system if necessary
- 3 Remove the slim-line hard drive tray (order #06-0115-01A) from the system by removing the #6-32 FH screws (order # 09-1002-01A).



NOTICE: If you need to install the HDD on Drive 3 location, you need to remove the FDD adapter board first, refer section 3.6 for instruction

User Manual ESR 312, 316, 420, 424, 524, 528

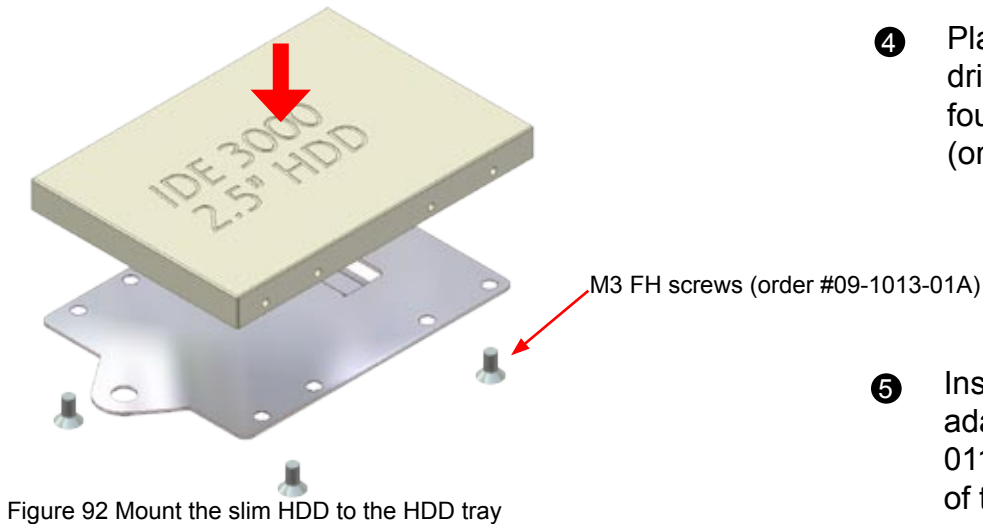


Figure 92 Mount the slim HDD to the HDD tray

- 4 Place and align the slim-line hard drive to its tray and mount it with four M3 screws as shown (order # 09-1013-01A)

- 5 Install the 2.5" to 3.5" Slim IDE adapter into the system (order #16-0118-01A). Make sure the PIN 1 of the adapter match PIN 1 of the slim-line hard drive

- 6 Reserve step to install the hard disk drive back to the chassis.

- 7 Connect the 40pin IDE cable and 2 pin power cable. Refer section 2.8 and section 2.10

- 8 Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)

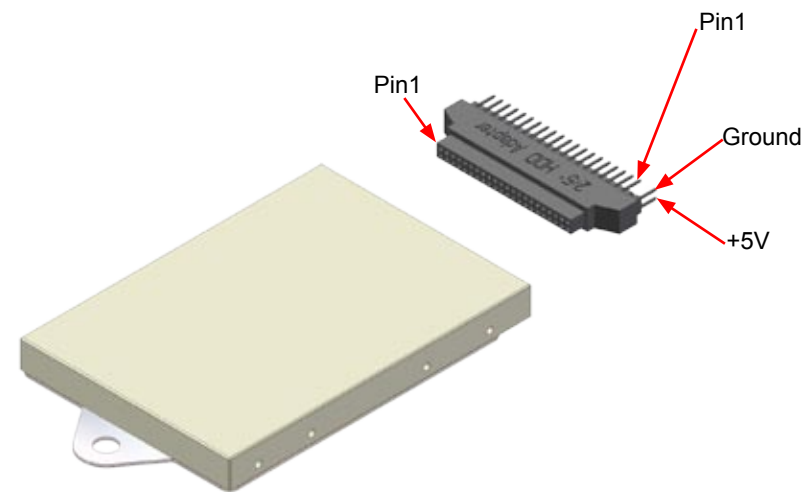


Figure 93 Install the 2.5" to 3.5" IDE adapter

3.5.1 Configure 2.5" Slim Hard Disk Drive Master and Slave Drive



NOTICE: See your 2.5" slim hard drive documentation for Master and Slave configuration. The sample jumper setting shown below is for your reference only.

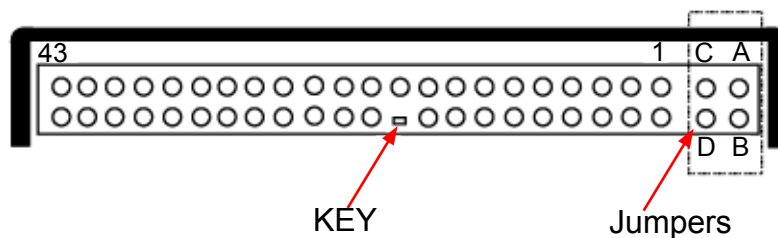


Figure 94 Example jumper setting for 2.5" IDE hard disk drive

Master configuration is obtained by setting jumpers B, C & D open (no jumper). Slave configuration is obtained by setting jumpers C-D.

User Manual ESR 312, 316, 420, 424, 524, 528

3.6 Installing or removing an internal 3.5" Hard Disk Drive in the ESR-312 and ESR-316

The ESR-312 and ESR-316 storage chassis can support up to 2 regular 3.5" hard drive.



Before you perform this procedure, read the safety instructions of this manual



NOTICE: Extra care must be taken when handling and storing the hard drives. Hard drives can be damaged by rough handling. When removing the hard drives from the storage system, place them on a padded surface. Never drop the hard drives.



NOTICE: With the internal hard disk mounting bracket install in the chassis, some full height, full side add-in-card may not be installed in into the system.

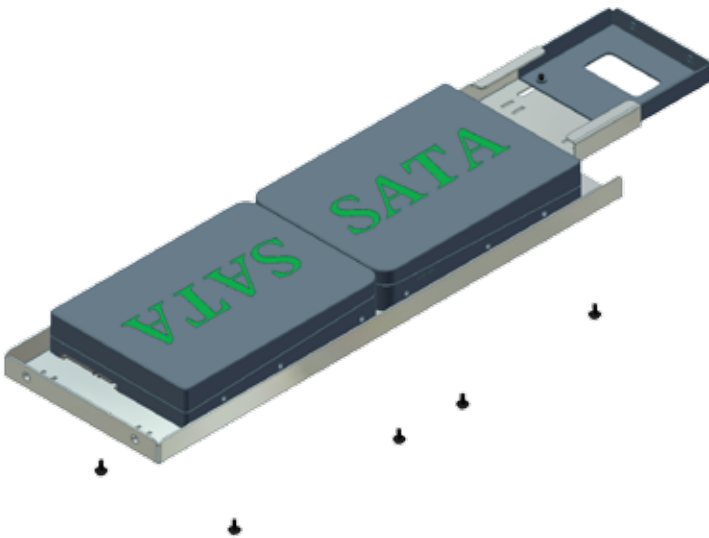


Figure 95 Remove the slim-line HDD mounting bracket

- ❶ Unpack the 3.5" slim-line hard disk drive and prepare it for installation. For instructions, see the documentation accompanying the hard drive
- ❷ Remove the top cover (see section 3.1.1) Disconnect cables of the system if necessary
- ❸ Take the 3.5"HDD mounting kit, put the internal 3.5" HDD into the mounting bracket (06-0231-01A and 06-0231-02A), install the 3.5" HDD as shown and secure with the #6-32 round head screws (09-1003-01A)

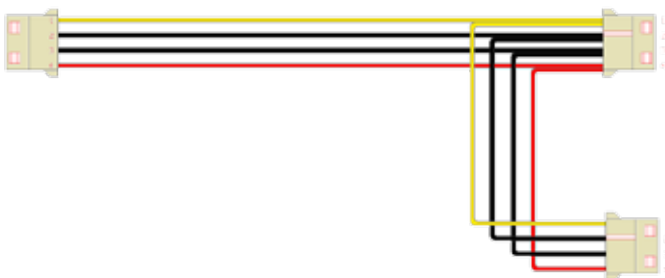


Figure 96 Power Y-cable, (17-1028-04A)

- ❹ Once the 3.5" internal HDD is installed in the mounting bracket, install the power Y-cable (17-1028-02A) and connect to the HDDs.
- ❺ Use the cable tight provided and tighten the power Y-cable around the edge of the HDD mounting bracket.

User Manual ESR 312, 316, 420, 424, 524, 528

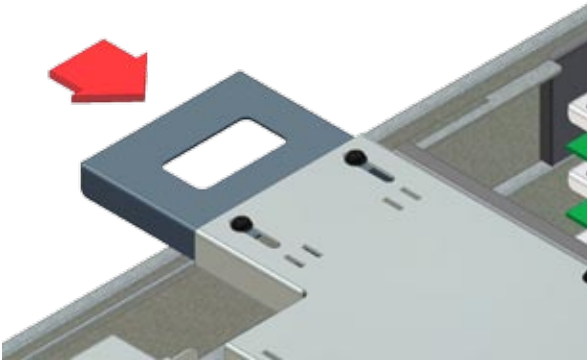


Figure 97 Push in the slide bracket

- ⑥ Untighten but not removing the two round head screws as shown
- ⑦ Push the slide bracket toward until it is stop by the two round head screws

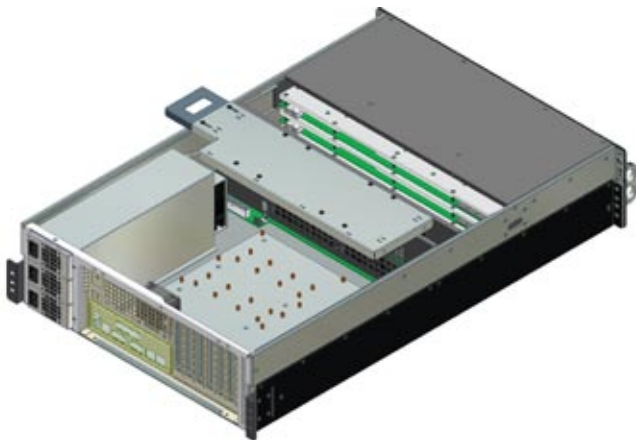


Figure 98 Install the internal 3.5: HDD bracket

- ⑧ Carefully put the 3.5" HDD mounting bracket toward the chassis, as shown on the figure, align it to the two each mounting holes location.

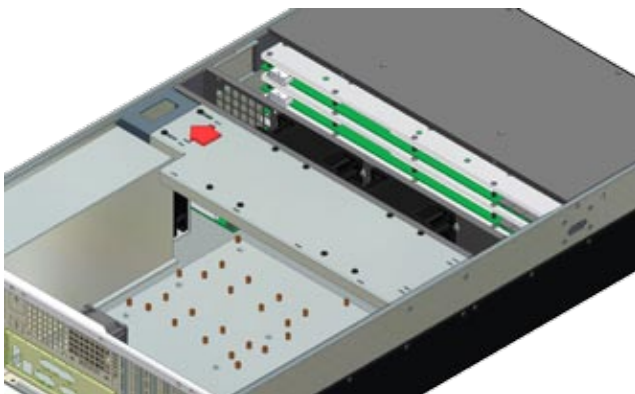


Figure 99 Extend and secure the slide bracket

- ⑧ Extend the slide bracket toward the chassis, once it mate with the chassis sheetmetal, install the flat head screws on both side of the chassis
- ⑨ Connect the data cable from the HDDs to the motherboard or the HDD controller, connect the power cable to the fan power board
- ⑩ Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.7 Installing or removing an internal 3.5" Hard Disk Drive in the ESR-420, 424, 524, 528

The ESR-420,424,524,528 storage chassis can support up to 2 regular 3.5" hard drive with the internal HDD mounting bracket.



Before you perform this procedure, read the safety instructions of this manual



NOTICE: Extra care must be taken when handling and storing the hard drives. Hard drives can be damaged by rough handling. When removing the hard drives from the storage system, place them on a padded surface. Never drop the hard drives.



NOTICE: With the internal hard disk mounting bracket install in the chassis, some full height, full side add-in-card may not be installed in into the system.



Figure 100 Install 3.5" HDD into theHDD mounting bracket

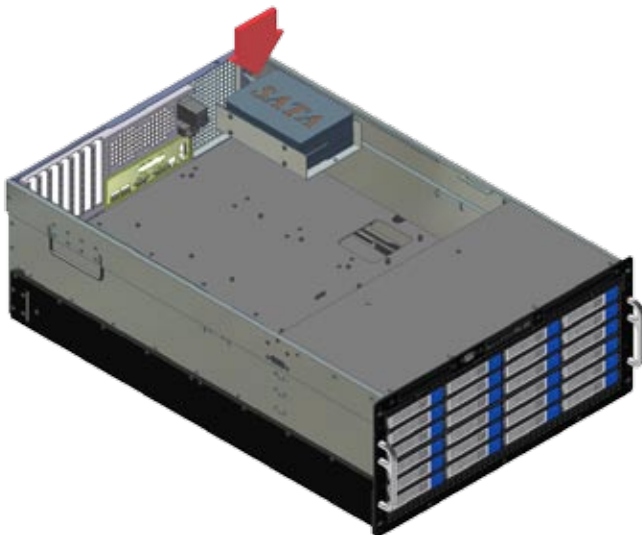


Figure 101 Install the 3.5" HDD bracket into the chassis

- ❶ Unpack the 3.5" slim-line hard disk drive and prepare it for installation. For instructions, see the documentation accompanying the hard drive
- ❷ Remove the top cover (see section 3.1.1) Disconnect cables of the system if necessary
- ❸ Take the 3.5"HDD mounting kit, put the internal 3.5" HDD into the mounting bracket (09-3552-01B), install the 3.5" HDD as shown and secure with the #6-32 round head screws (09-1003-01A)
- ❹ Locate the mounting holes on the chassis as shown, which is located on the right hand side of the chassis looking from the front. Install the HDD mounting bracket into the chassis with three flat head screw provided (09-1002-01A)
- ❺ Connect the data cable from the HDDs to the motherboard or the HDD controller, connect the power cable to the fan power board
- ❻ Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.8 Installing a Slim Floppy Disk Drive



Before you perform this procedure, read the safety instructions of this manual

3.8.1 Installing a Slim Floppy Disk Drive

All the system configured with the ESR series storage chassis can support slim-line Floppy Disk Drive. Refer section 2.8 for adapter and cable information. The slim FDD adapter and 34 pin FDD cable may have already been preinstalled in the system

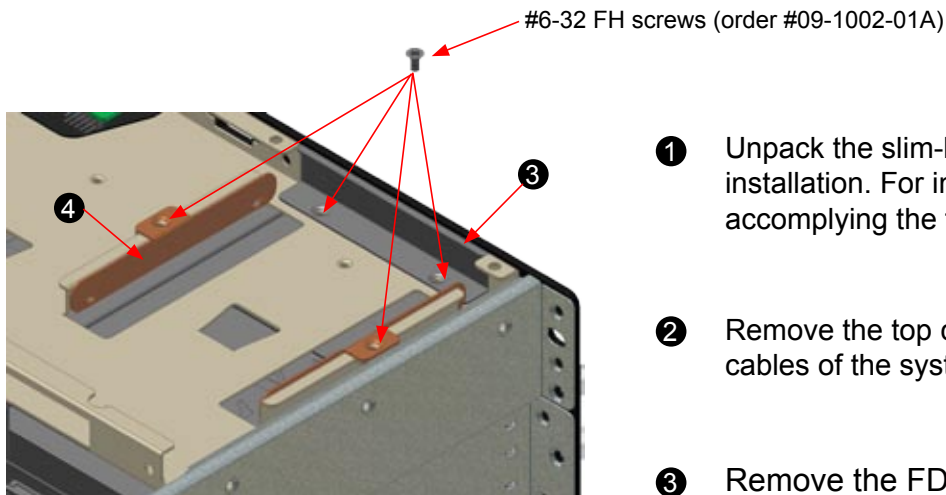


Figure 102 Remove the FDD cover plate and mounting bracket

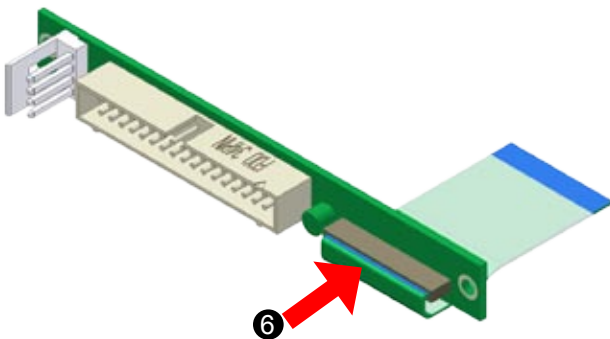


Figure 103 Connect 26-pin cable into the FDD adapter board

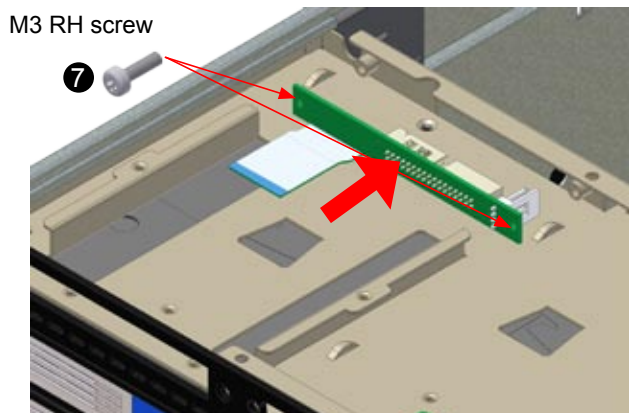


Figure 104 Mount the slim FDD adapter board into the chassis

- ① Unpack the slim-line floppy disk drive and prepare it for installation. For instructions, see the documentation accompanying the floppy drive
- ② Remove the top cover (see section 3.1.1) Disconnect cables of the system if necessary
- ③ Remove the FDD cover plate (order # 06-0110-01A) by unscrew the two #6-32 FH screws (order # 09-1002-01A) as shown
- ④ Remove the slim FDD mounting rail by untighten the two #6-32 FH screws (order # 09-1002-01A) as shown
- ⑤ Put the slim FDD cover plate and the screws in the accessories box
- ⑥ Connect the high density 26 pin flat cable into the slim-line FDD adapter board with the orientation as shown.
- ⑦ Install the slim-line FDD adapter board into the chassis as shown with the two M3 Round Head screws (order #09-1012-01A that come with the

User Manual ESR 312, 316, 420, 424, 524, 528

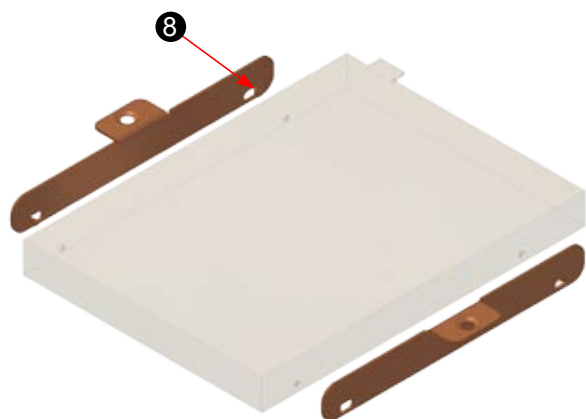


Figure 105 Assembly the FDD into the mounting bracket

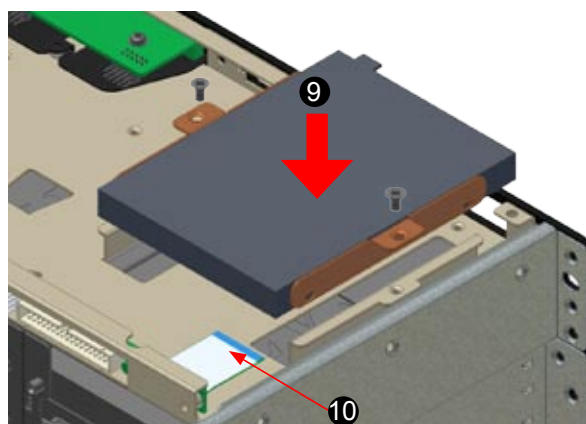


Figure 106 Install the slimline FDD into the chassis

- ⑧ Snap in the slim FDD mounting rail latch fingers into the slim FDD mounting holes as shown
- ⑨ Carefully put the assembled slim FDD with rail back into the chassis and secure it with the two FH screws
- ⑩ Connect the high density 26 pin flat cable into the slim FDD drive and push in the placement latch to secure the drive
 - Ⓐ Open the connector on the rear of the FDD by pulling up on the connector cover
 - Ⓑ Insert one end of the 26 pin flat cable end into the connector
 - Ⓒ Push down on the connector cover to lock the cable down into place.
- ⑪ Install the 34 pin FDD cable (order #17-1004-01A) from the slim FDD adapter board and the mini 4 pin cable (order # 17-1018-01A)
- ⑫ Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)

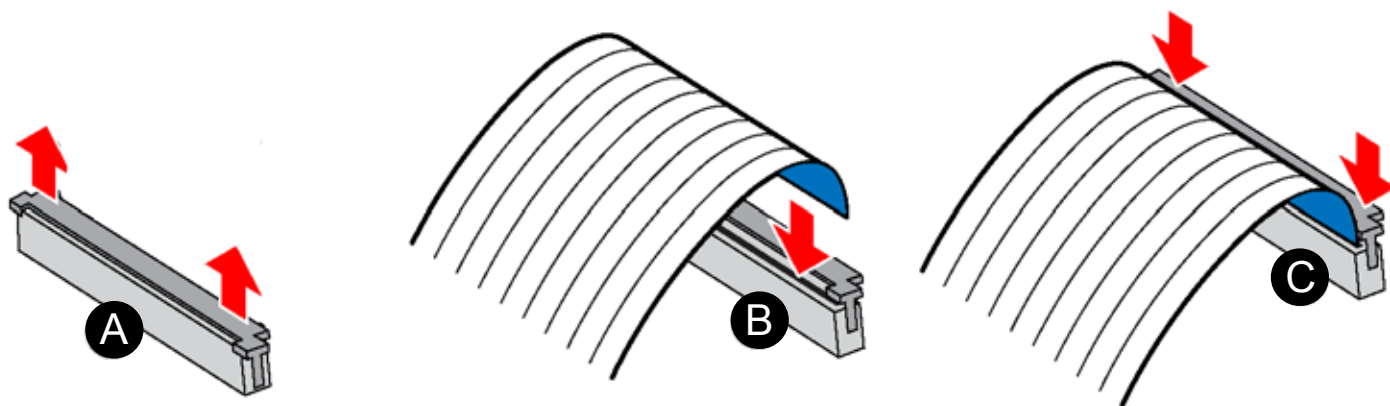


Figure 107 Connect the 26-pin high density cable into the slimline FDD

User Manual ESR 312, 316, 420, 424, 524, 528

3.9 Installing a Slim CD/DVD-Rom Drive



Before you perform this procedure, read the safety instructions of this manual

All the system configured with the ESR series storage chassis can support slim-line CD/DVD-Rom Drive. Refer section 2.9 for adapter and cable information.

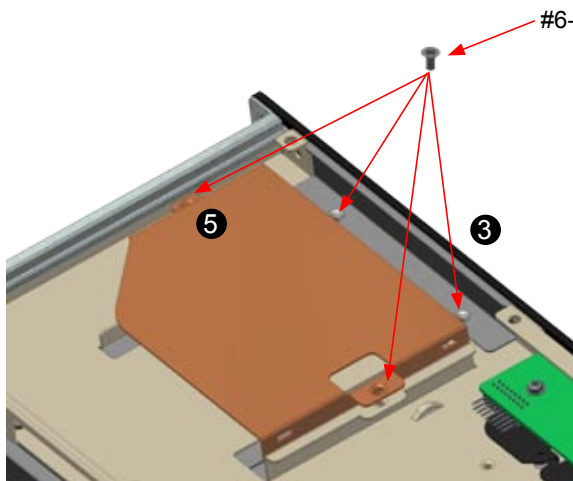


Figure 108 Remove the CD-Rom covering plate and mounting bracket

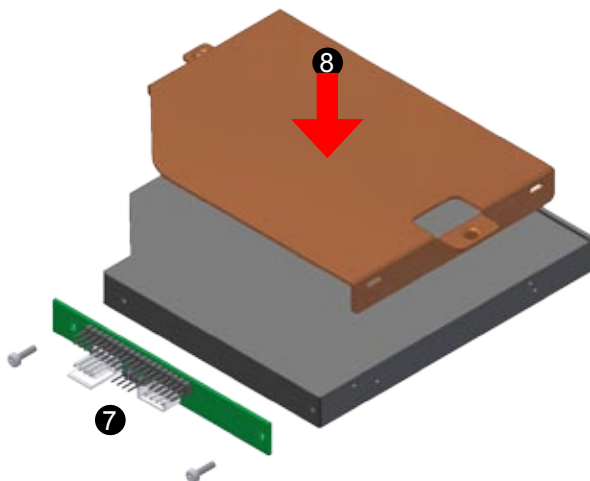


Figure 109 Install the slim-line CD-Rom into the mounting bracket and adapter board

- ❶ Upack the slim CD/DVD-Rom drive and prepare it for installation. For instructions, see the documentation accompanying the floppy drive
- ❷ Remove the top cover (see section 3.1.1) Disconnect cables of the system if necessary
- ❸ Remove the CD/DVD-Rom cover plate (order # 06-0112-01A) by unscrew the two #6-32 FH screws (order # 09-1002-01A) as shown
- ❹ Put the slim CD/DVD-Rom cover plate and the screws in the accessories box
- ❺ Remove the slim CD/DVD-Rom mounting bracket by untighten the two #6-32 FH screws (order # 09-1002-01A) as shown
- ❻ Take out the slim CD/DVD-Rom adapter board (order # 16-0105-01A) from the accessories box. Connect the adapter board to the slim CD/DVD-Rom drive.
- ❼ Secure the adapter board to the slim CD/DVD-Rom drive by the two screws provided.
- ❽ Insert the slim CD/DVD-Rom drive into the mounting bracket and snap in the fingers into the slim CD/DVD-Rom mounting holes

User Manual ESR 312, 316, 420, 424, 524, 528

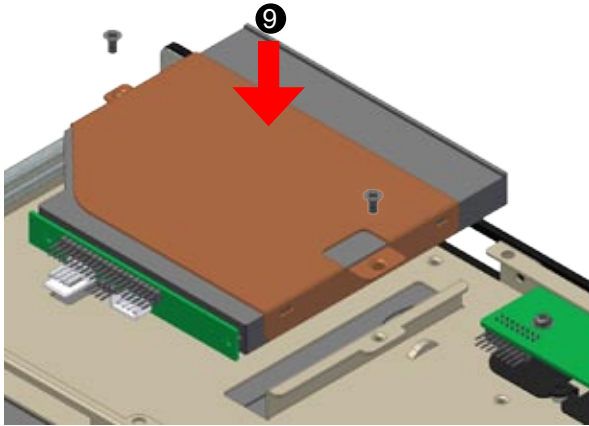


Figure 110 Install the slim CD-Rom into the chassis

- ⑨ Carefully put the assembled slim CD/DVD-Rom drive back into the chassis and secure it with the two FH screws
- ⑩ Connect the 40pin IDE cable (order # 17-1003-01A) to the adapter board and connect the slim power board mini 4 pin connector to the adapter board
- ⑪ Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.10 Installing the Rear Panel Fan



Before you perform this procedure, read the safety instructions of this manuel

All the system configured with the ESR series storage chassis can put in two additional rear fan. The size of the rear fans is 60mm (WxH) x 38mm (D) (order # 18-1004-01A)



Fan Guide must be installed in the fan. The fan blade will cut your fingers if it is not installed.

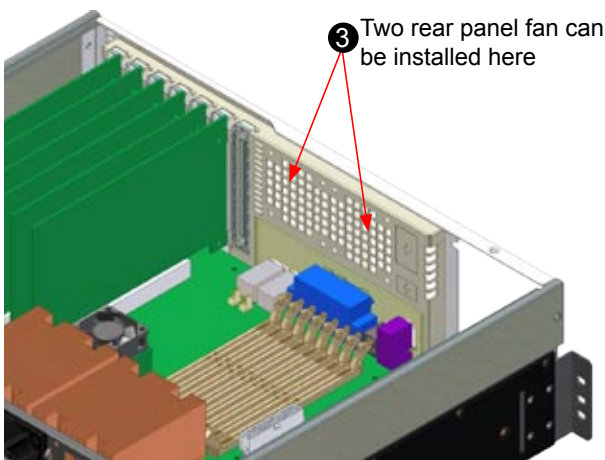


Figure 111 Location of the rear exhaust fans

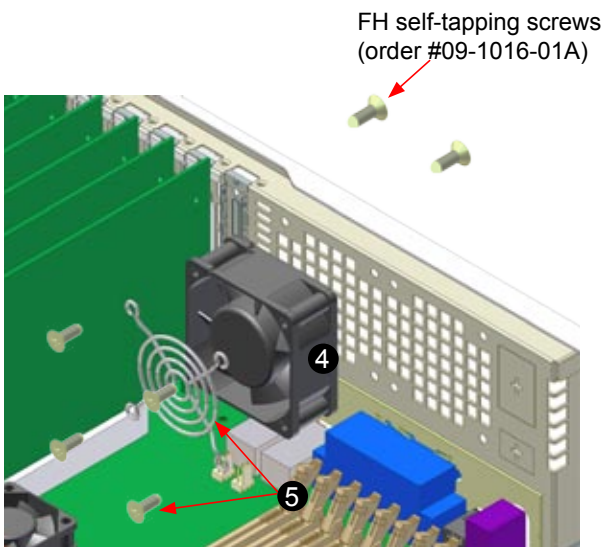


Figure 112 Install the rear fan into the chassis

- ① Open the rear fan from its package.
- ② Remove the top cover (see section 3.1.1)
- ③ Put the fan into the rear panel fan mounting area as shwon
- ④ Install the fan into the rear panel by four flat head self-tapping screws (order # 09-1016-01A) as shown
- ⑤ If the fan guide has not installed in your rear panel fan, use four flat head self-tapping screws (order # 09-1016-01A) to secure it into the fan as shown.
- ⑥ Connect the 3pin fan cable to the system fan header. See the documentation of the system board.
- ⑦ Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)

User Manual ESR 312, 316, 420, 424, 524, 528

3.11 Replacing the Hot-Swap System Fan



Before you perform this procedure, read the safety instructions of this manual

All the system configured with the ESR series storage chassis can provide with two 120mm long life high quality ball-bearing fan. If the fan failed, the monitor of the System Board will detect the failed signal that will trigger the alarm and fan failed LED on the front panel. The fan failed signal can be feedback to the system board through the front panel I/O cable (order #17-1014-01A) SMB header or through the PWM fan signal cable (order # 17-1015-01A) See section 2.2.5

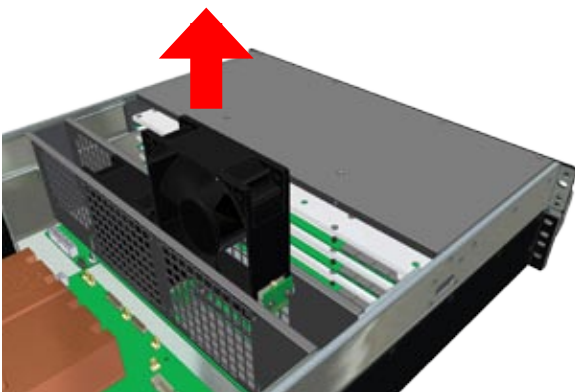


Figure 113 Pulling out the hot-swap system fan

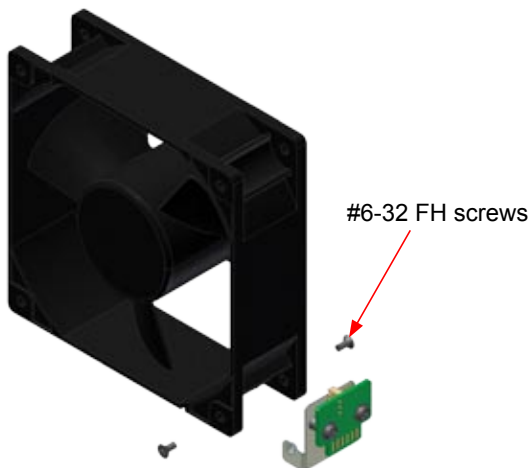


Figure 114 Install the fan into the fan edge board

- ❶ Open the rear fan from its package.
- ❷ Remove the top cover (see section 3.1.1)
- ❸ Identify the failed fan from the system and pull out the defected fan as shown.
- ❹ Remove the 3 pin fan connector (4 pin for PWM fan) from the fan edge board (order #16-0106-01A) See section 2.13
- ❺ Remove the fan edge board assembly by taking the two mounting screws (order #09-1002-01A) as shown
- ❻ Install the new fan into the edge board assembly and reserve the step above to install it back to the system
- ❼ Make sure no tools or parts are left in the chassis and close the top cover (section 3.1.2)



NOTICE: After installing a new fan, allow several seconds for the system to recognize the fan and determine whether it is working properly. The fan failed indicator and alarm will turn off to signify that the fan is functioning properly. Refer section 1.3 for indicator functions.

User Manual ESR 312, 316, 420, 424, 524, 528

3.12 Replacing the Hot-Swap Power Supply Modular



Before you perform this procedure, read the safety instructions of this manual



The only way to disconnect power completely is to unplug the power cord



When connecting or disconnecting a cable, always hold the cable by its connector, the plug, not the cord



Never force a connector into a port. If the connector and port do not join with reasonable ease, they probably don't match.



Never open the power supply modular for any reason.



NOTICE: The power supplies are hot-pluggable. The system requires two (three for the 1350W model) power supply modulars to be installed for the system to operate normally. The system is in the redundant mode when all power supplies are installed. Remove and replace only one power supply at a time in a system that is powered on.

3.12.1 Replacing the 650W 2+1 Hot-Swap Power Supply Modular (order # 22-0001-01A)

The ESR-316 chassis uses 650W 2+1 redundant power supply, follow the instruction below for procedures to replacing the power supply modular.

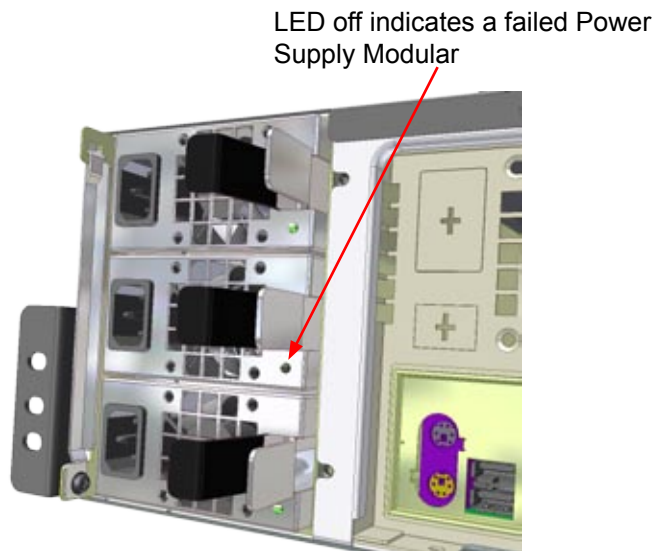


Figure 115 Identify the defected power supply modular

- ❶ Remove the packaging from the new power supply modular and set it near the back of the system
- ❷ Locate the power supply modular need to be replaced, by examining the individual LED on the back of the power supply modular as shown, if LED without light, it indicates this modular is defective and need to be replaced.
- ❸ Unplug the AC power cord from the power supply modular you want to replace



Please perform the above step carefully, replacing a non-defective power supply modular may casue shut down the whole system.

User Manual ESR 312, 316, 420, 424, 524, 528

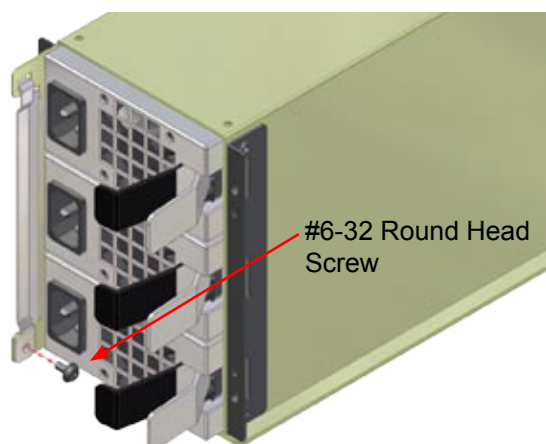


Figure 116 Remove the screw that secure the 650W PSU



Figure 117 Remove the displacement bar of the 650W PSU

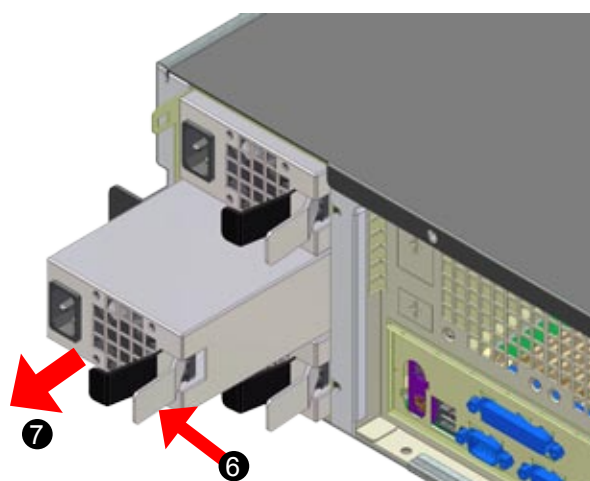


Figure 118 Pull out the PSU modular from its housing

- 4 Unscrew the #6-32 round head screw on the displacement bar that secure the power supply modular as shown

- 5 Remove the displacement bar from the power supply and put it aside.

- 6 Squeeze the latch at the right side of the power-supply handle as shown to release the latch locking mechanism

- 7 Pull the power supply modular straight out to clear the chassis



The temperature on the surface of the power supply modular maybe around 120F to 140F depends on your environmental temperature, wear glove to protect you from burning.



DO NOT reach inside the system when removing a power supply or when the unit is out of the system

User Manual ESR 312, 316, 420, 424, 524, 528


- ⑧ Hold the new power supply modular by two hands and carefully slide it into the system until it clicks into the place.
- ⑨ Reserve STEP 5 and STEP 4 to secure the power supply modular into the system .
- ⑩ Attach the power cord to the back of the new power supply and to the power source.
- ⑪ Check the LED which indicates the new power supply modular and it should lit green



NOTICE: After installing a new power supply, allow several seconds for the system to recognize the power supply and determine whether it is working properly. The power- on indicator will turn green to signify that the power supply is functioning properly Refer section 1.3 for indicator functions.

3.12.2 Replacing the 930W 2+1 Hot-Swap Power Supply Modular (order # 22-0003-01A)

The ESR-420/425/524/528 chassis uses 930W 2+1 redundant power supply, follow the instruction below for procedures to replacing the power supply modular.

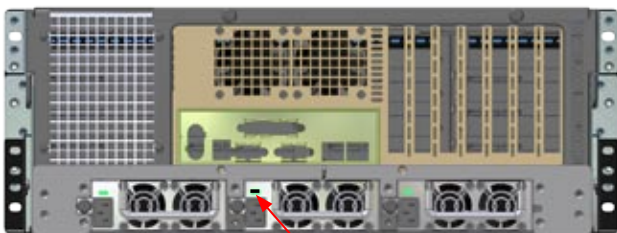

LED off indicates a failed Power Supply Modular

Figure 119 Identify the defected PSU unit

- ① Remove the packaging from the new power supply modular and set it near the back of the system
- ② Locate the power supply modular need to be replaced, by examining the individual LED on the back of the power supply modular as shown, if LED without light, it indicates this modular is defective and need to be replaced.
- ③ Unplug the AC power cord from the power supply modular you want to replace

User Manual ESR 312, 316, 420, 424, 524, 528

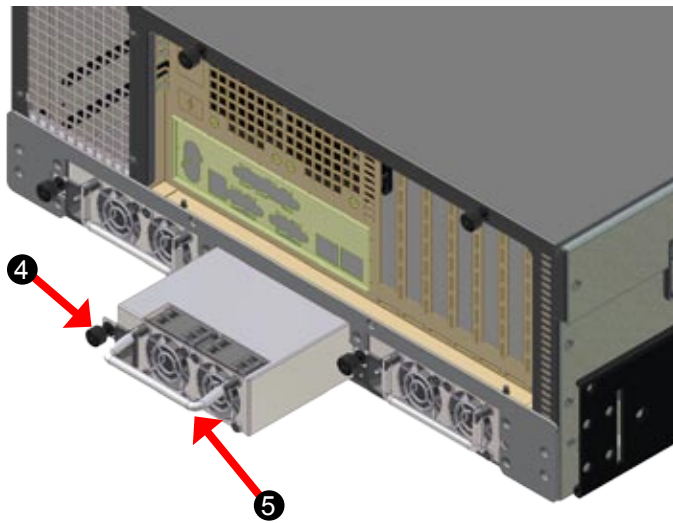


Figure 120 Install the 2.5" to 3.5" IDE adapter

- ④ Unscrew the thumb screw of the defected power supply modular
- ⑤ Rotate the power-supply handle up and pull the power supply modular straight out from the chassis



The temperature on the surface of the power supply modular maybe around 120F to 140F depends on your environmental temperature, wear glove to protect you from burning.



DO NOT reach inside the system when removing a power supply or when the unit is out of the system

- ⑥ Hold the new power supply modular by two hands and carefully slide it into the system until it clicks into the place.
- ⑦ Reserve STEP 5 and STEP 4 to secure the power supply modular into the system .
- ⑧ Attach the power cord to the back of the new power supply and to the power source.
- ⑨ Check the LED which indicates the new power supply modular and it should lit green



NOTICE: After installing a new power supply, allow several seconds for the system to recognize the power supply and determine whether it is working properly. The power-on indicator will turn green to signify that the power supply is functioning properly Refer section 1.3 for indicator functions.

User Manual ESR 312, 316, 420, 424, 524, 528

3.12.3 Replacing the 1350W 3+1 Hot-Swap Power Supply Modular (order #22-0004-01A)

The ESR-524/528 chassis uses 1350W 3+1 redundant power supply, follow the instruction below for procedures to replacing the power supply modular.



LED off indicates a failed Power Supply Modular

Figure 121 Identify the failed PSU modular

- 1 Remove the packaging from the new power supply modular and set it near the back of the system
- 2 Locate the power supply modular need to be replaced, by examining the individual LED on the back of the power supply modular as shown, if LED without light, it indicates this modular is defective and need to be replaced.

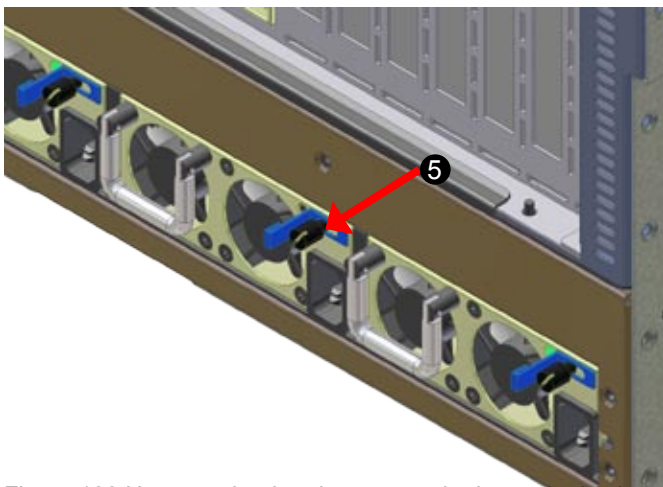


Figure 122 Unscrew the thumb screw and release the latch

- 3 Unplug the AC power cord from the power supply modular you want to replace
- 4 Unscrew the thumb screw of the defected power supply modular
- 5 Push in the latch locate next to the thumb screw to release the latch locking mechanism
- 6 While holding the latch, rotate the power supply handle up until the power supply modular is released from the chassis

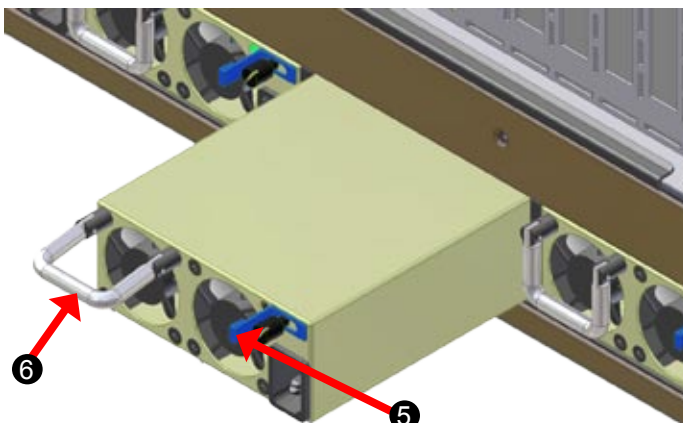


Figure 123 Pull out the modular form the housing

User Manual ESR 312, 316, 420, 424, 524, 528



The temperature on the surface of the power supply modular maybe around 120F to 140F depends on your environmental temperature, wear glove to protect you from burning.



DO NOT reach inside the system when removing a power supply or when the unit is out of the system

- ⑦ Hold the new power supply modular by two hands and carefully slide it into the system until it clicks into the place.
- ⑧ Reserve STEP 5 and STEP 4 to secure the power supply modular into the system .
- ⑨ Attach the power cord to the back of the new power supply and to the power source.
- ⑩ Check the LED which indicates the new power supply modular and it should lit green



NOTICE: After installing a new power supply, allow several seconds for the system to recognize the power supply and determine whether it is working properly. The power- on indicator will turn green to signify that the power supply is functioning properly Refer section 1.3 for indicator functions.

User Manual ESR 312, 316, 420, 424, 524, 528

3.13 Replacing the Backplane Board



Before you perform this procedure, read the safety instructions of this manual



When connecting or disconnecting a cable, always hold the cable by its connector, the plug, not the cord



Never force a connector into a port. If the connector and port do not join with reasonable ease, they probably don't match.

The ESR-series storage chassis support many different types of backplane boards, please refer section 2.3 to section 2.5 for backplane options. The ESR-series chassis offer easy installation and removal of the backplane boards. The following section will show the instructions for replacing the backplane board.



NOTICE: Extra care must be taken when handling and storing the backplane boards. The backplane board components can be damaged by rough handling. When removing the backplane boards from the storage system, place them on a padded surface. Never drop the backplane boards



NOTICE: Always wear a wrist grounding strap when handling equipment with static-sensitive components.

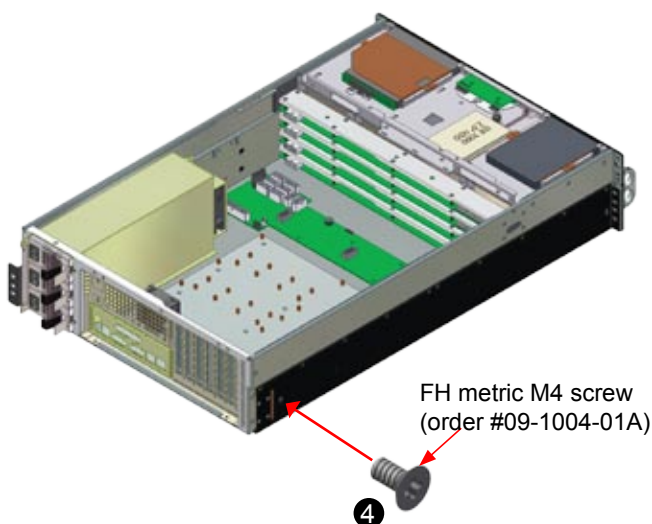


Figure 124 Remove the slide rail security screws

- ① Turn off the system and unplug of the power cables,
- ② Remove the top cover (see section 3.1.1)
- ③ Unplug the AC power cord from the power supply modular you want to replace
- ④ Remove the flat head M4 screws (order # 09-1004-01A) from both side of the chassis security the slide rail set as shown.

User Manual ESR 312, 316, 420, 424, 524, 528

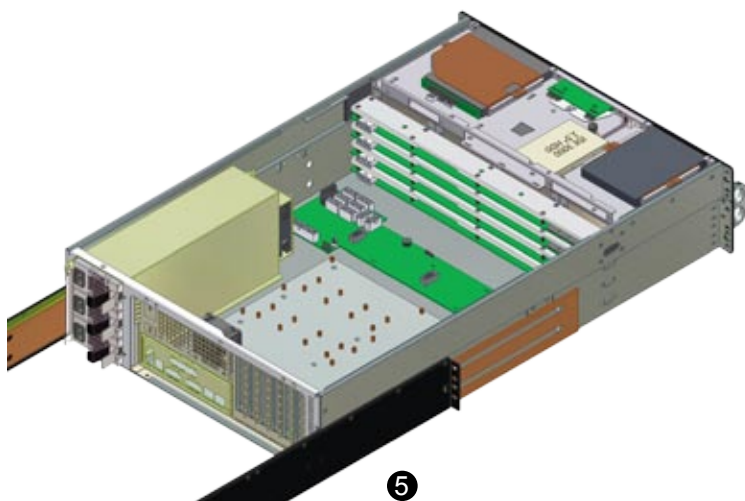


Figure 125 Fully extend the slide rail

- 5 Fully extend the slide rail set as shown, you will see mounting screws on the two sides of the chassis that support the backplane mounting bracket.
- 6 Unplug all the cables attached to the backplane boards.

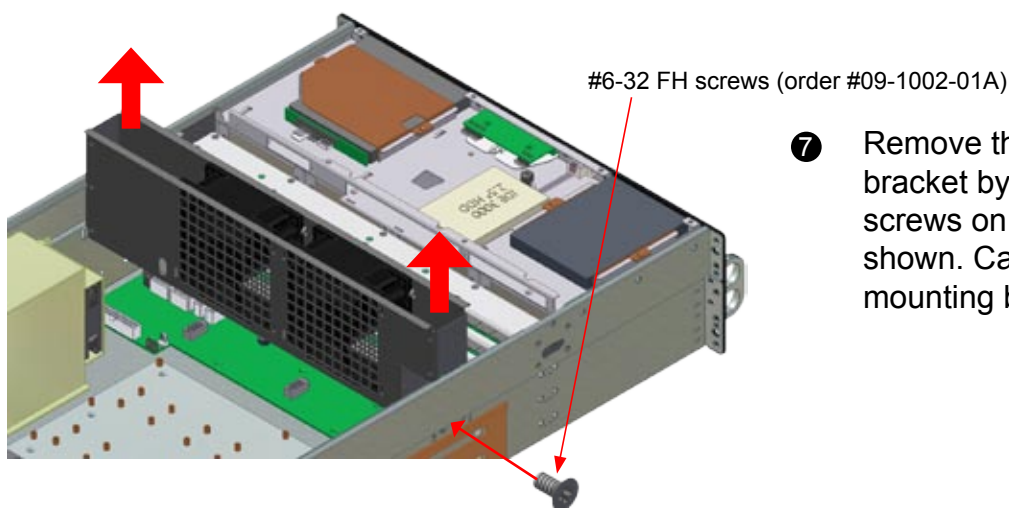


Figure 126 Remove the system fan mounting bracket

- 7 Remove the system fan mounting bracket by unscrewing the two FP #6-32 screws on both sides of the chassis as shown. Carefully lift up the system fan mounting bracket

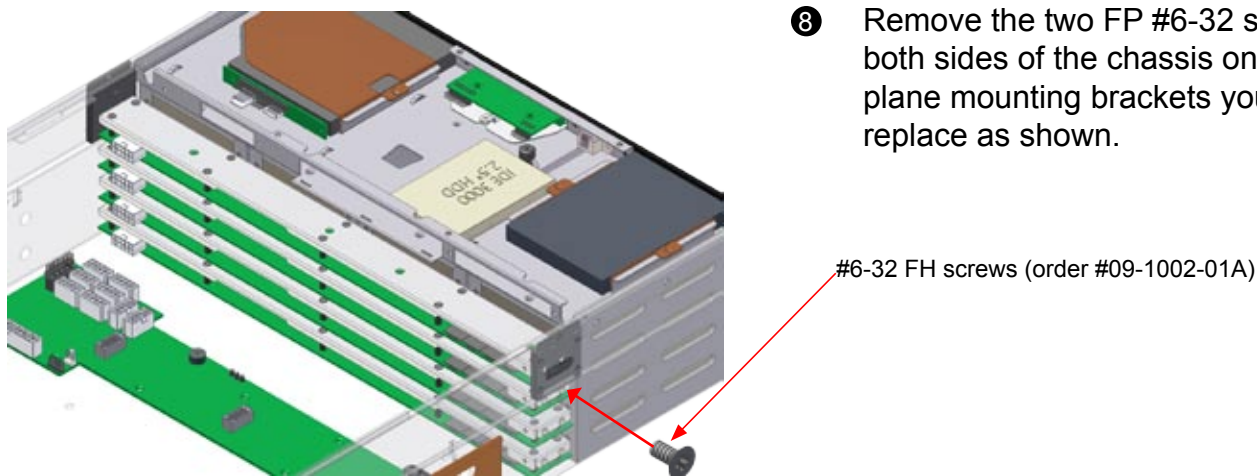


Figure 127 Remove the backplane bracket mounting screws

- 8 Remove the two FP #6-32 screws on both sides of the chassis on the backplane mounting brackets you want to replace as shown.

User Manual ESR 312, 316, 420, 424, 524, 528

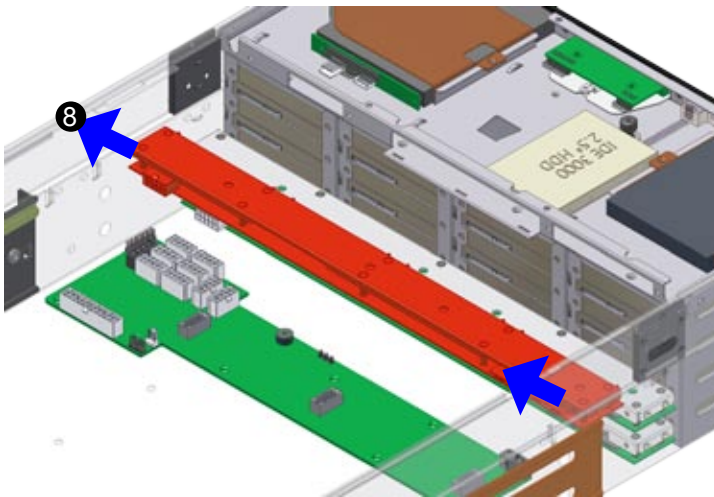


Figure 128 Take out take out the BP mounting bracket

- 9 After the mounting screws removed, carefully slide out the backplane mounting bracket, which has been highlighted in red as shown in the figure.



Figure 129 Remove the BP form its mounting bracket

- 10 Remove the ten RH #6-32 mounting screws on the backplane board and remove the backplane board away from the backplane mounting bracket.

- 11 Install the new backplane board by reserve all the step above.

User Manual ESR 312, 316, 420, 424, 524, 528

3.14 Replacing the system battery



Before you perform this procedure, read the safety instructions of this manuel

The purpose of this section is for system integrator to sumbit for product safety conformity that may required paper trail instruction on replacing system battery. The system battery maybe in your server board, the storage RAID controller or other device. Consult with the manufacturer docunmentation for futher information.

If your system require special instruction on your operator, installation and service manual that is needed by your product safety testing laboratory, please contact the author by email to sio@tstcom.com



CAUTION: There is a danger of a new battery exploding if it is incorrectly installed. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



NOTICE: If you pry the battery out of its socket with a blunt object, be careful not to touch the system board with the object. Ensure that the object is inserted between the battery and the socket before you attempt to pry out the battery. Otherwise, you may damage the system board by prying off the socket or by breaking circuit traces on the system board.

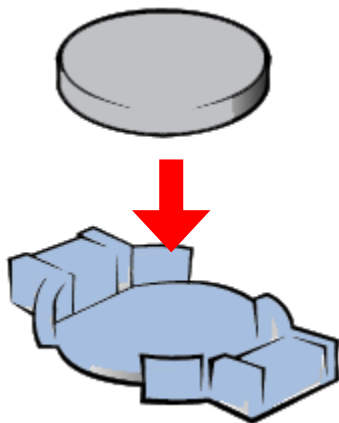


Figure 130 Replace the battery

Open the computer cover

Locate the battery socket from the server board

Remove the battery by carefully prying it out of its socket with your fingers or with a blunt, nonconducting object such as a plastic screwdriver.

Insert the new battery into the socket according to the orientation of the server board user manual, and snap the battery into place.



Battery Disposal

Do not dispose of the battery along with household waste. Contact your local waste disposal agency for the address of the nearest battery deposit site.

User Manual ESR 312, 316, 420, 424, 524, 528

4. Install the system into the rack

4.1 Rack Safety Instruction

4.1.1 Precautions for Handling the system

When configured with a full set of drives, power supply and server board, the system weighs will be over 100 pounds. Take the following precautions to avoid problems or potential injury as you handle the ESR-series storage chassis



Do not unpack, lift or carry the system by yourself. Always have another person available to help you move or lift the system



Prepare a flat, sturdy surface before taking out the chassis, the working surface that will hold the chassis should be as close as possible to the package



Both people should follow these steps to lift or move the chassis

Stand with your legs shoulder-width apart to maintain balance

Bend on your hips and knees, not at your waist

Use your leg muscles to lift

Lift with a smooth motion

Keep the chassis close to your body and at waist level to lessen the load on your back

To turn while holding the chassis, use your feet, do not twist your back

4.1.2 Precautions for installing the chassis into the Rack Cabinet



Ensure proper floor support and ensure the floor loading specification are adhered to. Failure to do so may result fatal injury to you or damage to the equipment and the facility



DO not exceed the weight limit recommended for your rack



DO not install the ESR-series chassis in a two post, or telco-style rack. These chassis cannot be mounted safely in a two-post rack.



Care should be taken to ensure a hazardous condition is not created due to uneven mechanical loading. Ensure that the entire rack assembly is properly secured. Tipping hazards may cause personal injury and death. The following guidelines are provided to ensure your safety:

When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack

If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

User Manual ESR 312, 316, 420, 424, 524, 528

This unit should be mounted at the bottom of the rack if it is the only unit in the rack.



Use caution when pressing the component rail release latches and sliding a component into or out of a rack; the slide rails can pinch your fingers.

4.1.3 Electrical Safety



An electrical outlet that is not correctly wired could place hazardous voltage on metal parts of the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.



Use one hand, when possible, to connect or disconnect signal cables to prevent a possible shock from touching two surfaces with different electrical potentials



Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.



Use only approved power cable(s). If you have not been provided with a power cable for your server, storage system, or appliance, or for any AC-powered option intended for your system, purchase a power cable that is approved for use in your country. The power cable must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.



Cleaning: Unplug your system from wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp (not wet) cloth for cleaning.

4.1.4 Thermal Dissipation Requirement



DO not install the chassis in a rack where the internal ambient temperature will exceed 95degrees F (35 degrees C)



DO not install this unit in a rack where the air flow is compromised. Any side, front, or back of the unit used for air flow through the unit must not be direct contact with the rack



NOTICE: If multiple components are installed in the rack, consider additional cooling to assure efficient operation of the system and other equipment

User Manual ESR 312, 316, 420, 424, 524, 528

4.2 Rack Mounting Hardware

The ESR-series chassis include with the slide rail on the system. The mounting hardware are located in the accessories box. Below are the mounting hardware overview. The inner slide rail has been assembled into the storage chassis.

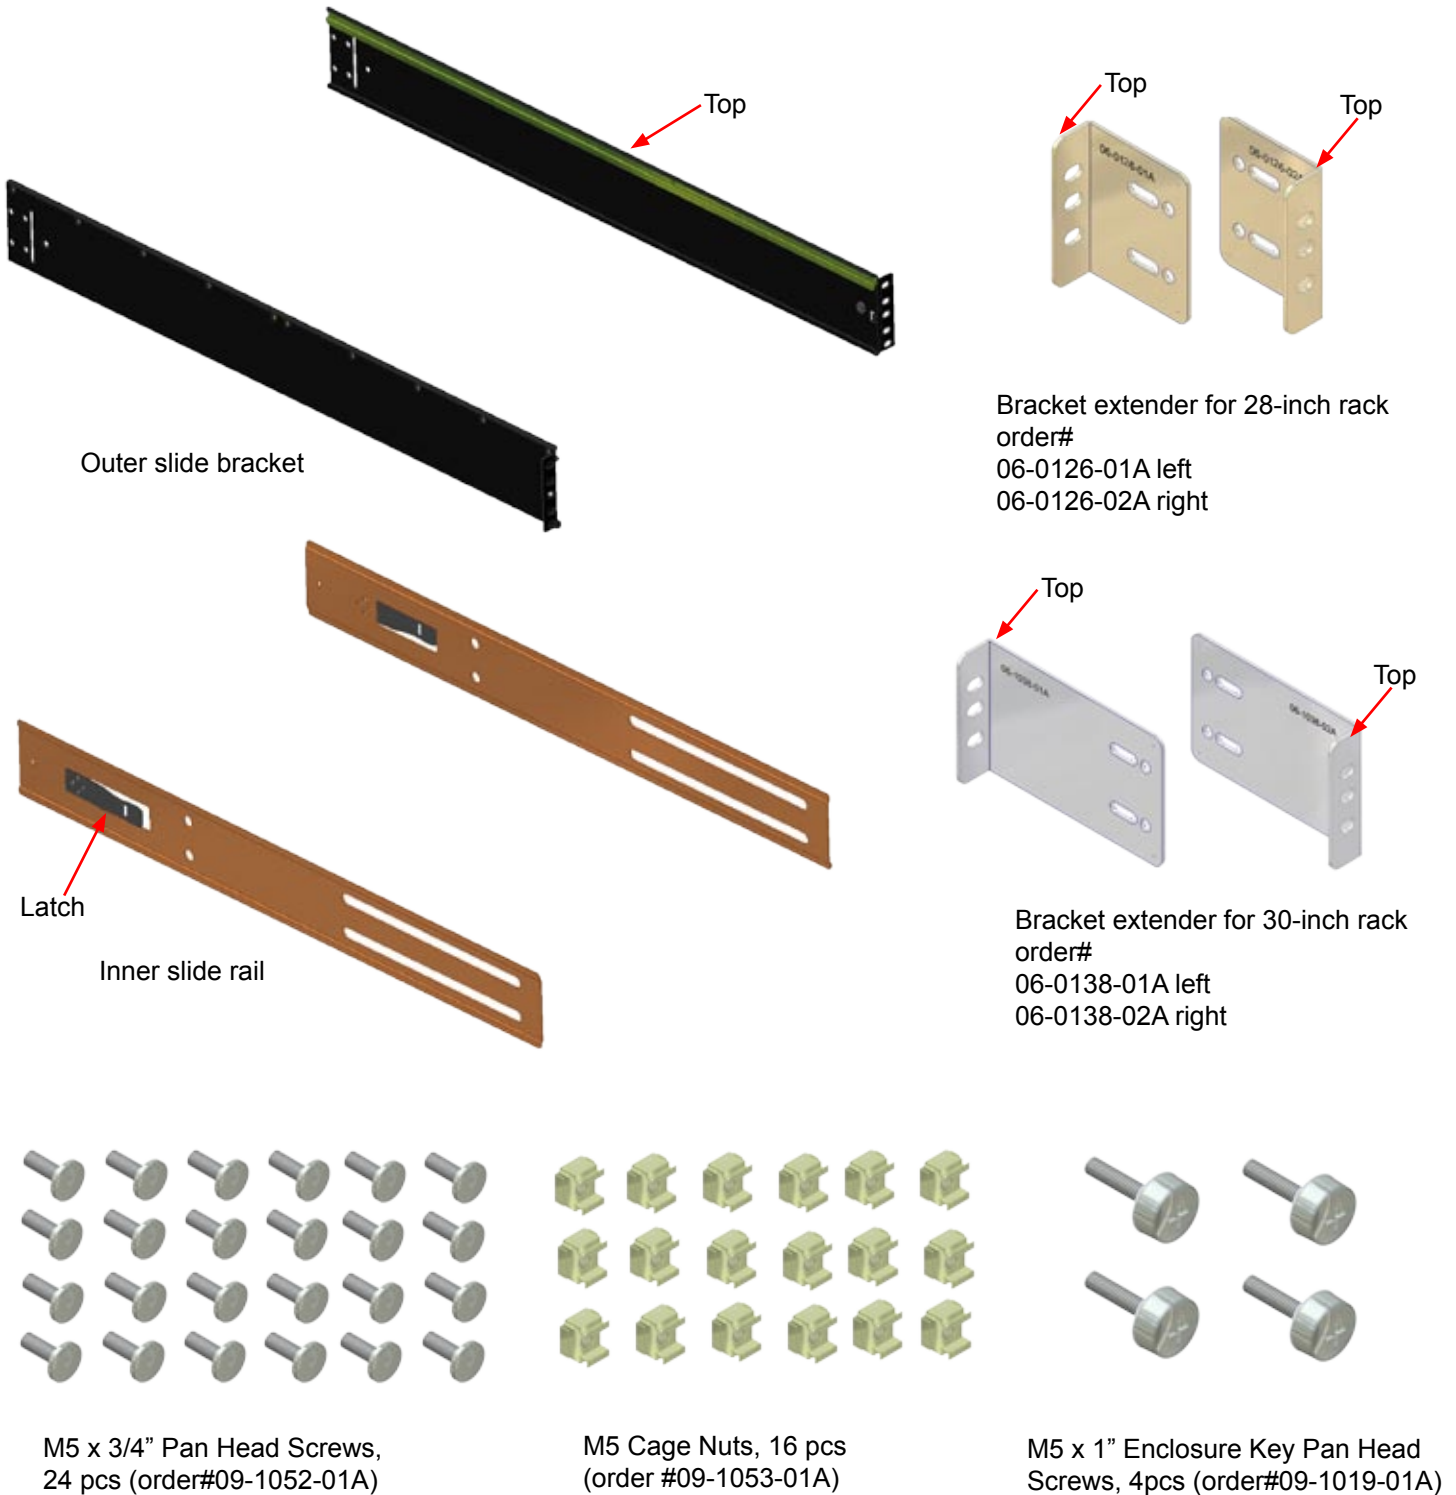


Figure 131 Rack mounting hardware list



NOTICE: The slide rail has been approved by SGS Taiwan to rehold a loading of 300lbs. SGS report number: HL20082/2005

User Manual ESR 312, 316, 420, 424, 524, 528

4.3 Install the chassis in a Rack

The ESR-series chassis is specifically designed for rack mounting. It is not designed for use as a desktop system. You can install the system in a four-post cabinet or open rack that is 19 inches wide and between 26", 28", 30" and 36" deep.

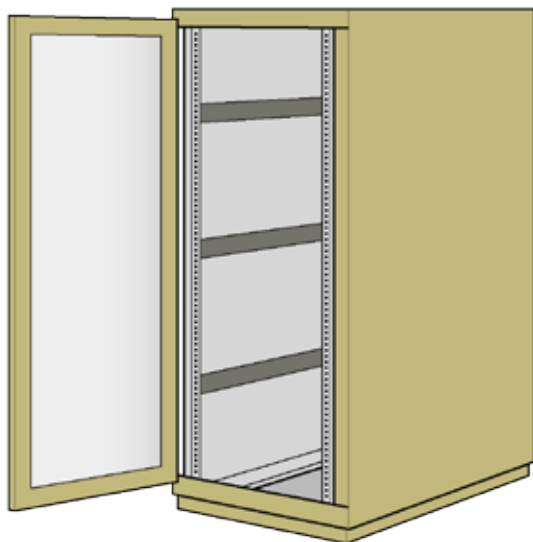


Figure 132 Four post cabinet rack

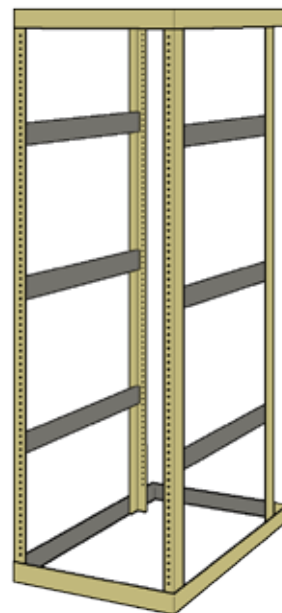


Figure 133 Four post open rack

The brackets and screws necessary to attach the system to a four-post rack with threaded holes or unthreaded round holes are included with your system

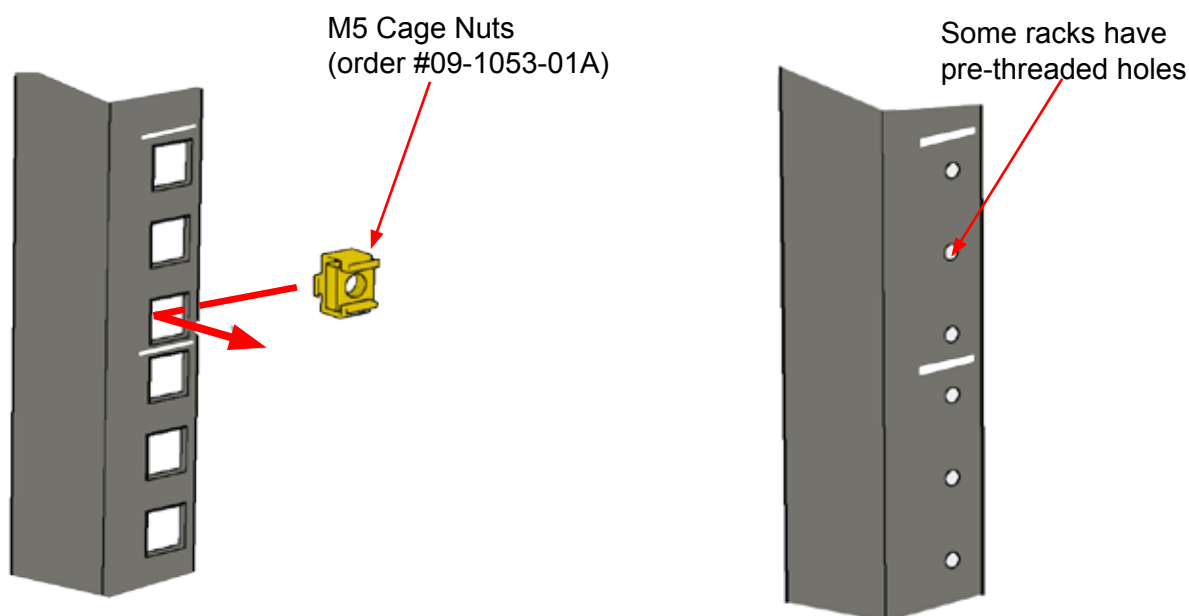


Figure 134 Rack's mounting hole types



NOTICE: Any rack used for ESR-chassis should meet the specifications of the American National Standards Institute(ANSI)/Electronic Industries Alliance(EIA) standard ANSI/EIA310-D. See your rack documentation for the rack to determine whether it is compatible with these standards

User Manual ESR 312, 316, 420, 424, 524, 528

4.3.1 Marking the rack

You must allow 1U (44mm or 1.75 inches) of vertical space for each system you install in the rack. Rack cabinets that meet EIA-310D standards have a pattern of three holes per rack unit with center-to-center holes spacing (beginning at the top holes of a 1U space) of 0.625", 0.625", and 0.5inch (in metric: 15.9mm, 15.9,, and 12.7mm) for the front and rear vertical rails. Rack cabinet usually have round or square holes.



NOTICE: Some vertical rails may be marked by horizontal lines and numbers in 1U increments. You can make a note of the number marking on the rack's vertical rail.

Following these steps to mark the rack

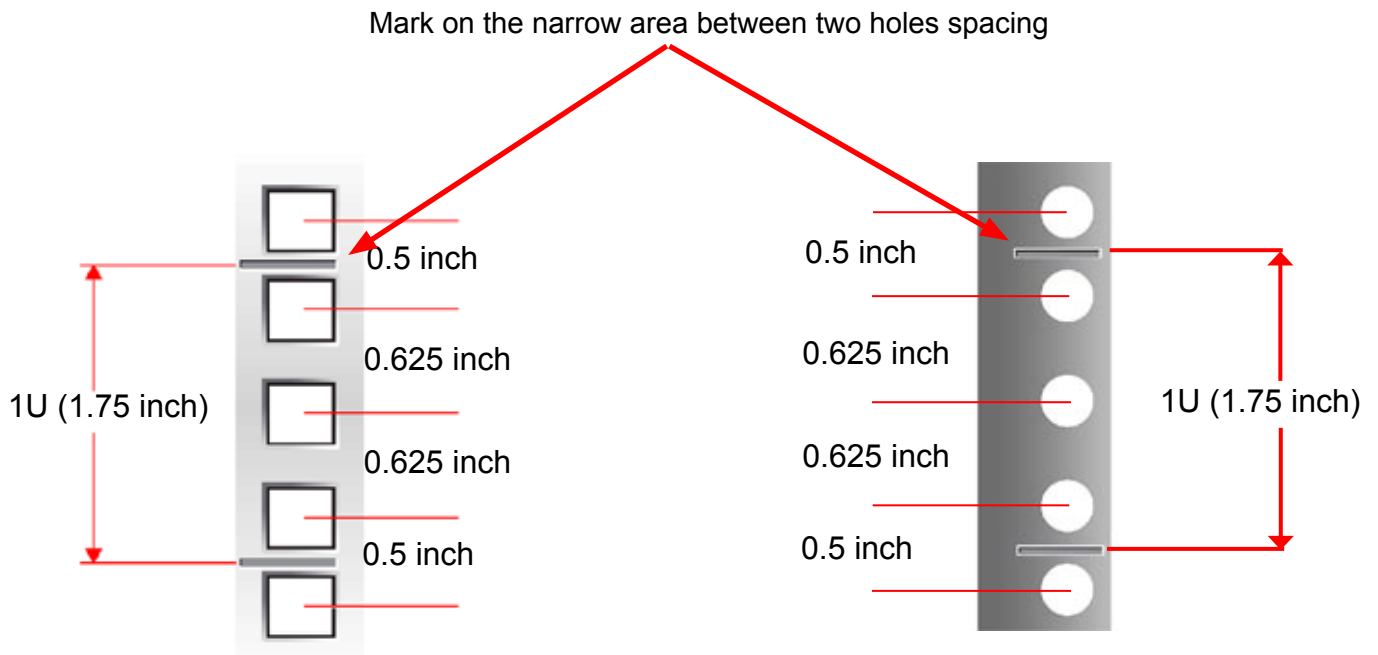


Figure 135 Marking on the rack

- 1 Place a mark on the rack's front vertical rails where you want to locate the bottom of the system you are installing in the rack cabinet
- 2 Place a mark 1.75inch above the original mark you made (or count up three holes in a rack that meets EIA-310D standards)


User Manual ESR 312, 316, 420, 424, 524, 528

4.3.2 Installing the System

To install the system in the rack, you


- 1 Assemble the brackets
- 2 Attach the brackets to the rack
- 3 Rest the system on the brackets and secure it on the rack

4.3.2.1 Assemble the brackets

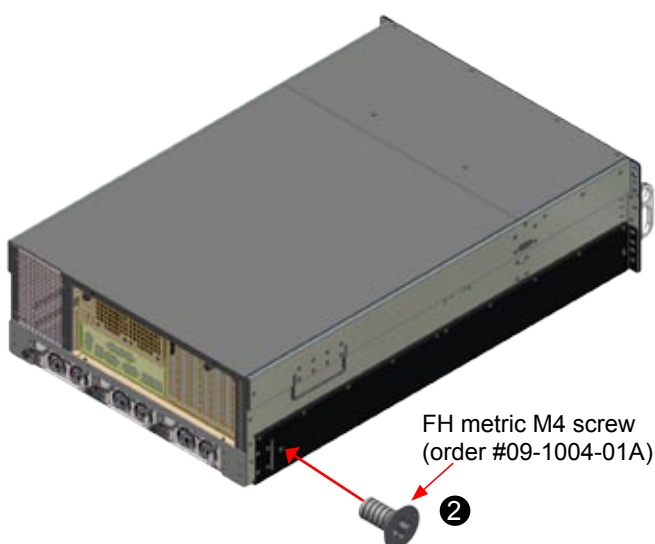

- 1 Turn off the system and unplug of the power cables,
- 2 Remove the FH metric M4 screw that secure the rail bracket on both sides of the chassis as shown

Figure 136 Removing the rack slide security screws

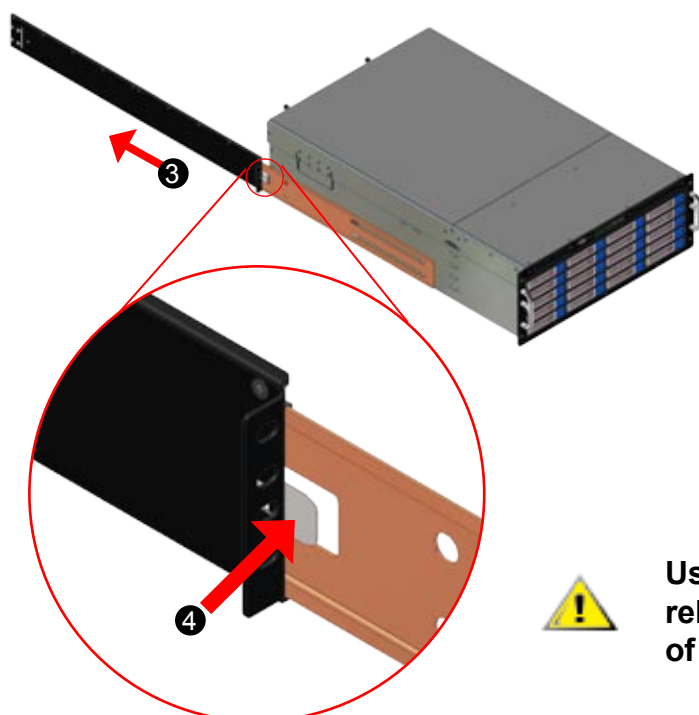

- 3 Carefully extend the outer slide bracket to the back until it reach the latch locking mechanism.
- 4 Push the latch toward the chassis to release the outer slide bracket and carefully pull out the outer slide bracket..

Use caution when pressing the component rail release latches and sliding a component into or out of a rack; the slide rails can pinch your fingers.

Figure 137 Releasing the outer slide bracket

User Manual ESR 312, 316, 420, 424, 524, 528

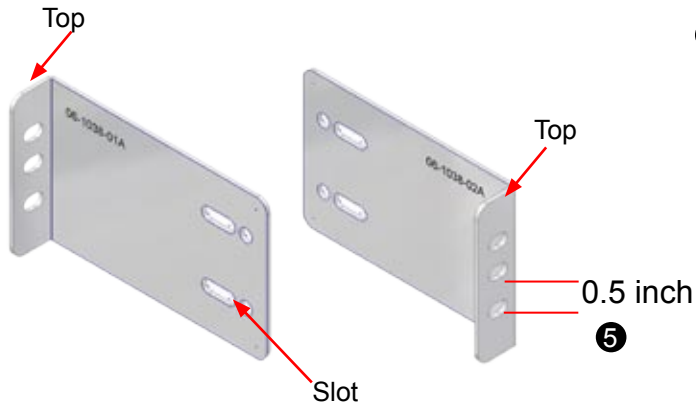


Figure 138 Bracket extenders

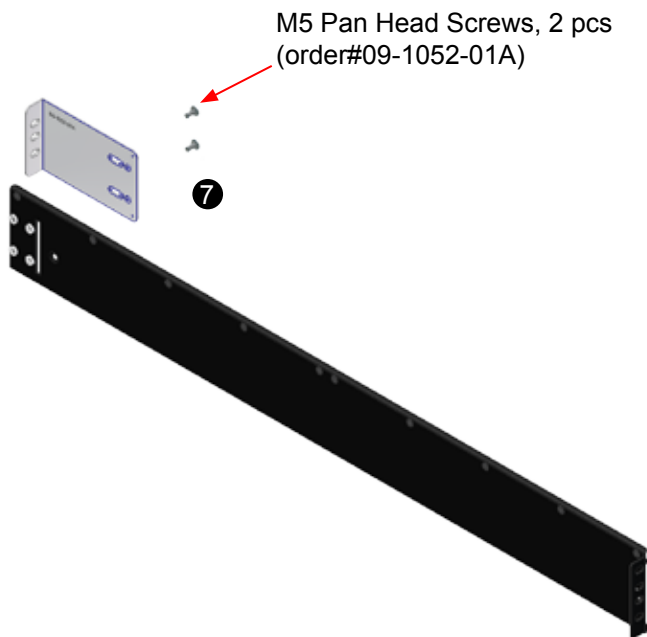


Figure 139 Assembly the outer slide rail and bracket extender

- ⑤ Depends on the deep of your rack, use the correspondence bracket extenders. Make sure you are install the bracket extenders in the right orientation, the two holes with a space of 0.5 inch apart is the top side of the bracket extenders.
- ⑥ Place the bracket extender on the rear part of the outer bracket and align the slot of the bracket extender with the mounting holes of the outer rail bracket.
- ⑦ Use the M5 Pan Head Screws (order # 09-1052-01A) Fasten but not tighten the bracket extender on to the outer slide bracket as shown
- ⑧ Repeat step 5 to step 7 for the other side of the outer slide bracket.



NOTICE: Please read the next page carefully which will help you to locate the correct location on the rack

User Manual ESR 312, 316, 420, 424, 524, 528

4.3.2.2 Assemble the brackets

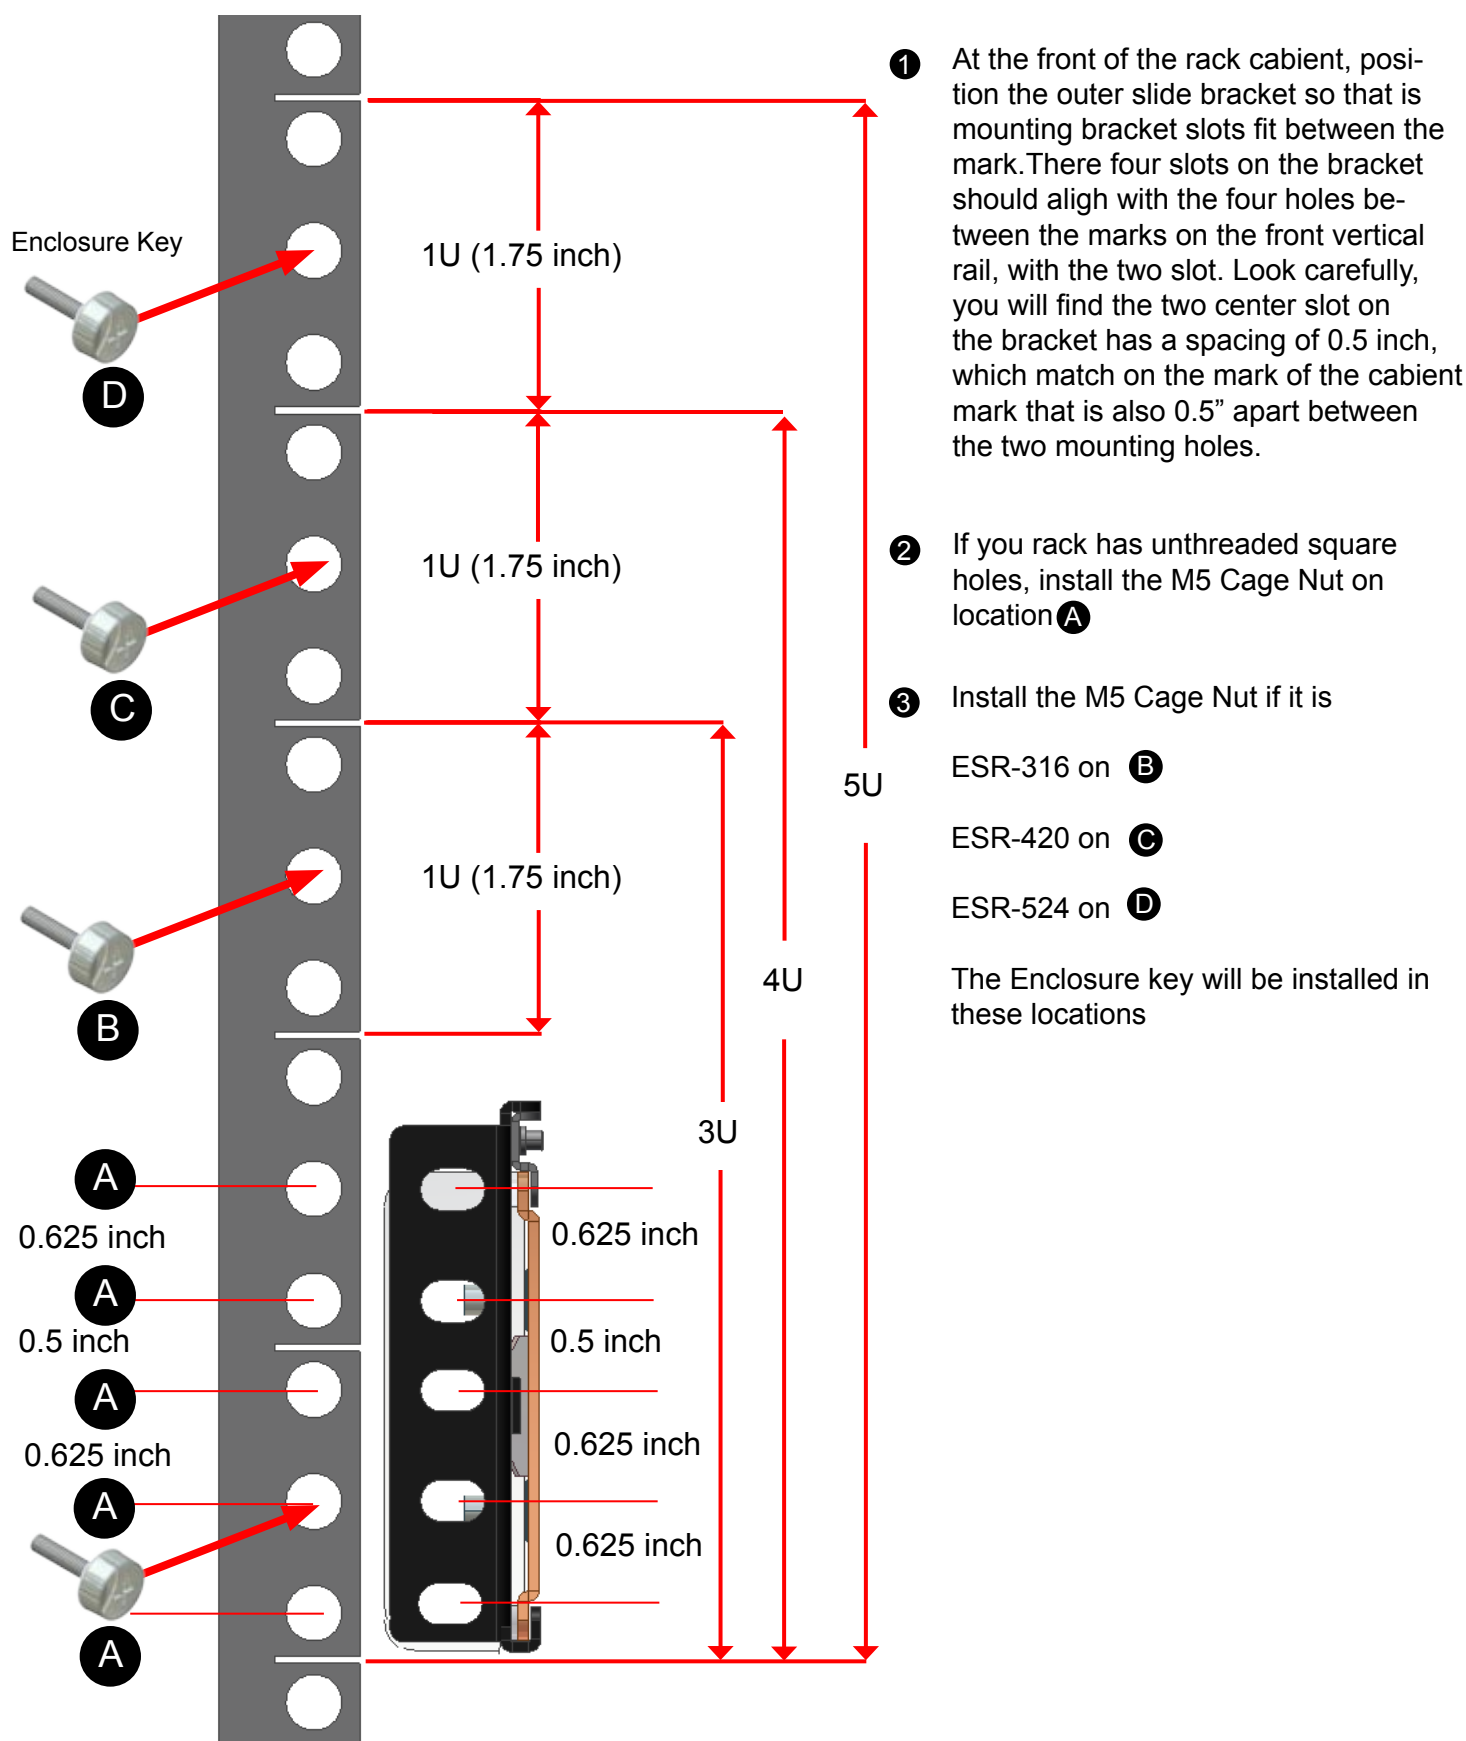


Figure 140 Position the outer slide rail into the rack

User Manual ESR 312, 316, 420, 424, 524, 528

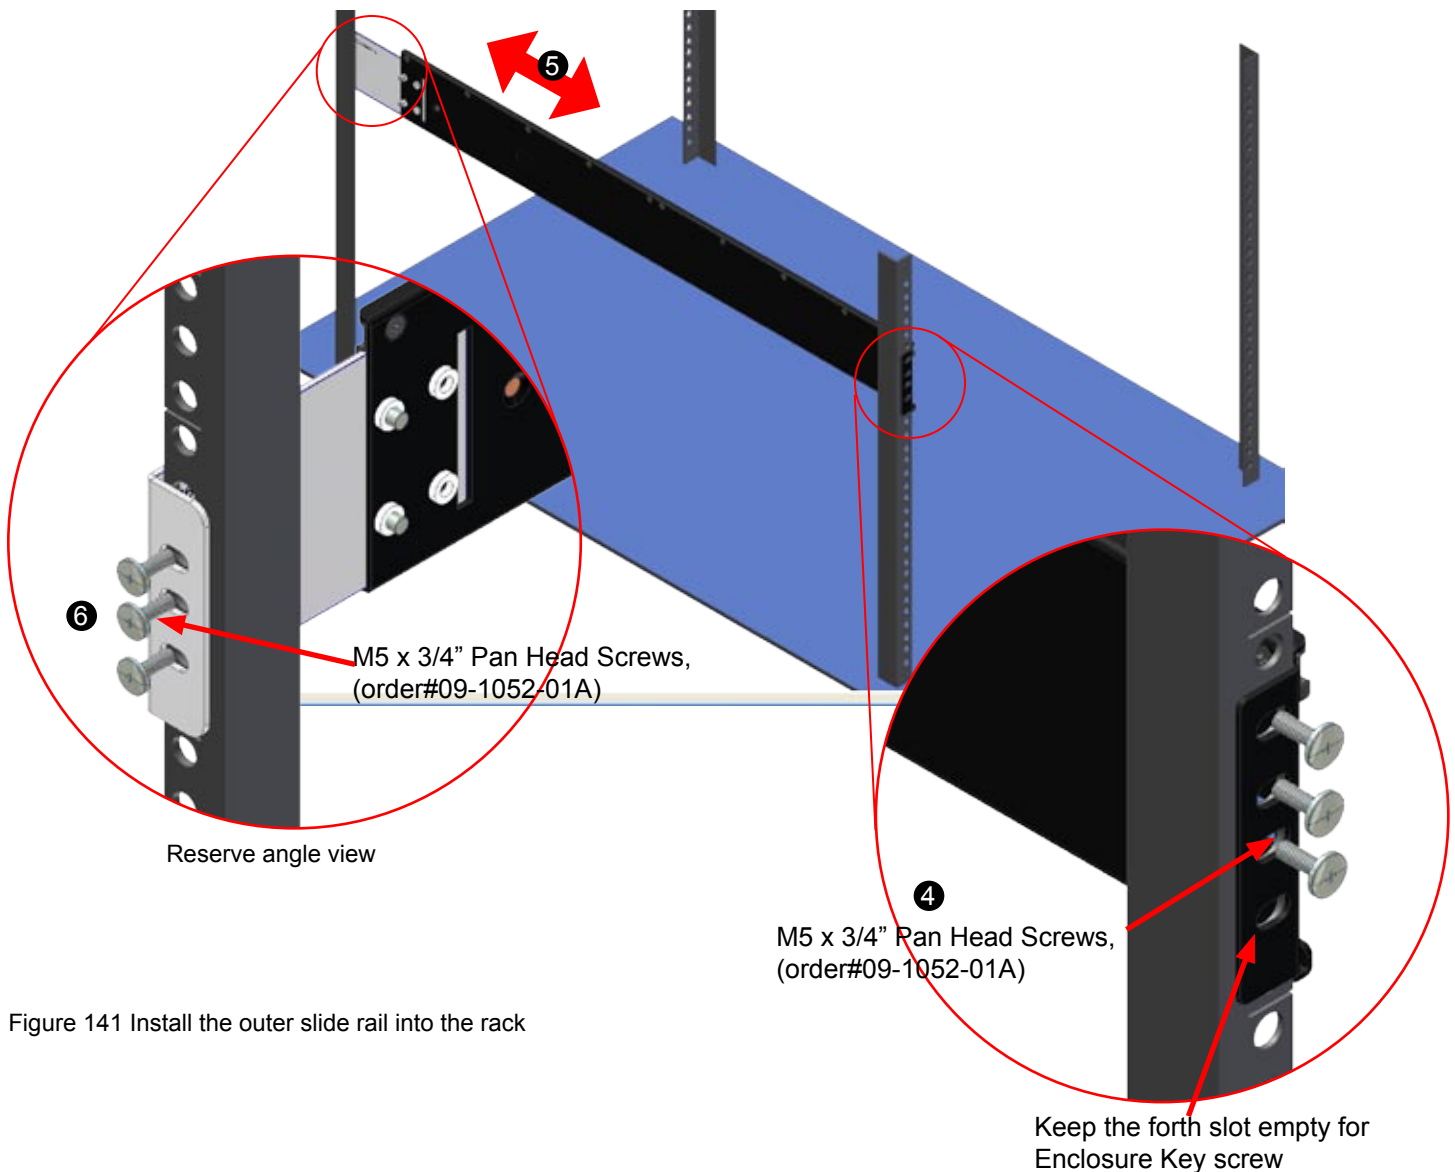



Figure 141 Install the outer slide rail into the rack

- ④ Hold the outer slide bracket against one of the front vertical rail of the cabinet at the position you marked, then, fasten and tighten three M5 x 3/4" screws (order #09-1052-01A) as shown. Leave the forth slot empty for Enclosure Key
- ⑤ At the back of the cabinet, pull back on the bracket extender until the mounting slot align with their respective holes on the back vertical rail.
- ⑥ Install three M5 x 3/4" screws (order #09-1052-01A) in the back mounting holes to secure the outer slide bracket to the back vertical rail
- ⑦ Repeat step 4 to step 7 for the outer slide bracket on the other side of the rack
- ⑧ Ensure that both of the slide bracket are mounted at the same position on the vertical rails on each side of the rack

User Manual ESR 312, 316, 420, 424, 524, 528

4.3.2.3 Reset the system on the bracket and secure it on the rack

When the brackets are secured to the rack, you can put the storage system in the rack. Follow these steps to mount the ESR-series storage system in the rack.

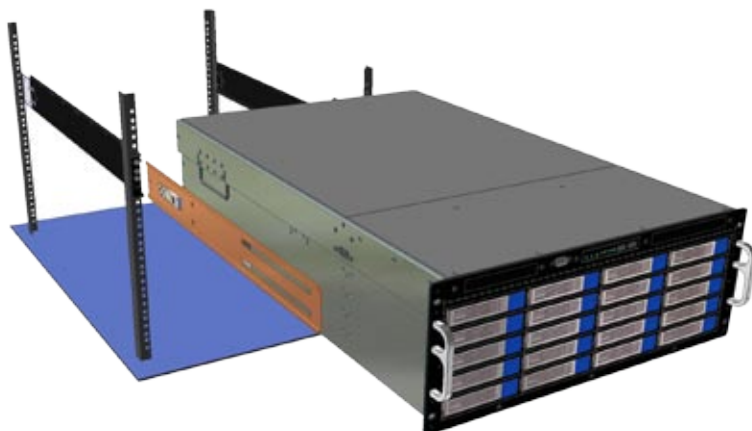

- ① With one person on each side of the system, lift the system so that the inner rail with the outer slide bracket.
- ② Engage the inner rail to the outer slide bracket slot
- ③ Push and slide the system into the rack

Figure 142 Slide in the chassis into the rack



NOTICE: After the ESR-series storage system is in the rack, check the front panel of the system and make sure that the four mounting slots are align to the rack vertical rail mounting hole. If you find the mounting holes are offset, then, the chassis is not installed in the right position. Reinstall the outer slide bracket again to the right location



Figure 143 Check the mounting holes are align to the rack

User Manual ESR 312, 316, 420, 424, 524, 528

5. Space part order information

5.1 Kit Accessories Box order # 05-1001-01A

The following compinents are included in the accessories box

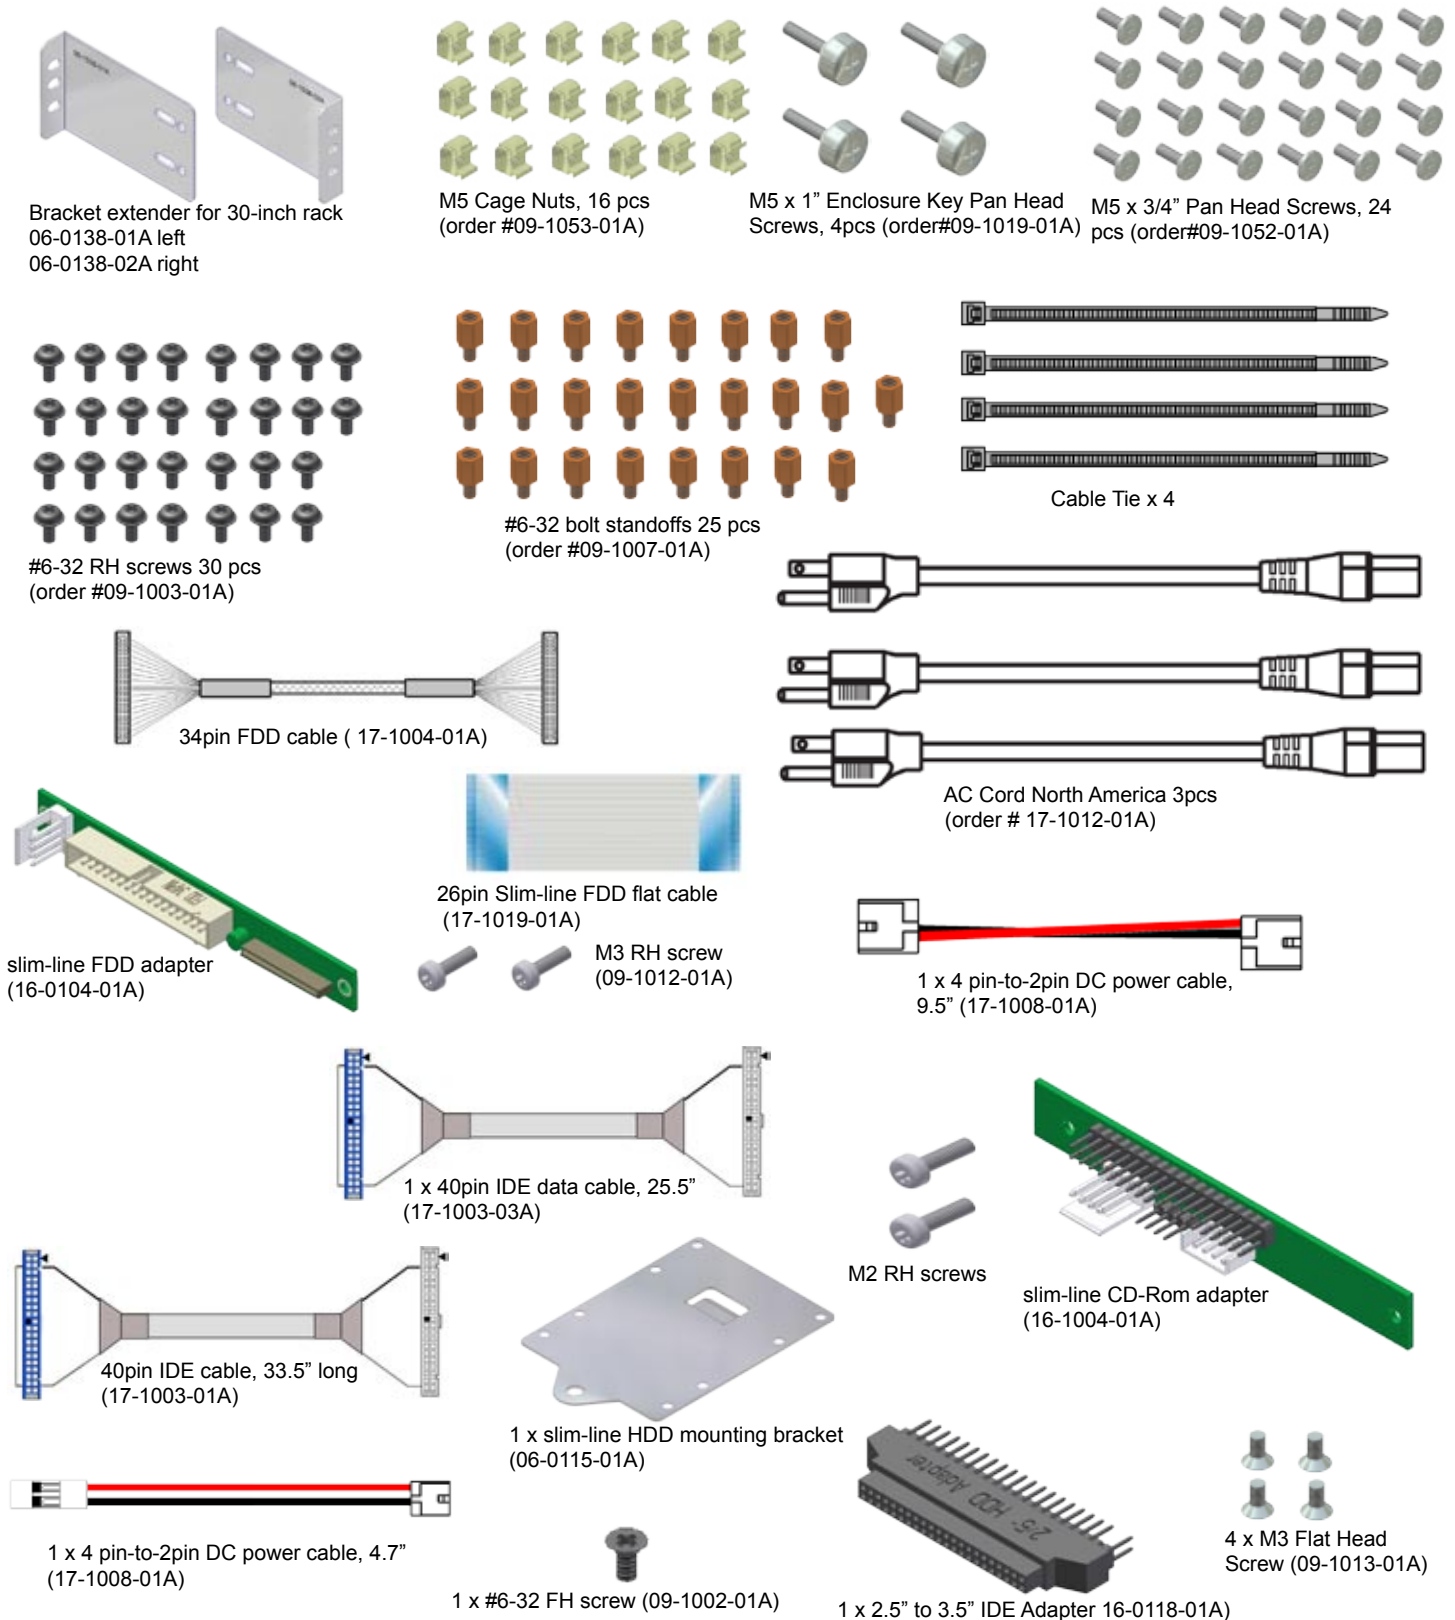


Figure 144 Kit accessories box

User Manual ESR 312, 316, 420, 424, 524, 528

5.2 Kit System Fan, 120mm x 120mm x 38mm order # 05-1002-01A


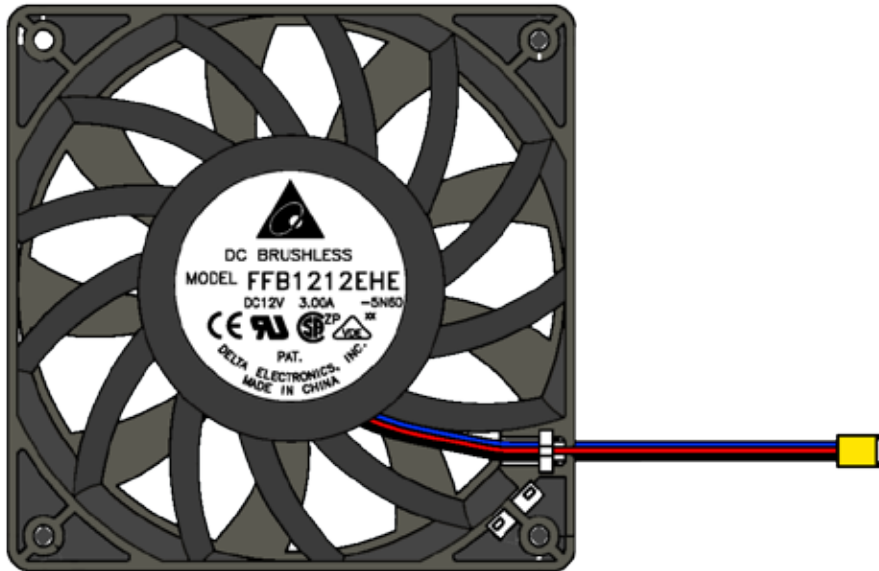


Figure 145 Kit system fan, 120x120x38mm

5.3 Kit Hard Disk Drive Carrier order #05-1003-XXA

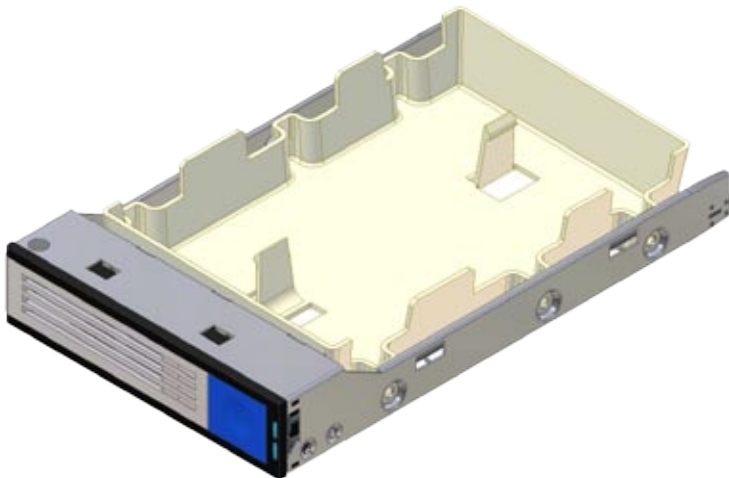


HDD Carrier Silver/Blue (03-1007-01A)

HDD Carrier Black/Black (03-1007-02A)

Figure 146 Kit hard disk drive carrier

User Manual ESR 312, 316, 420, 424, 524, 528

5.4 Kit Slim IDE Drive Kit for Drive 1 order # 05-1004-01A

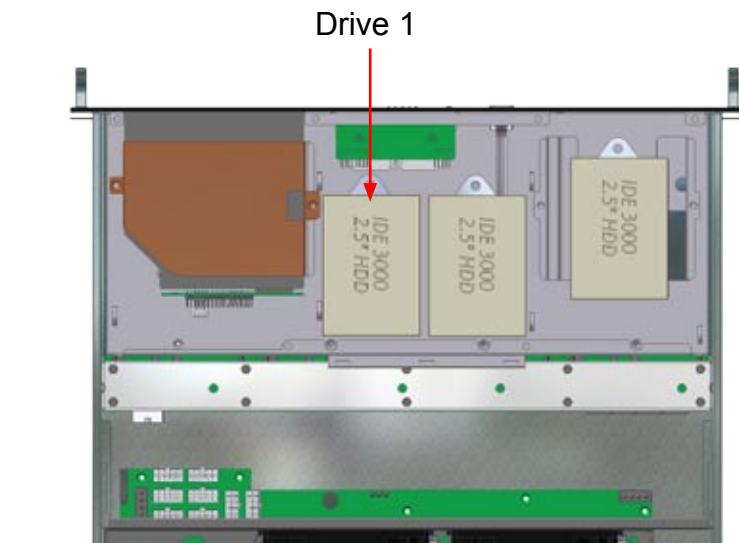

This kit contains the necessary parts to install a 2.5" slim-line IDE hard disk drive on Drive 1 of the ESR-series storage system. Refer section 3.5 on the user manual for installation instruction.

- ❶ 1 x #6-32 Flat Head Screw (09-1002-01A)
- ❷ 4 x M3 Flat Head Screw (9-1013-01A)
- ❸ 1 x 4 pin-to-2pin DC power cable, 4.7" (17-1008-01A)
- ❹ 1 x 40pin IDE data cable, 27.5" (17-1003-02A)
- ❺ 1 x 2.5" to 3.5" IDE Adapter (16-0118-01A)
- ❻ 1 x slim-line HDD mounting bracket (06-0115-01A)



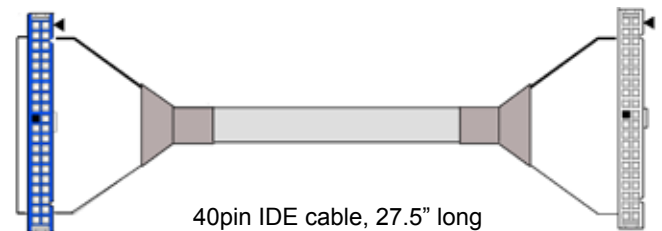


Figure 147 Kit slim IDE 2.5" to 3.5" hard disk drive (drive 1 location)

User Manual ESR 312, 316, 420, 424, 524, 528

5.5 Kit Slim IDE Drive Kit for Drive 2 order # 05-1005-01A

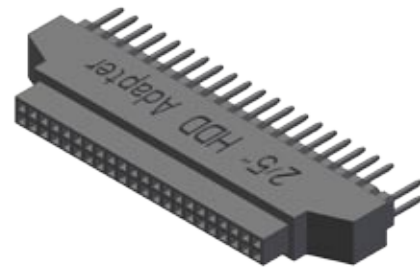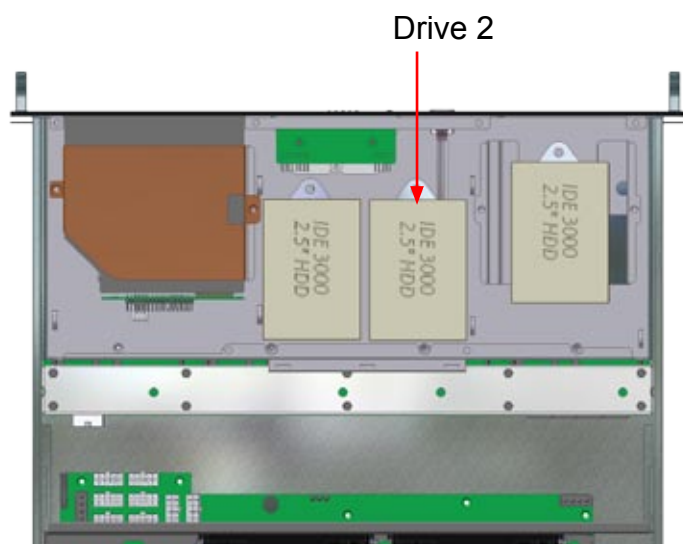

This kit contains the necessary parts to install a 2.5" slim-line IDE hard disk drive on Drive 2 of the ESR-series storage system. Refer section 3.5 on the user manual for installation instruction.


- ❶ 1 x #6-32 Flat Head Screw (09-1002-01A)
- ❷ 4 x M3 Flat Head Screw (09-1013-01A)
- ❸ 1 x 4 pin-to-2pin DC power cable, 7" (17-1008-02A)
- ❹ 1 x 40pin IDE data cable, 25.5" (17-1003-03A)
- ❺ 1 x 2.5" to 3.5" IDE Adapter (16-0118-01A)
- ❻ 1 x slim-line HDD mounting bracket (06-0115-01A)



#6-32 FH screw




M3 FH screw x 4

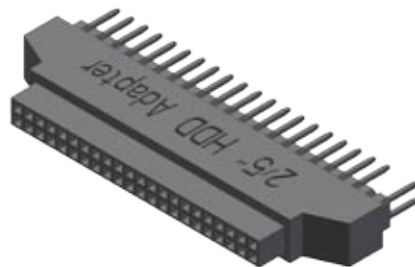

2.5" to 3.5" IDE Adapter



Slim-line HDD mounting bracket

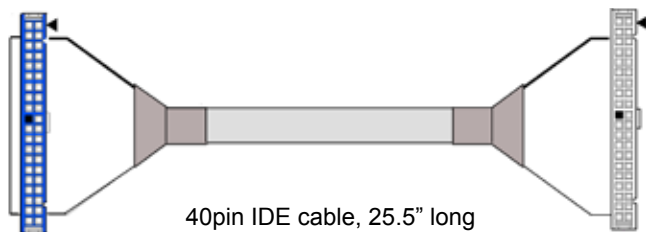

40pin IDE cable, 25.5" long




4 pin-to-2 pin DC Power cable, 7" Long

Figure 148 Kit slim IDE 2.5" to 3.5" hard disk drive (drive 2 location)

User Manual ESR 312, 316, 420, 424, 524, 528

5.6 Kit Slim IDE Drive Kit for Drive 3 order # 05-1006-01A

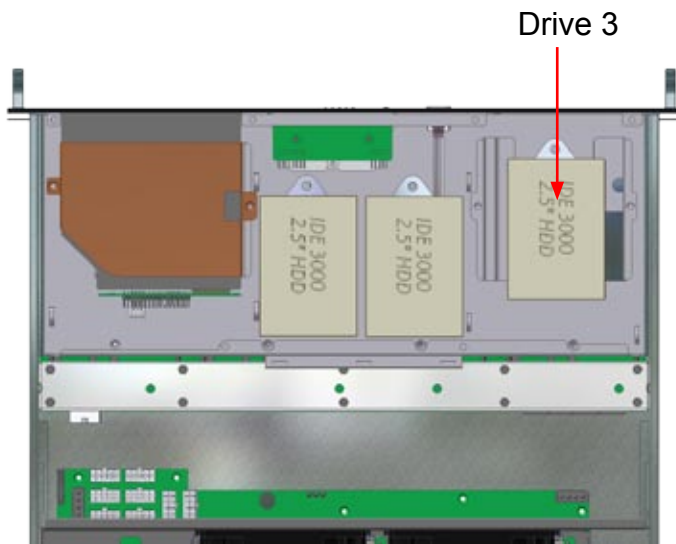

This kit contains the necessary parts to install a 2.5" slim-line IDE hard disk drive on Drive 3 of the ESR-series storage system. Refer section 3.5 on the user manual for installation instruction.


- ❶ 1 x #6-32 Flat Head Screw (09-1002-01A)
- ❷ 4 x M3 Flat Head Screw (09-1013-01A)
- ❸ 1 x 4 pin-to-2pin DC power cable, 11.5" (17-1008-03A)
- ❹ 1 x 40pin IDE data cable, 21.5" (17-1003-04A)
- ❺ 1 x 2.5" to 3.5" IDE Adapter (16-0118-01A)
- ❻ 1 x slim-line HDD mounting bracket (06-0115-01A)



#6-32 FH screw




M3 FH screw x 4

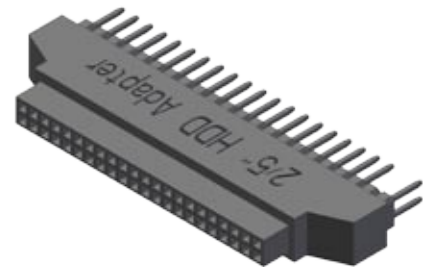

2.5" to 3.5" IDE Adapter



Slim-line HDD mounting bracket

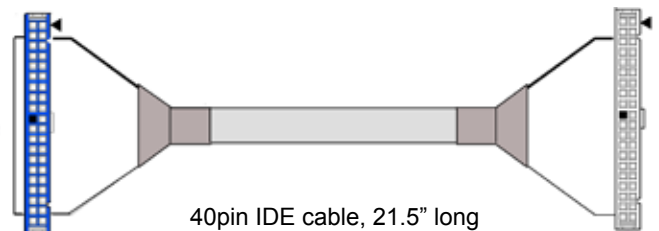

40pin IDE cable, 21.5" long



4 pin-to-2 pin DC Power cable, 11.5" Long

Figure 149 Kit slim IDE 2.5" to 3.5" hard disk drive (drive 3 location)

User Manual ESR 312, 316, 420, 424, 524, 528

5.7 Kit Slim-line Floppy Drive Disk order # 05-1007-01A

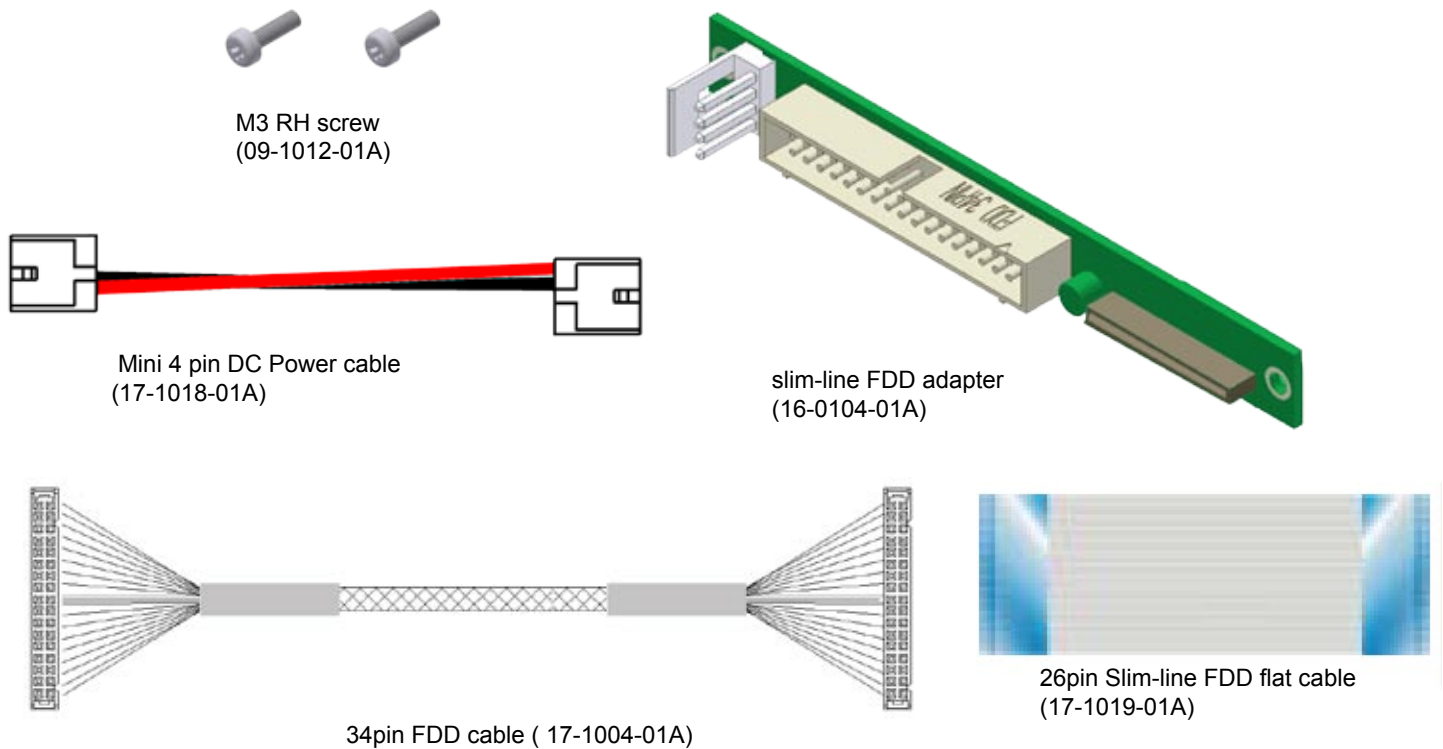


Figure 150 Kit slim-line floppy disk drive

5.8 Kit Slim-line CD/DVD-Rom order # 05-1008-01A


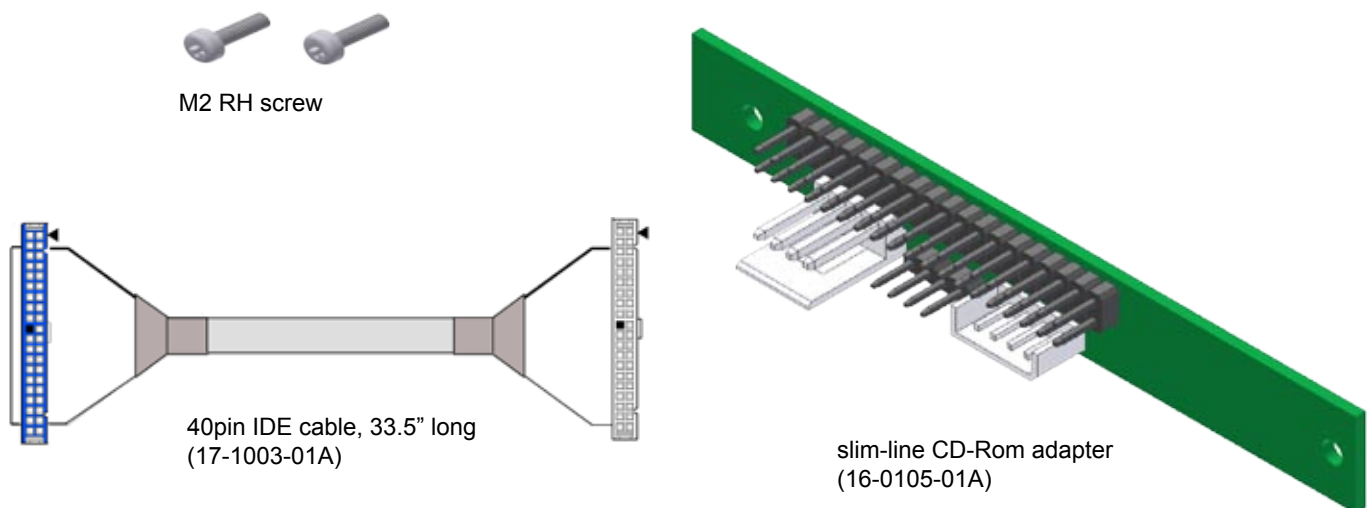


Figure 151 Kit slim-line CD/DVD-Rom

User Manual ESR 312, 316, 420, 424, 524, 528

5.9 Kit Two device IDE 40pin cable order # 17-1017-01A

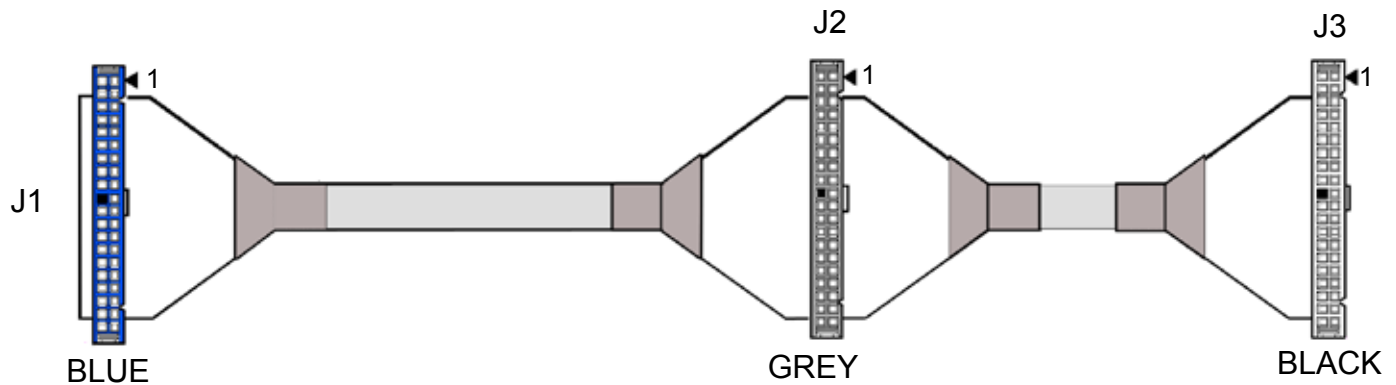

Two Drives IDE cable (order # 17-1017-01A)

Figure 152 Cable kit: Two-drive IDE cable

5.10 Kit, 4-pin power cable for add-in-card, 20 inches order # 17-1007-02A



4pin power cable (order #17-1007-02A)

Figure 153 Cable Kt; 4-pin DC power cable for add-in-card

5.11 Kit, K-Type Thermocouple order # 07-1020-01A



4pin power cable (order #17-1020-01A)

Figure 154 Cable kit: 2-pin thermocouple with cable

User Manual ESR 312, 316, 420, 424, 524, 528

5.12 Kit Power Supply Modular, ESR-316; 650W order # 05-1009-01A



Figure 155 Kit power supply modular for 650W

5.13 Kit Power Supply Modular, ESR-420, ESR-524 ; 950W order # 05-1010-01A



Figure 156 Kit power supply modular for 950W

User Manual ESR 312, 316, 420, 424, 524, 528

5.14 Kit Power Supply Modular, ESR-524 ; 1350W order # 05-1011-01A

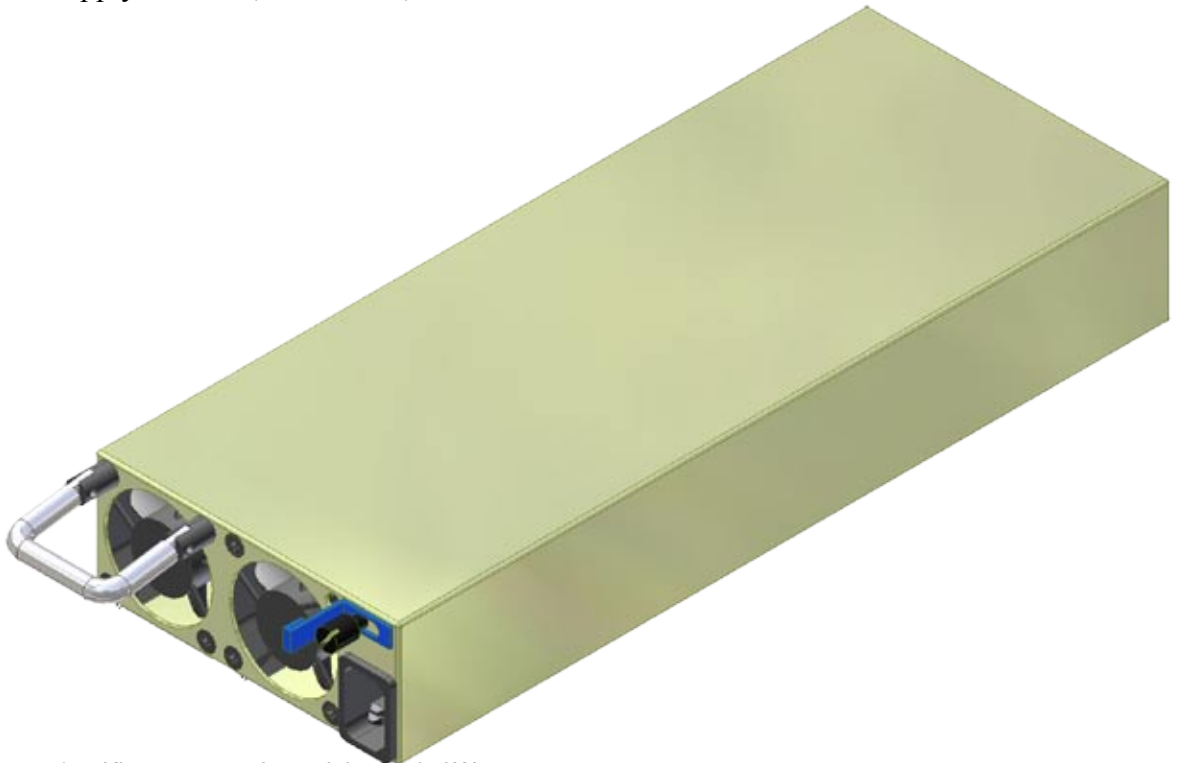


Figure 157 Kit power supply modular for 650W

5.15 Kit AC Power inlet Cable order # 17-1018-01A



Figure 158 Cable Kit: AC Cord North America (order # 17-1018-01A)

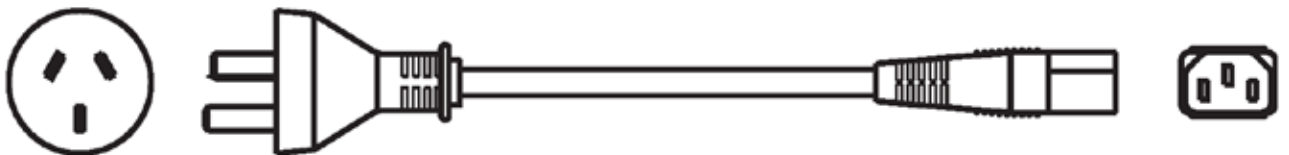


Figure 159 AC Cord Australia and New Zealand

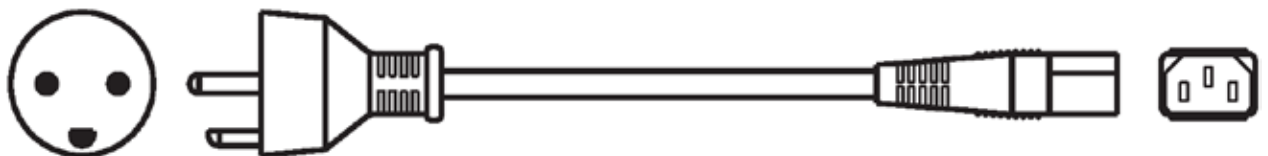


Figure 160 AC Cord Danish

User Manual ESR 312, 316, 420, 424, 524, 528



Figure 161 AC Cord Europe

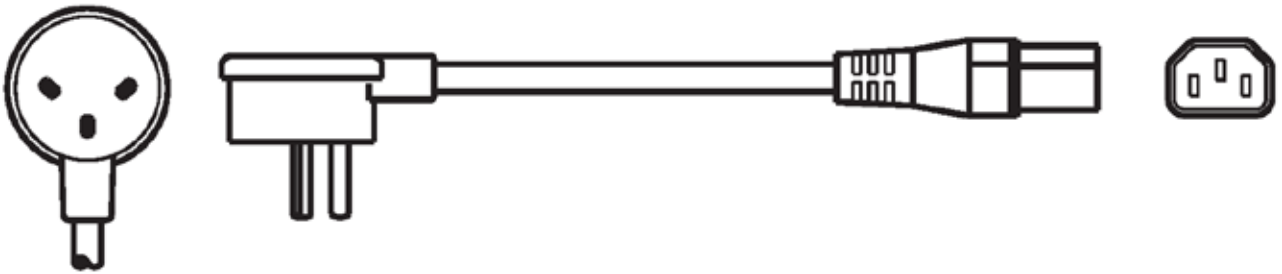


Figure 162 AC Cord Israeli

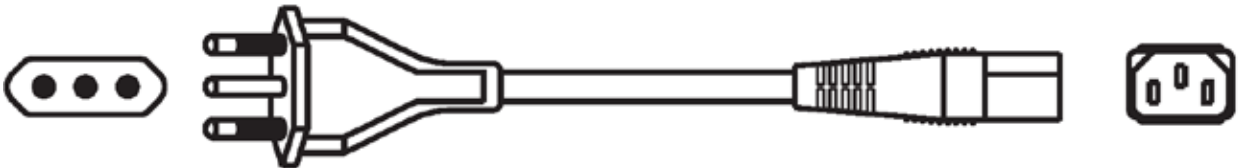


Figure 163 AC Cord Italy

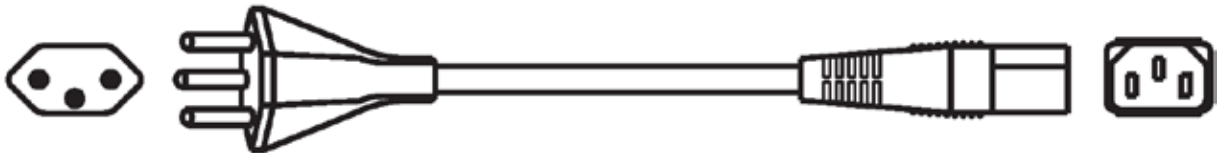


Figure 164 AC Cord Swiss


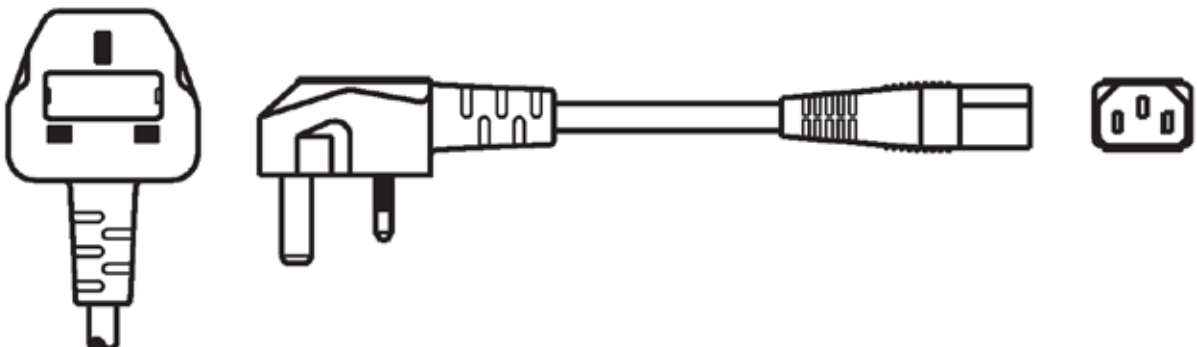


Figure 165 AC Cord U.K.

User Manual ESR 312, 316, 420, 424, 524, 528


5.16 Kit 28 inches bracket extender order # 05-1012-01A

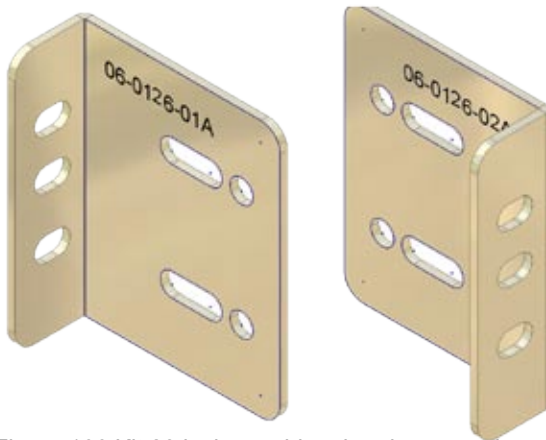

Bracket extender for 28-inch rack
06-0126-01A left
06-0126-02A right

Figure 166 Kit:28 inches cabinet bracket extender

5.17 Kit 30 inches bracket extender order # 05-101301A

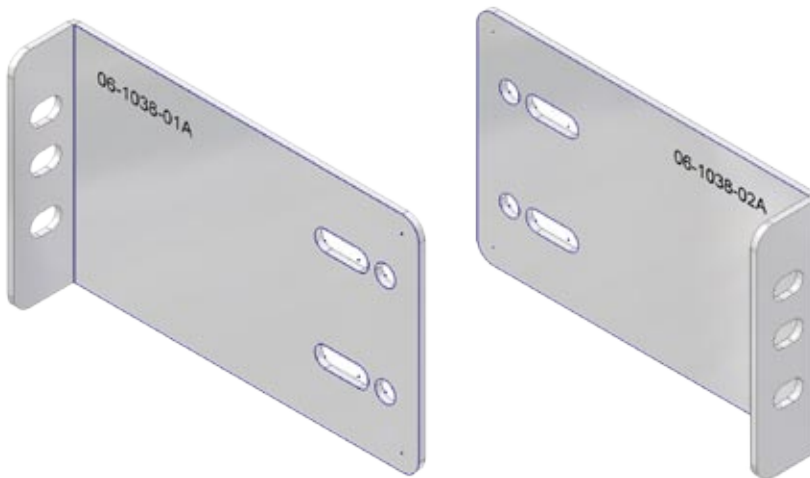

Bracket extender for 30-inch rack
06-1038-01A left
06-1038-02A right

Figure 167 Kit:30 inches cabinet bracket extender

User Manual ESR 312, 316, 420, 424, 524, 528

5.18 Kit ESR-312/316 3.5" internal HDD mounting kits order #05-1028-01A

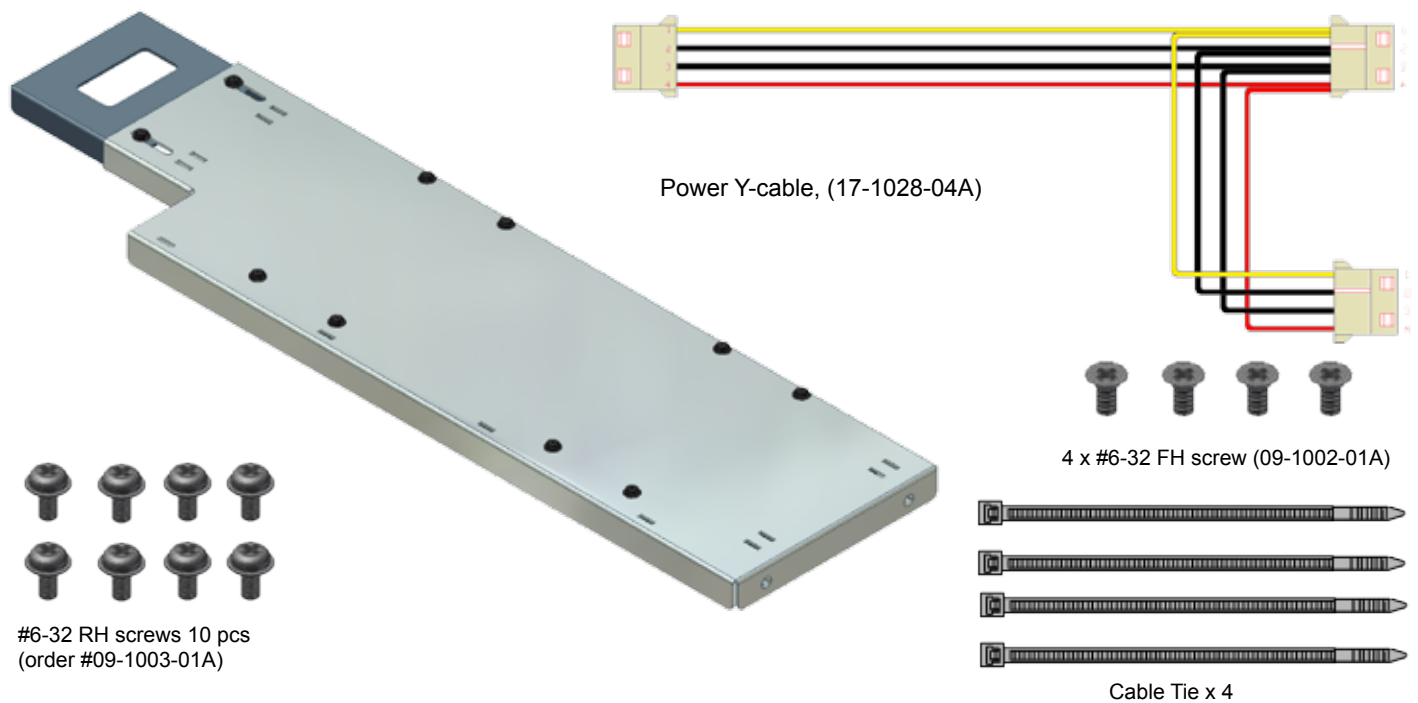


Figure 168 Kit:internal 3.5" mounting bracket for ESR312/316

5.19 Kit ESR-420/424/524/528 3.5" internal HDD mounting kits order #05-1029-01A

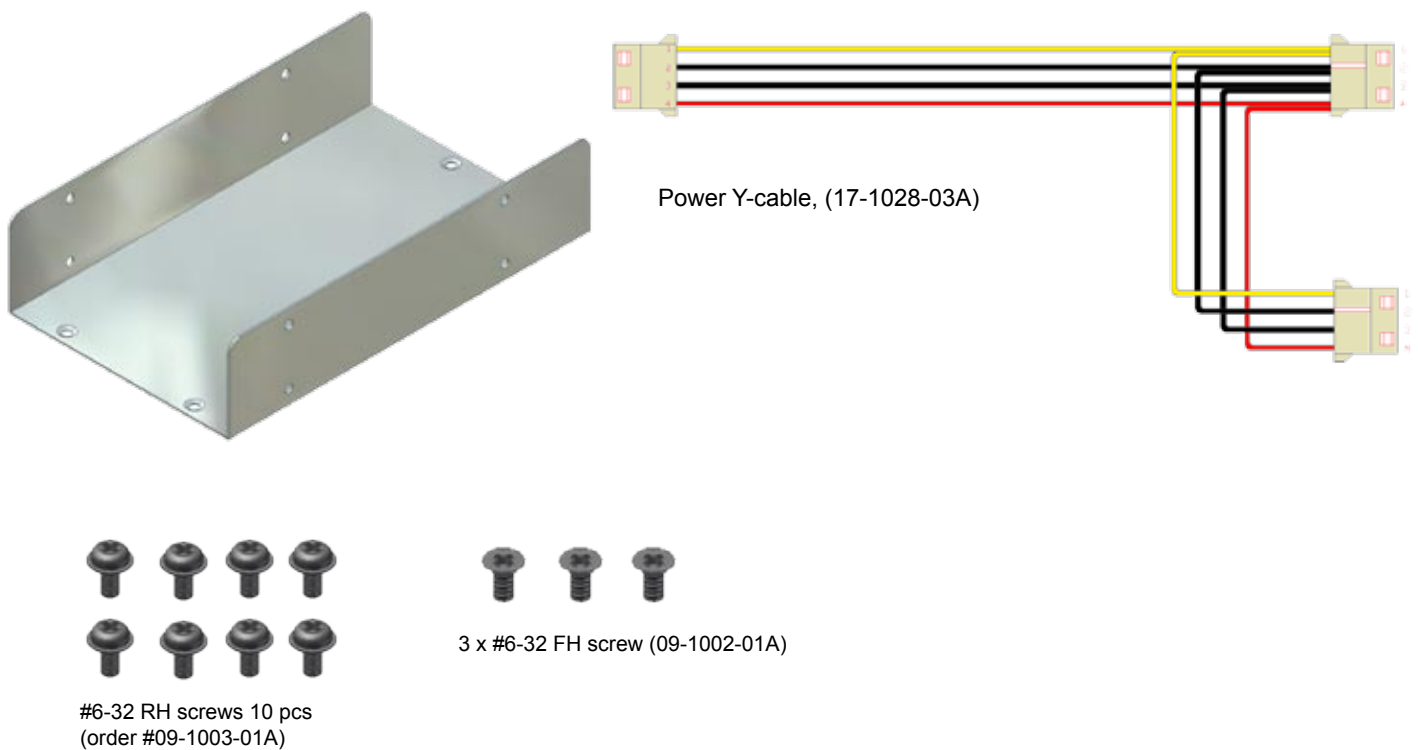


Figure 169 Kit:28 inches cabinet bracket extender

User Manual ESR 312, 316, 420, 424, 524, 528

5.20 Kit SCSI Backplane order # 05-1015-01A

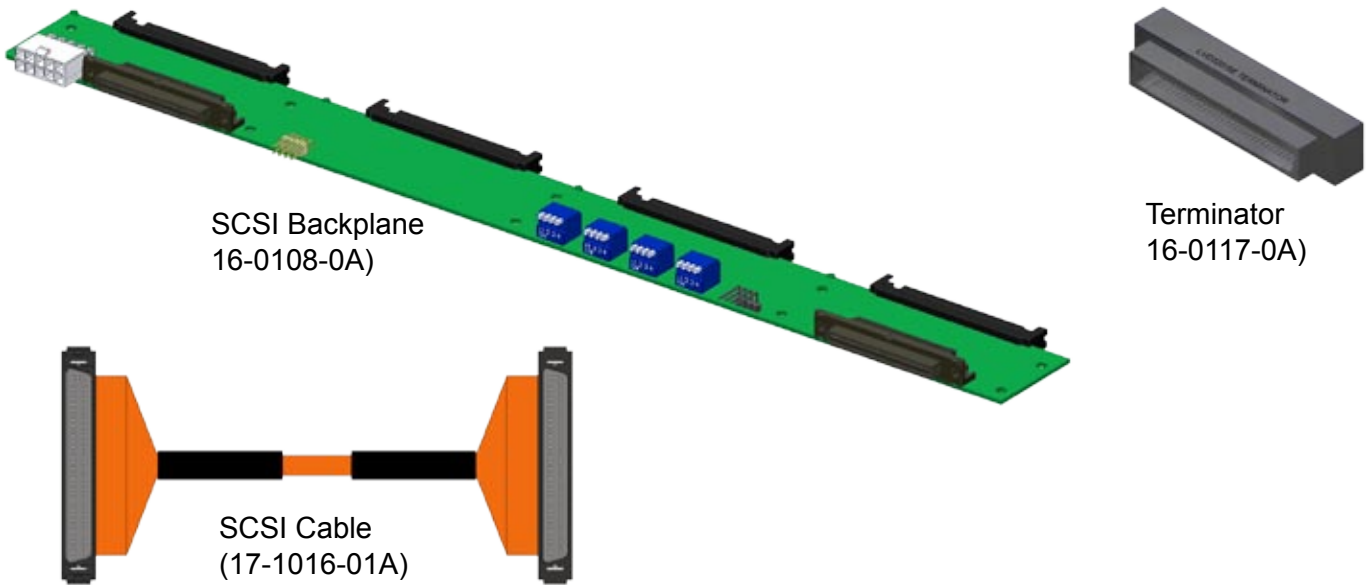


Figure 170 Kit: SCSI backplane, 4 drives

5.21 Kit SCSI Backplanes (Daisy Chain 8 drives) order # 05-1016-01A

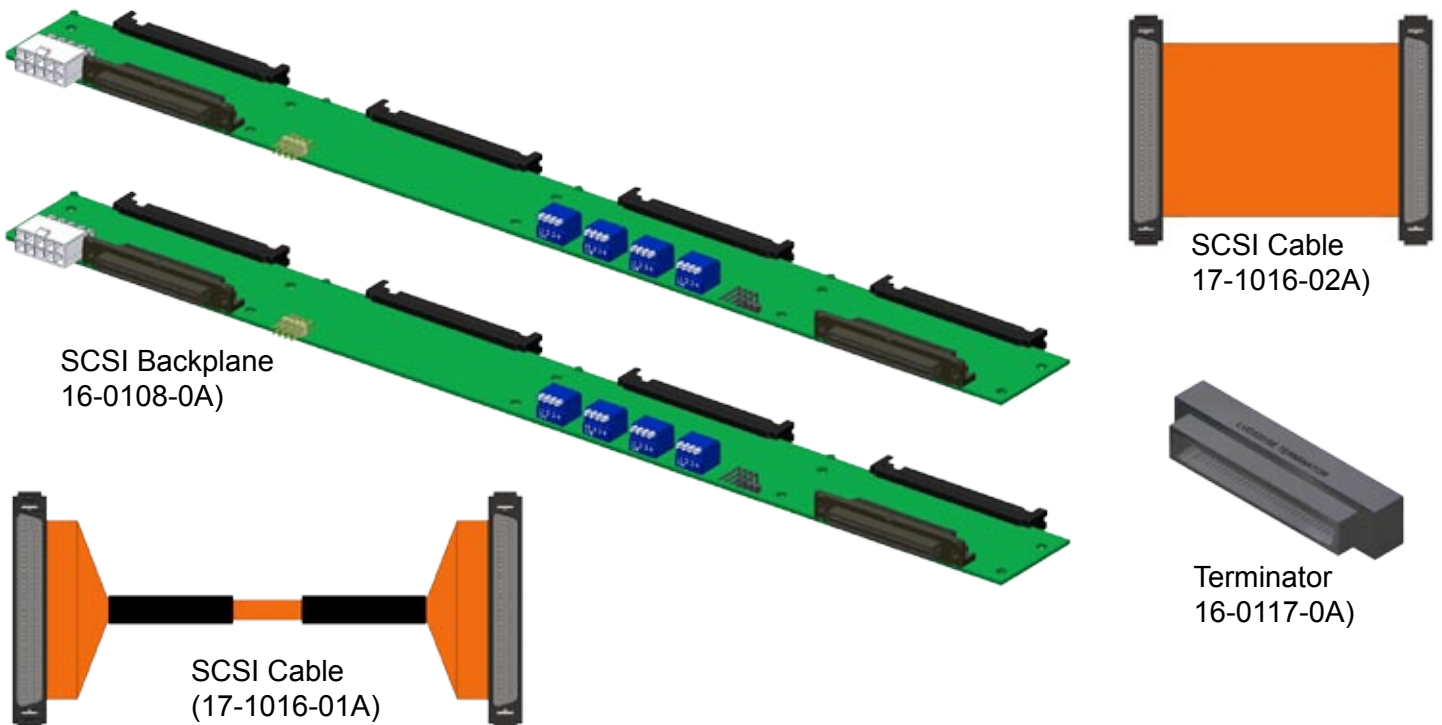


Figure 171 Kit: SCSI backplane, 8 drives

User Manual ESR 312, 316, 420, 424, 524, 528

5.22 Kit SCSI Backplanes (Daisy Chain 12 drives) order # 05-1017-01A

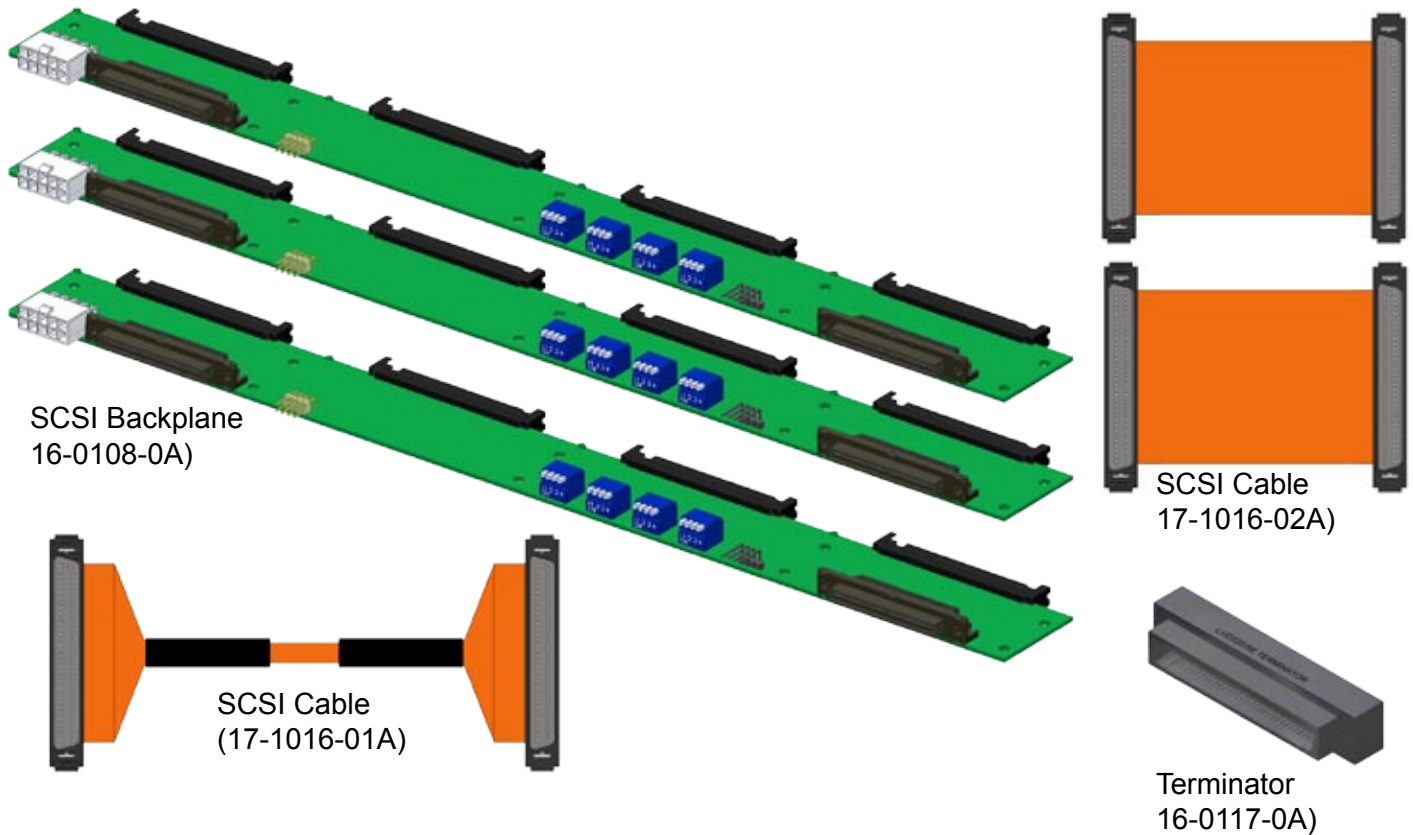


Figure 172 Kit: SCSI backplane, 12 drives

5.23 Kit Serial ATA Backplane order # 05-1018-01A

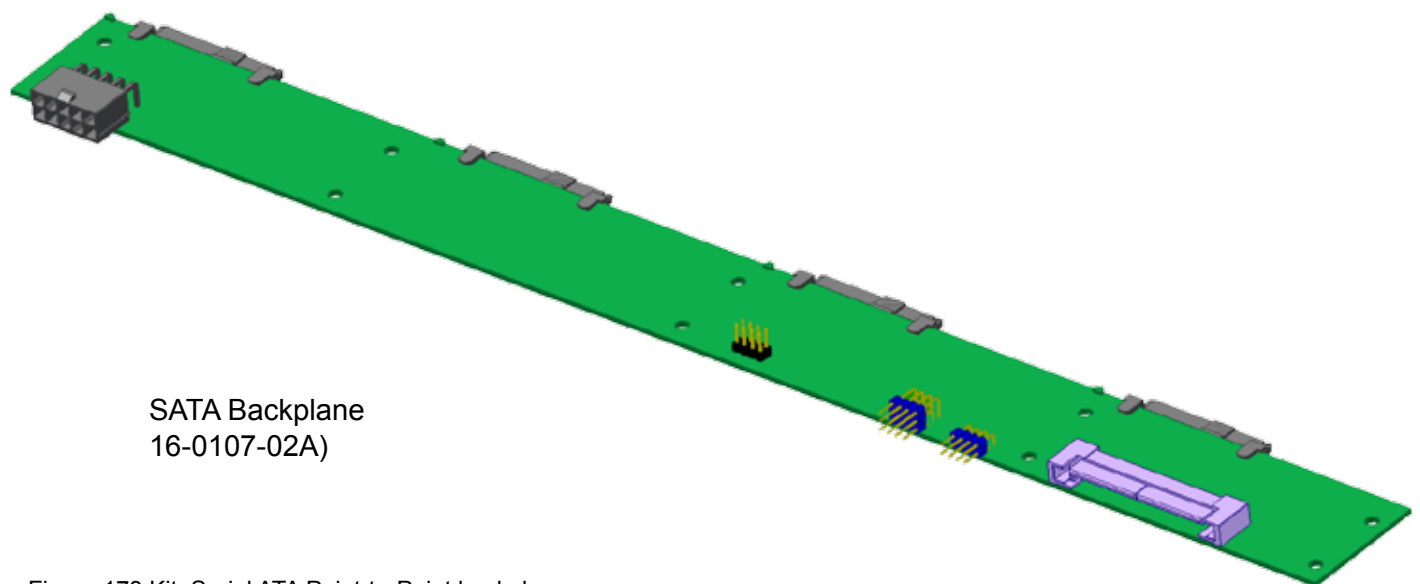


Figure 173 Kit: Serial ATA Point-to-Point backplane

User Manual ESR 312, 316, 420, 424, 524, 528

5.24 Kit Fan out SATA cable, order # 17-10310-1A

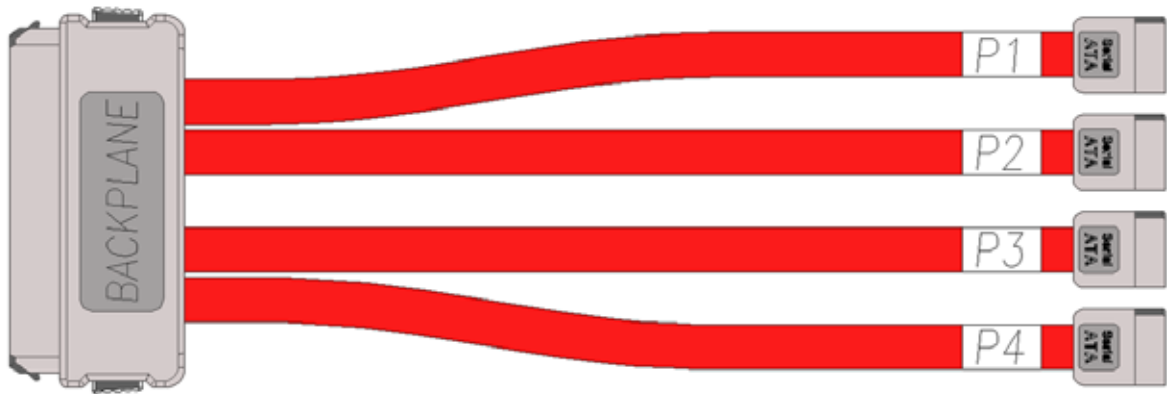


Figure 174 Kit: SCSI backplane, 12 drives

5.25 Kit Fan out SATA cable, order # 17-10310-1A



Figure 175 Kit: SCSI backplane, 12 drives

5.26 Kit Fan out SATA cable, order # 17-10310-1A

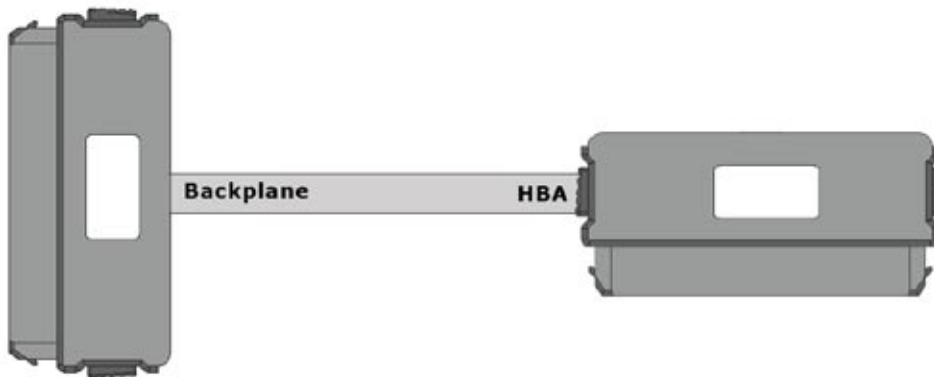


Figure 176 Kit: SCSI backplane, 12 drives

User Manual ESR 312, 316, 420, 424, 524, 528

5.27 Cable, Multilane Serial ATA cable, order # 17-1032-01A



Figure 177 Kit: SCSI backplane, 12 drives

5.28 Cable SFF8484 internal 32pin SAS to SFF8087 miniSAS cable order #17-1036-01A


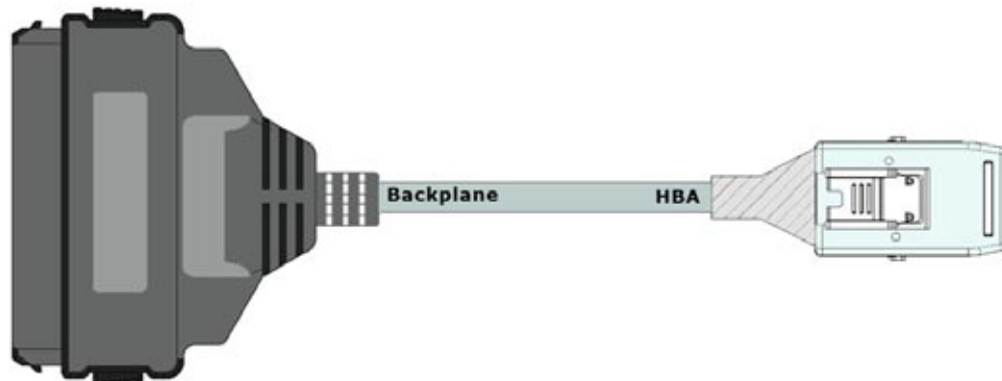


Figure 178 Kit: SCSI backplane, 12 drives

5.29 Cable, Serial ATA activity LED, order # 17-1023-XXX

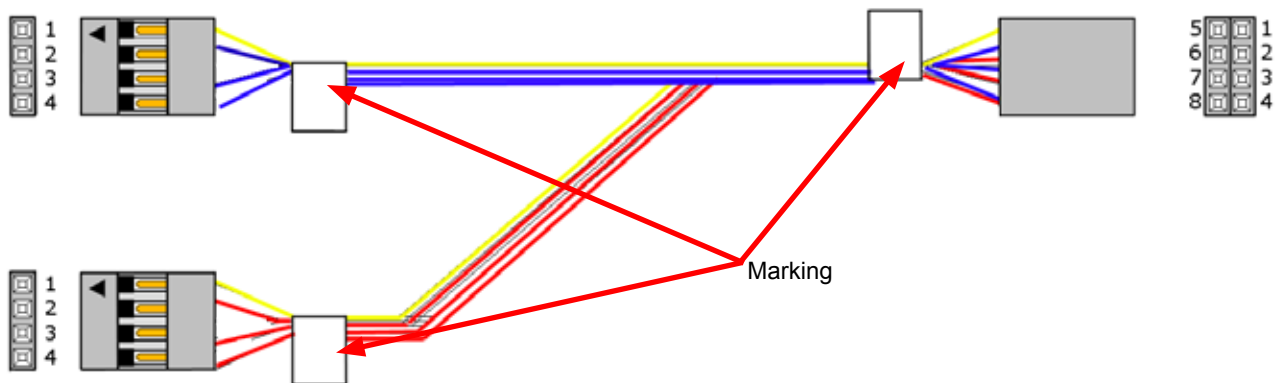

Cable Order #	Markings	Instruction
17-1023-01A	HDD "0-3"	Connect to Drive 0-3 on the backplane
17-1023-02A	HDD "4-7"	Connect to Drive 4-7 on the backplane
17-1023-03A	HDD "8-11"	Connect to Drive 8-11 on the backplane

Figure 179 LED activity Cable 17-1023-XXX

User Manual ESR 312, 316, 420, 424, 524, 528

6. System Fan Specification 120mm x 120mm x 38mm

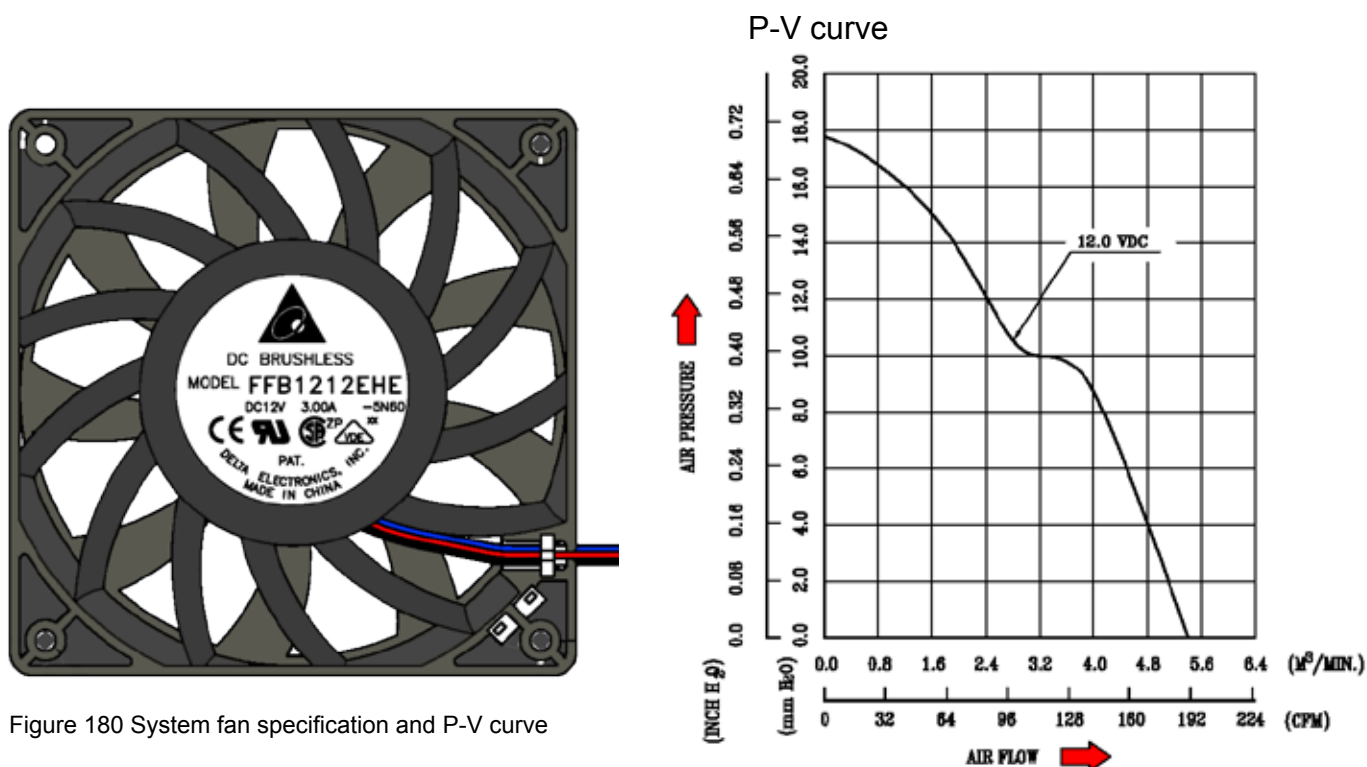


Figure 180 System fan specification and P-V curve

Specification

ITEM	DESCRIPTION
Model Number	Delta FFB1212EHE-5N60
Rated Voltage	12V DC
Input Voltage	7.0-13.2V DC
Input Current	2.0 (Max 3.0)A
Speed	4000 R.P.M.
Max Air Flow	190CFM (5.38 M ³ /min) at zero static pressure
Max Air Pressure	0.697 inchH ₂ O (17.7mmH ₂ O)
Acoustical Noise	59dB-A
Insulation Type	UL: Class A
Over current shut down	Yes, shut down when locking rotor
Starting protection	Yes, start at low speed, after 10 sec, full speed
Life expectance	(70,000 hours) 8 years, continuous at 40 degree C
Operating temperature	-10 to 50 degree C
Operating humidity	5 to 90 % RH
Material	Plastic UL 94V-0
Ball Bearing system	Two Ball Bearing
Dimension	120mm x 120mm x 38mm

Table 50 System fan specification

User Manual ESR 312, 316, 420, 424, 524, 528

7. Power Supply Specification

7.1 650W 2+1 Redundant Power Supply



Figure 181 650W 2+1 Redundant Power Supply

DC Output Characteristics

Output Voltage	Output Current	
	MIN(A)	MAX(A)
5V	3.0	60
12V	2	40
-5V	0.05	1
-12V	0.05	1
3.3V	1.0	40
+5VSB	0.1	2.5

Table 51 650W PSU DC Output Characteristics

Remarks: Total current of +5V and +3.3V not exceed 70A

Total +5V and +3.3V and +12V power not exceed 630W

Specification

ITEM	DESCRIPTION
Model Number	EMAC R3G-6650P
Input Voltage/Ferquency	90-264 V AC/47~63Hz
Input Current	9.0/5.0 A for 115/230 VAC
Inrush current	80A/100A Max for 115/230 VAC per modular
Connector Type*	EPS 12V*
Active Power Factor Correction built	Yes, meet IEC-1000-3-2 Class D
EMI Noise Filter	FCC Class B, CISR22 CClass B
Safety:	UL 1950, CSA 22.2 No/950 TUV IEC 950
Smart I ² C interface design	Yes
MTBF	67792 continuous at 40 degree C
Operating temperature	0 to 40 degree C
Efficiency	63 % Typical, at full load
Dimension	82mm(H) x 127mm(W) x 300mm(D)

Table 52 650W power supply specification



Connector type for ATX2.03, ATX12V(Pentium 4), WTX or AMD-GES are available, but for special order only. Contact your sale representative for more information

User Manual ESR 312, 316, 420, 424, 524, 528

I2C Map

1, Bus address Select function

The Address is used 5A

2, Temperature Measurement Function

The value can be obtained by reading CR14, 1LSB=1 degree

3, Voltage Monitor Function

The VIN value can be obtained by reading CR10-13 which represents 3.3v, 5v, 12v,
1LSB=0.0078125V

Example see circuit

If CR10 = D7 The monitor 3.3V voltage= $0.0078125 \times D7 \times 2 = 3.359V$

If CR11 = 6C The monitor 5V voltage= $0.0078125 \times 6C \times (R18 + R19 / R19) = 0.0078125 \times 6C \times 6 = 5.06V$

If CR12 = 92 The monitor 12V voltage= $0.0078125 \times 92 \times (R20 + R21 / R21) =$
 $0.0078125 \times 92 \times 11 = 12.5V$

4, Fan Status Monitor

The value can be obtained by reading CR92 which represents fan status

If bit 0=0 then fan1 ok else fan1 fail

If bit 1=0 then fan2 ok else fan2 fail

If bit 2=0 then fan3 ok else fan3 fail

PS1 Memory(AT24C02)

The Device Address is A0H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	GIN-6350P	Product name
20H	2010780007	Part number .
30H	. 20060316	Serial number

PS2 Memory(AT24C02)

The Device Address is A2H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	GIN-6350P	Product name
20H	2010780007	Part number .
30H	. 20060316	Serial number

PS3 Memory(AT24C02)

The Device Address is A4H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	GIN-6350P	Product name
20H	2010780007	Part number .
30H	. 20060316	Serial number

User Manual ESR 312, 316, 420, 424, 524, 528

7.2 950W 2+1 Redundant Power Supply

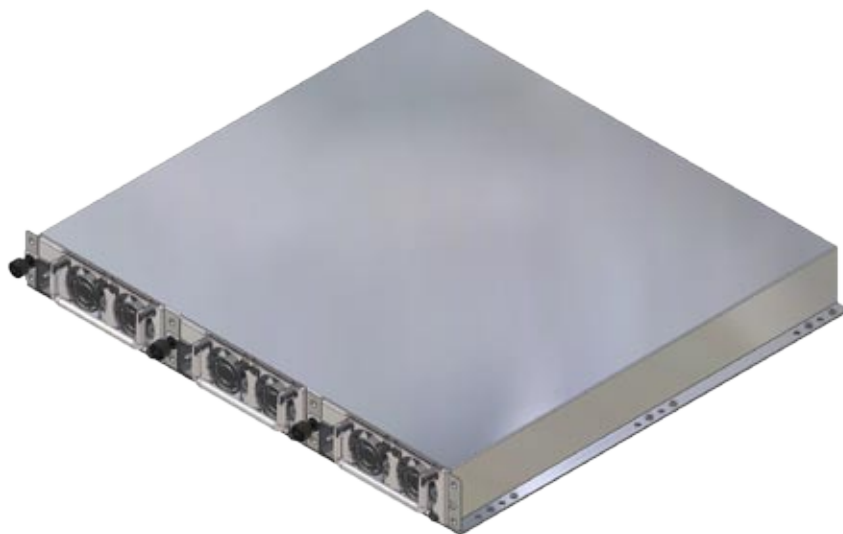


Figure 182 950W 2+1 Redundant Power Supply

DC Output Characteristics

Output Voltage	Output Current	
	MIN(A)	MAX(A)
5V	3.0	44
12V1	2	30
12V2	2	50
-5V	0.2	1.2
-12V	0.2	1.2
3.3V	2.0	44
+5VSB	0.4	3.5

Remarks: Total current of +5V and +3.3V not exceed 80A

Total +12V1 and +12V2 max output not exceed 72A

Total +5V and +3.3V and +12V power not exceed 890W

Table 53 950W PSU DC Output Characteristics

Specification

ITEM	DESCRIPTION
Model Number	EMAC M1G3-6930P
Input Voltage/Ferquency	90-264 VAC/47~63Hz
Input Current	9.0/5.0 A for 115/230 VAC
Inrush current	65A/120A Max for 115/230 VAC per modular
Connector Type*	EPS 12V*
Active Power Factor Correction built	Yes, meet IEC-1000-3-2 Class D
EMI Noise Filter	FCC Class B, CISR22 CLass B
Safety:	UL 1950, CSA 22.2 No/950 TUV IEC 950
Smart I ² C interface design	Yes
MTBF	8 years, continuous at 40 degree C
Operating temperature	0 to 40 degree C
Operating humidity	20-95% RH
Efficiency	67 % Typical, at full load
Dimension	42mm(H) x 335mm(D) x 369mm(W)

Table 54 950W power supply specification



Connector type for ATX2.03, ATX12V(Pentium 4), WTX or AMD-GES are available, but for special order only. Contact your sale representative for more information

User Manual ESR 312, 316, 420, 424, 524, 528

I2C Map

1, Bus address Select function

The Address is used 5A

2, Temperature Measurement Function

The value can be obtained by reading CR14, 1LSB=1 degree

3, Voltage Monitor Function

The VIN value can be obtained by reading CR10-13 which represents 3.3v, 5v, 12v,
1LSB=0.0078125V

Example see circuit

If CR10 = D7 The monitor 3.3V voltage= $0.0078125 \times D7 \times 2 = 3.359V$

If CR11 = 6C The monitor 5V voltage= $0.0078125 \times 6C \times (R18 + R19 / R19) = 0.0078125 \times 6C \times 6 = 5.06V$

If CR12 = 92 The monitor 12V voltage= $0.0078125 \times 92 \times (R20 + R21 / R21) = 0.0078125 \times 92 \times 11 = 12.5V$

4, Fan Status Monitor

The value can be obtained by reading CR92 which represents fan status

If bit 0=0 then fan1 ok else fan1 fail

If bit 1=0 then fan2 ok else fan2 fail

If bit 2=0 then fan3 ok else fan3 fail

PS1 Memory(AT24C02)

The Device Address is A0H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	. 20060301	Serial number

PS2 Memory(AT24C02)

The Device Address is A2H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	. 20060301	Serial number


PS3 Memory(AT24C02)

The Device Address is A4H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	. 20060301	Serial number

User Manual ESR 312, 316, 420, 424, 524, 528

7.3 1350W 3+1 Redundant Power Supply

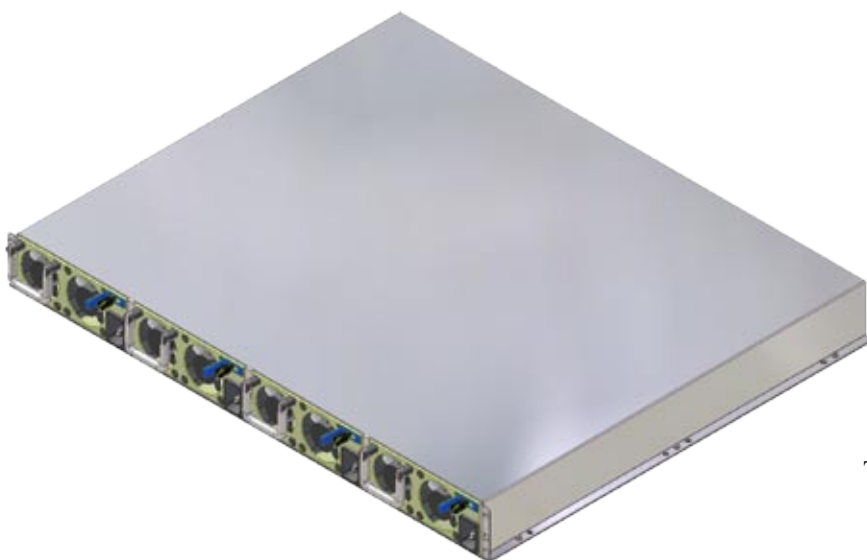

DC Output Characteristics

Output Voltage	Output Current	
	MIN(A)	MAX(A)
5V	6	84.5
12V	2	90
-5V	0.2	1.2
-12V	0.3	1.3
3.3V	3.5	67.5
+5VSB	0.4	3.5

Table 55 1350W PSU DC Output Characteristics

Figure 183 1350W 3+1 Redundant Power Supply

Specification

ITEM	DESCRIPTION
Model Number	EMAC M1W4-6D50P
Input Voltage/Ferquency	90-264 VAC/47~63Hz
Input Current	9.0/5.0 A for 115/230 VAC
Inrush current	65A/120A Max for 115/230 VAC per modular
Connector Type*	EPS 12V*
Active Power Factor Correction built	Yes, meet IEC-1000-3-2 Class D
EMI Noise Filter	FCC Class B, CISR22 CLass B
Safety:	UL 1950, CSA 22.2 No/950 TUV IEC 950
Smart I ² C interface design	Yes
MTBF	62276 hours
Operating temperature	0 to 40 degree C
Operating humidity	20-95% RH
Efficiency	67 % Typical, at full load
Dimension	42mm(H) x 340mm(D) x 426mm(W)

Table 56 1350W power supply specification

Connector type for ATX2.03, ATX12V(Pentium 4), WTX or AMD-GES are available, but for special order only. Contact your sale representative for more information

User Manual ESR 312, 316, 420, 424, 524, 528

I2C Map

1. Bus address Select function

The Address is 5A

2. Temperature Measurement Function

The value can be obtained by reading CR14, 1LSB = 1 degree

3. Voltage Monitor Function

The VIN value can be obtained by reading CR10-12 which represents +3.3v, +5v, and +12v respectively, 1LSB = 0.0078125V

Example:

(Please note that the value of 2, 6 and 11 were derived from component values.)

If CR10 = D7 then the +3.3V voltage = $0.0078125 * D7 * 2 = 3.359V$

If CR11= 6C then the +5V voltage = $0.0078125 * 6C * 6 = 5.06V$

If CR12= 92 then the monitor +12V voltage = $0.0078125 * 92 * 11 = 12.5V$

Fan Status Monitor

The value can be obtained by reading CR92 which represents fan status

If bit 0=1 then fan1 ok else fan1 fail

If bit 1=1 then fan2 ok else fan2 fail

If bit 2=1 then fan3 ok else fan3 fail

If bit 3=1 then fan4 ok else fan4 fail

PS1 Memory(AT24C02)

The Device Address is A0H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	20060301	Serial number

PS3 Memory(AT24C02)

The Device Address is A4H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	20060301	Serial number

PS2 Memory(AT24C02)

The Device Address is A2H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	20060301	Serial number


PS4 Memory(AT24C02)

The Device Address is A6H

Index	Data	Comment
00H	Zippy	Manufacturing name
10H	M1G-6500P	Product name
20H	2011360003	Part number .
30H	20060301	Serial number

User Manual ESR 312, 316, 420, 424, 524, 528

7.4 1500W 3+1 Redundant Power Supply

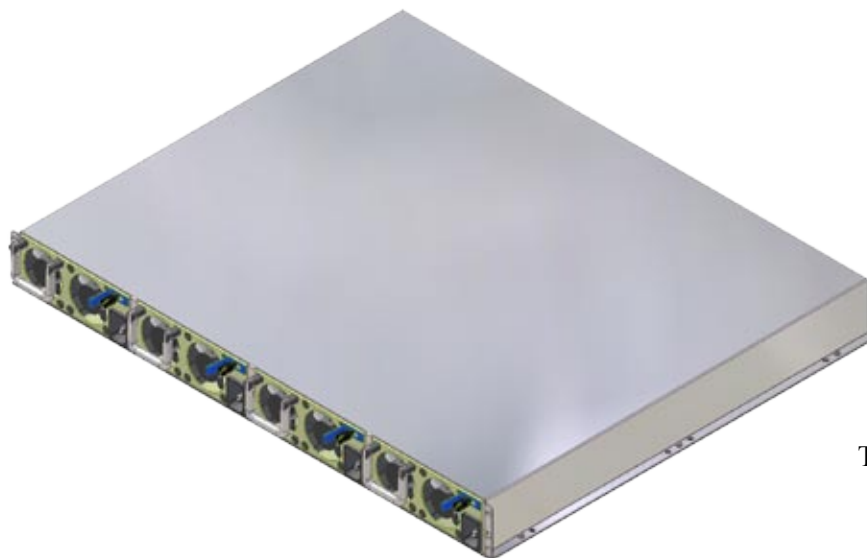

DC Output Characteristics

Output Voltage	Output Current	
	MIN(A)	MAX(A)
5V	6	60
12V	2	90
-5V	0	0
-12V	0.3	1
3.3V	3.5	60
+5VSB	0.4	2

Table 57 1500W PSU DC Output Characteristics

Figure 184 1350W 3+1 Redundant Power Supply

Specification

ITEM	DESCRIPTION
Model Number	ETASIS ESRP-5443H
Input Voltage/Ferquency	100-240 VAC
Input Current	9.0/5.0 A for 115/230 VAC
Inrush current	65A/120A Max for 115/230 VAC per modular
Connector Type*	EPS 12V*
Active Power Factor Correction built	Yes, meet IEC-1000-3-2 Class D
EMI Noise Filter	FCC Class B, CISR22 CLass B
Safety:	UL 1950, CSA 22.2 No/950 TUV IEC 950
Smart I ² C interface design	Yes
MTBF	62276 hours
Operating temperature	0 to 40 degree C
Operating humidity	20-90% RH
Efficiency	65 % Typical, at full load
Dimension	42mm(H) x 340mm(D) x 426mm(W)

Table 58 1500W power supply specification

Connector type for ATX2.03, ATX12V(Pentium 4), WTX or AMD-GES are available, but for special only. Contact your sale representative for more information

User Manual ESR 312, 316, 420, 424, 524, 528

I2C Map

Address: B0, B2, B4, B6

Item	Offset	Address	Value(Hex)	Comments	Remark
1	00	00H	01	Format Version / 3:0 = 01h	Common Header
2	01	01H	00	Internal Use Area	00h indicates that area is not present.
3	02	02H	00	Chassis Info Area	00h indicates that area is not present.
4	03	03H	00	Board Info Area	00h indicates that area is not present.
5	04	04H	08	Product Info Area offset = 08 (08h)	
6	05	05H	48	Multi Record Area offset = 72 (48h)	
7	06	06H	E3	Dynamic Info Area offset = 227 (E3h)	
8	07	07H	CC	Common Header Checksum	ZERO CHECK SUM
1	08	08H	01	Format Version / 3:0 = 01h	Product Info Area
2	09	09H	40	Product Area Length = 64 (40h)	64 bytes
3	10	0AH	19	Language Code	English Code
4	11	0BH	C6	Manufacturing Name Type / length byte .	"C" = Start Code. 6=Length byte.
5	12	0CH	45	E	
6	13	0DH	54	T	
7	14	0EH	41	A	
8	15	0FH	53	S	
9	16	10H	49	I	
10	17	11H	53	S	
11	18	12H	C8	Product Name Type / length byte .	Lenhth = 8 byte.
12	19	13H	45	E	
13	20	14H	46	F	
14	21	15H	52	R	
15	22	16H	50	P	
16	23	17H	2D	-	
17	24	18H	35	5	
18	25	19H	35	5	
19	26	1AH	33	3	
20	27	1BH	C2	Manufacturing Country Code. / length byte.	Lenhth = 2 byte.
21	28	1CH	43	C	CHINA ==> CN
22	29	1DH	4E	N	
23	30	1EH	C0	SEC Parts / Number / length byte .	
24	31	1FH	00	PAD	PAD, Write as 00h
25	32	20H	00	PAD	
26	33	21H	00	PAD	
27	34	22H	00	PAD	
28	35	23H	00	PAD	
29	36	24H	00	PAD	
30	37	25H	00	PAD	
31	38	26H	00	PAD	
32	39	27H	00	PAD	
33	40	28H	00	PAD	
34	41	29H	C0	Manufacturing Number. / length byte.	
35	42	2AH	00	PAD	PAD, Write as 00h
36	43	2BH	00	PAD	
37	44	2CH	00	PAD	
38	45	2DH	00	PAD	
39	46	2EH	C7	Manufacturing Serial Number. / length byte.	Lenhth = 7 byte.
40	47	2FH	36	Year	2005 =>5
41	48	30H	31	Week1	0 ~ 5
42	49	31H	33	Week2	0 ~ 9
43	50	32H	30	Power supply serial number 0001	
44	51	33H	30		
45	52	34H	30		
46	53	35H	31		
47	54	36H	C2	Power Supply Version. / length byte.	Lenhth = 2 byte.
48	55	37H	41	A	
49	56	38H	32	2	
50	57	39H	C0	Asset Tag Type / length	
51	58	3AH	C0	FRU File ID length byte	
52	59	3BH	00	PAD	
53	60	3CH	00	PAD	
54	61	3DH	00	PAD	
55	62	3EH	00	PAD	
56	63	3FH	00	PAD	
57	64	40H	00	PAD	
58	65	41H	00	PAD	
59	66	42H	00	PAD	
60	67	43H	00	PAD	
61	68	44H	00	PAD	
62	69	45H	00	PAD	
63	70	46H	00	PAD	
64	71	47H	AE	Product Info Area Checksum	ZERO CHECK SUM

User Manual ESR 312, 316, 420, 424, 524, 528

1	72	48H	00	Record Type ID 0X00 Power Supply Info	Multirecord Header
2	73	49H	02	3:0 Recode format version = 02h	
3	74	4AH	18	Recode length of multirecord	Length of Power Supply Info Field
4	75	4BH	C8	Record Checksum	Zero checksum
5	76	4CH	1E	Header Checksum	Zero checksum
1	77	4DH	90	Overall capacity (watts) (LSB First)	Power Supply Information
2	78	4EH	01	400W = 0190h (LSB First)	
3	79	4FH	5F	Peak VA = 863VA (035Fh) LSB First	550W / (0.65x0.98) = 863VA
4	80	50H	03		(MSB)
5	81	51H	64	Inrush current = 100.0A (64h)	
6	82	52H	05	Inrush interval in ms. = 5.0ms (05h)	
7	83	53H	28	Low end Input voltage range 1 (10mV)	
8	84	54H	23	90V=90/0.01 (2328h)	
9	85	55H	B0	High end Input voltage range 1 (10mV)	
10	86	56H	36	140V=140/0.01 (36B0h)	
11	87	57H	50	Low end Input voltage range 2 (10mV)	
12	88	58H	46	180V=180/0.01 (4650h)	
13	89	59H	20	High end Input voltage range 2 (10mV)	
14	90	5AH	67	264V=264/0.01 (6720h)	
15	91	5BH	2F	Low end Input frequency range 47Hz=2Fh	
16	92	5CH	3F	High end Input frequency range 63Hz=3Fh	
17	93	5DH	1E	A/C dropout tolerance in ms 30ms = 1Eh	
18	94	5EH	02	Binary flags : 7:5 - Reserved, write as 0000b 4:4 - Tachometer pulses per rotation / Predictive fail polarity 3:3 - Hot Swap Support 2:2 - Autoswitch 1:1 - Power factor correction 0:0 - Predictive fail support	
19	95	5FH	00	Peak capacity (watts)	LSB
20	96	60H	00		MSB
21	97	61H	00	Combined Wattage Byte 1:	
22	98	62H	00	7:4 - Voltage 1 / 3:0 - Voltage 2	
23	99	63H	00	Byte 2:3 Total Combined Wattage	
24	100	64H	00	Predictive fail tachometer lower threshold (RPS)	
1	101	65H	01	Record Type ID 0x01 = DC OUTPUT	Record 1 Header
2	102	66H	02	End of list/Version = 0010b	
3	103	67H	0D	Record length of Multirecord	+3.3V Field Number
4	104	68H	CF	Record Checksum	Zero checksum
5	105	69H	21	Header Checksum	Zero checksum
1	106	6AH	01	Output Number = 0001b (1h)	+3.3V Output
2	107	6BH	4A	Nominal voltage (10 mV)	LSB First
3	108	6CH	01	3.3V (330mv) = 014Ah	MSB
4	109	6DH	3A	Maximum negative voltage deviation	
5	110	6EH	01	(10 mV) 3.14V (314mv) = 013Ah	
6	111	6FH	5A	Maximum positive voltage deviation	
7	112	70H	01	(10 mV) 3.46V (346mv) = 015Ah	
8	113	71H	32	Ripple and Noise pk-pk 10Hz to 20 MHz	
9	114	72H	00	(mV) 50mVpp = 32h	
10	115	73H	00	Minimum current draw (mA)	
11	116	74H	00	0mA = 00h	
12	117	75H	C0	Maximum current draw (mA)	
13	118	76H	5D	24000mA = 5DC0h	
1	119	77H	01	Record Type ID 0x01 = DC OUTPUT	Record 2 Header
2	120	78H	02	End of list/Version = 0010b	
3	121	79H	0D	Record length of Multirecord	+5V Field Number
4	122	7AH	7E	Record Checksum	Zero checksum
5	123	7BH	72	Header Checksum	Zero checksum
1	124	7CH	02	Output Number = 0010b (2h)	+5V Output
2	125	7DH	F4	Nominal voltage (10 mV)	LSB First
3	126	7EH	01	5V (500mv) = 01F4h	MSB
4	127	7FH	DB	Maximum negative voltage deviation	
5	128	80H	01	(10 mV) 4.75V (475mv) = 01DBh	
6	129	81H	0D	Maximum positive voltage deviation	
7	130	82H	02	(10 mV) 5.25V (525mv) = 020Dh	
8	131	83H	32	Ripple and Noise pk-pk 10Hz to 20 MHz	
9	132	84H	00	(mV) 50mVpp = 32h	
10	133	85H	00	Minimum current draw (mA)	
11	134	86H	00	0mA = 00h	
12	135	87H	20	Maximum current draw (mA)	
13	136	88H	4E	20000mA = 4E20h	
1	137	89H	01	Record Type ID 0x01 = DC OUTPUT	Record 3 Header
2	138	8AH	02	End of list/Version = 0010b	
3	139	8BH	0D	Record length of Multirecord	+12V Field Number
4	140	8CH	F2	Record Checksum	Zero checksum

User Manual ESR 312, 316, 420, 424, 524, 528

5	141	8DH	FE	Header Checksum	Zero checksum
1	142	8EH	03	Output Number = 0011b (3h)	+12V Output
2	143	8FH	B0	Nominal voltage (10 mV)	LSB First
3	144	90H	04	12V (1200mv) = 04B0h	MSB
4	145	91H	74	Maximum negative voltage deviation	
5	146	92H	04	(10 mV) 11.40V (1140mv) = 0474h	
6	147	93H	EC	Maximum positive voltage deviation	
7	148	94H	04	(10 mV) 12.6V (1260mv) = 04ECh	
8	149	95H	78	Ripple and Noise pk-pk 10Hz to 30 MHz	
9	150	96H	00	(mV) 120mVpp = 78h	
10	151	97H	B8	Minimum current draw (mA)	
11	152	98H	0B	3000mA = 0BB8h	
12	153	99H	10	Maximum current draw (mA)	
13	154	9AH	A4	42000mA = A410h	
1	155	9BH	01	Record Type ID 0x01 = DC OUTPUT	Record 4 Header
2	156	9CH	02	End of list/Version = 0010b	
3	157	9DH	0D	Record length of Multirecord	-12 Field Number
4	158	9EH	DF	Record Checksum	Zero checksum from bytes
5	159	9FH	11	Header Checksum	Zero checksum from bytes
1	160	A0H	04	Output Number = 0100b (4h)	-12 Output
2	161	A1H	50	Nominal voltage (10 mV)	LSB First
3	162	A2H	FB	-12V (-1200mv) = FB50h	MSB
4	163	A3H	E4	Maximum negative voltage deviation	
5	164	A4H	FA	(10 mV) -13.08V (-1308mv) = FAE4h	
6	165	A5H	8C	Maximum positive voltage deviation	
7	166	A6H	FB	(10 mV) -11.4V (-1140mv) = FB8Ch	
8	167	A7H	78	Ripple and Noise pk-pk 10Hz to 20 MHz	
9	168	A8H	00	(mV) 120mVpp = 78h	
10	169	A9H	00	Minimum current draw (mA)	
11	170	AAH	00	0mA = 0h	
12	171	ABH	F4	Maximum current draw (mA)	
13	172	ACH	01	500mA = 01F4h	
1	173	ADH	01	Record Type ID 0x01 = DC OUTPUT	Record 5 Header
2	174	AEH	02	End of list/Version = 0010b	
3	175	AFH	0D	Record length of Multirecord	+5VSB Field Number
4	176	B0H	AE	Record Checksum	Zero checksum
5	177	B1H	42	Header Checksum	Zero checksum
1	178	B2H	05	Output Number = 0101b (5h)	+5VSB Output
2	179	B3H	F4	Nominal voltage (10 mV)	LSB First
3	180	B4H	01	5V (500mv) = 01F4h	MSB
4	181	B5H	DB	Maximum negative voltage deviation	
5	182	B6H	01	(10 mV) 4.75V (475mv) = 01DBh	
6	183	B7H	0D	Maximum positive voltage deviation	
7	184	B8H	02	(10 mV) 5.25V (525mv) = 020Dh	
8	185	B9H	32	Ripple and Noise pk-pk 10Hz to 20 MHz	
9	186	BAH	00	(mV) 50mVpp = 32h	
10	187	BBH	64	Minimum current draw (mA)	
11	188	BCH	00	100mA = 64h	
12	189	BDH	D0	Maximum current draw (mA)	
13	190	BEH	07	2000mA = 07D0h	
1	191	BFH	00	PAD	Record 6 Header
2	192	C0H	00	PAD	
3	193	C1H	00	PAD	
4	194	C2H	00	PAD	
5	195	C3H	00	PAD	
1	196	C4H	00	PAD	
2	197	C5H	00	PAD	
3	198	C6H	00	PAD	
4	199	C7H	00	PAD	
5	200	C8H	00	PAD	
6	201	C9H	00	PAD	
7	202	CAH	00	PAD	
8	203	CBH	00	PAD	
9	204	CCH	00	PAD	
10	205	CDH	00	PAD	
11	206	CEH	00	PAD	
12	207	CFH	00	PAD	
13	208	D0H	00	PAD	
1	209	D1H	00	PAD	Record 7 Header
2	210	D2H	00	PAD	
3	211	D3H	00	PAD	
4	212	D4H	00	PAD	
5	213	D5H	00	PAD	
1	214	D6H	00	PAD	
2	215	D7H	00	PAD	
3	216	D8H	00	PAD	
4	217	D9H	00	PAD	
5	218	DAH	00	PAD	
6	219	DBH	00	PAD	

User Manual ESR 312, 316, 420, 424, 524, 528

7	220	DCH	00	PAD	
8	221	DDH	00	PAD	
9	222	DEH	00	PAD	
10	223	DFH	00	PAD	
11	224	E0H	00	PAD	
12	225	E1H	00	PAD	
13	226	E2H	00	PAD	
1	227	E3H	01	Format Version / 3:0 = 01h	Dynamic Info Area
2	228	E4H	0F	Area Length = 15 (0Fh)	15 bytes
3	229	E5H	FF	Component Temperature(centigrade)	FFh indicates that area is regulation data
4	230	E6H	FF	Ambient Temperature(centigrade)	
5	231	E7H	FF	3.3V Regulation voltage(100 mV)	3.3V =>21h
6	232	E8H	FF	5.0V Regulation voltage(100 mV)	5.0V =>32h
7	233	E9H	FF	12 V Regulation voltage(100 mV)	12 V =>78h
8	234	EAH	FF	Fan1 Speed(100 rpm)	6000rpm =>3Ch
9	235	EBH	FF	Fan2 Speed(100 rpm)	6000rpm =>3Ch
10	236	ECH	11	Software version	
11	237	EDH	00	PAD	
12	238	EEH	00	Fan Status	bit0=1, fan1 fail; bit1=1,fan2 fail
13	239	EFH	00	AC Status	bit0=1 AC fail
14	240	F0H	03	PSON Status	bit1=0 PSON fail
15	241	F1H	00	PAD	

Table 59 1500W power supply FRU offset address

User Manual ESR 312, 316, 420, 424, 524, 528

8. Equipment Log

Use the following worksheet provided below to record information about your system

Item	Manufacturer Name and Model Number	Serial Number	Date Installed
Chassis			
Server Board			
Processor 1			
Processor 2			
Memory 1			
Memory 2			
Memory 3			
Memory 4			
Memory 5			
Memory 6			
Memory 7			
Memory 8			
Memory 9			
Memory 10			
Memory 11			
Memory 12			
Add-in-card 1			
Add-in-card 2			
Add-in-card 3			
Add-in-card 4			
Add-in-card 5			
Add-in-card 6			
Add-in-card 7			
PSU modular 1			
PSU modular 2			
PSU modular 3			
PSU modular 4			
Slim-line HDD 1			
Slim-line HDD 2			
Slim-line HDD 3			
Slim-line FDD			
Slim-CD/DVD			
Slim-line HDD 1			
System Fan 1			
System Fan 2			

User Manual ESR 312, 316, 420, 424, 524, 528

Item	Manufacturer Name and Model Number	Serial Number	Date Installed
Hard Disk 1			
Hard Disk 2			
Hard Disk 3			
Hard Disk 4			
Hard Disk 5			
Hard Disk 6			
Hard Disk 7			
Hard Disk 8			
Hard Disk 9			
Hard Disk 10			
Hard Disk 11			
Hard Disk 12			
Hard Disk 13			
Hard Disk 14			
Hard Disk 15			
Hard Disk 16			
Hard Disk 17			
Hard Disk 18			
Hard Disk 19			
Hard Disk 20			
Hard Disk 21			
Hard Disk 22			
Hard Disk 23			
Hard Disk 24			
Hard Disk 25			
Hard Disk 26			
Hard Disk 27			
Hard Disk 28			

Table 60 Equipment log

User Manual ESR 312, 316, 420, 424, 524, 528

9. Power Budget Calculation

Use these worksheet below to calculate the total power used by your configuration. List all current into the appropriate voltage level for each device and calculate the total current on each voltage level



DO NOT OVERLOAD: Do not exceed power limit for any DC outputs

9.1 650W Power Supply

	Current (Maximum) at voltage level:					
Device	+5Vsb	+3.3V	+5V	+12V	-5V	-12V
System Board						
Processor(s) + Cooler(s)						
Total Memory						
Front Panel LEDs/USB			0.3			
SCSI/SATA/SAS backplanes			3.2			
SAS daughter board(s)						
Slim-line Floppy Disk Drive						
Slim-line CD/DVD-Rom						
Total Hard Disk Drives						
Total Add-in-Cards						
2 x System Fans				4.0		
Optional Rear Fan(s)						
Total Current						
Maximum ratings (650W)	2.5	40	60	40	1	1

Table 61 ESR 316 power budget calculation

From the worksheet above, enter the total current for each column, multiply the voltage by the total current to get the total wattage for each voltage level. Add all the Wattage up and find the total power usage.

Voltage Level and Current Ohm's Law (Volts x Amperes=Power)	Power (Watts) on each Voltage Level
(+5Vsb) x ()A	
(+5.3V) x ()A	
(+ 5 V) x ()A	
(+ 12V) x ()A	
(- 5V) x ()A	
(- 12V) x ()A	
Total Combined Wattage	

Table 62 ESR-312/316 total combined wattage calculation

User Manual ESR 312, 316, 420, 424, 524, 528

9.2 950W Power Supply

	Current (Maximum) at voltage level:					
Device	+5Vsb	+3.3V	+5V	+12V	-5V	-12V
System Board						
Processor(s) + Cooler(s)						
Total Memory						
Front Panel LEDs/USB			0.3			
SCSI/SATA/SAS backplanes			4.0			
SAS daughter board(s)						
Slim-line Floppy Disk Drive						
Slim-line CD/DVD-Rom						
Total Hard Disk Drives						
Total Add-in-Cards						
2 x System Fans				4.0		
Optional Rear Fan(s)						
Total Current						
Maximum ratings (950W)	3.5	44	56	60	1.2	1.2

Table 63 950W power supply power budget calculation

From the worksheet above, enter the total current for each column, multiply the voltage by the total current to get the total wattage for each voltage level. Add all the Wattage up and find the total power usage.

Voltage Level and Current Ohm's Law (Volts x Amperes=Power)	Power (Watts) on each Voltage Level
(+5Vsb) x ()A	
(+5.3V) x ()A	
(+ 5 V) x ()A	
(+ 12V) x ()A	
(- 5V) x ()A	
(- 12V) x ()A	
Total Combined Wattage	

Table 64 ESR420/424/524/528 total combined wattage calculation

User Manual ESR 312, 316, 420, 424, 524, 528

9.3 1350W Power Supply

	Current (Maximum) at voltage level:					
Device	+5Vsb	+3.3V	+5V	+12V	-5V	-12V
System Board						
Processor(s) + Cooler(s)						
Total Memory						
Front Panel LEDs/USB			0.3			
SCSI/SATA/SAS backplanes			4.8			
SAS daughter board(s)						
Slim-line Floppy Disk Drive						
Slim-line CD/DVD-Rom						
Total Hard Disk Drives						
Total Add-in-Cards						
2 x System Fans				4.0		
Optional Rear Fan(s)						
Total Current						
Maximum ratings (1350W)	3.5	67.5	84.5	90	1.2	1.2

Table 65 1350W power supply power budget calculation

From the worksheet above, enter the total current for each column, multiply the voltage by the total current to get the total wattage for each voltage level. Add all the Wattage up and find the total power usage.

Voltage Level and Current Ohm's Law (Volts x Amperes=Power)	Power (Watts) on each Voltage Level
(+5Vsb) x ()A	
(+5.3V) x ()A	
(+ 5 V) x ()A	
(+ 12V) x ()A	
(- 5V) x ()A	
(- 12V) x ()A	
Total Combined Wattage	

Table 66 ESR-420/424/524/528 total combined wattage calculation

User Manual ESR 312, 316, 420, 424, 524, 528

10. BTU usage calculation

Use these worksheet below to calculate the BTU(British Thermal Unit) usage of your ESR system configuration of 50% loading, 75% loading and 100% loading.

10.1. 650W Power Supply

Loading	Equation to calculate system power consumption to BTU	Result
50%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 2.34$	
75%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 3.59$	
100%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 4.68$	

Table 62 BTU usage calculation, 650W Power Supply

10.2. 950W Power Supply

Loading	Equation to calculate system power consumption to BTU	Result
50%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 2.27$	
75%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 3.40$	
100%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 4.54$	

Table 63 BTU usage calculation, 950W Power Supply

10.3. 1350W Power Supply

Loading	Equation to calculate system power consumption to BTU	Result
50%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 2.27$	
75%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 3.40$	
100%	$\frac{\text{BTU}}{\text{hr}} = \text{Total Combine Wattage} \times 4.54$	

Table 64 BTU usage calculation, 1500W Power Supply

User Manual ESR 312, 316, 420, 424, 524, 528

The system is designed to be serviced by qualified technical personnel.

The desired Mean Time To Repair (MTTR) of the system is 30 minutes including diagnosis of the system problem. To meet this goal, the system enclosure and hardware have been designed to minimize the MTTR. Following table lists are the maximum times that a trained technical personnel should take to perform the maintenance and replace procedure, after diagnosis of the system and having identified the failed component.

Activity	Estimate Time
Remove cover	1 minute
Remove and replace hard disk drive	2 minutes
Remove and replace power supply module	30 seconds
Remove and replace system fan	30 seconds
Remove and replace backplane board	5 minutes
Install slim-line IDE hard disk drive	3 minutes
Install slim-line CD-Rom drive	3 minutes
Install slim-line Floppy Disk Drive	3 minutes

Table 65 Mean Time to Repair

Index

A

accessories 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
address 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
alarm 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Alarm Reset 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

B

battery 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
BTU 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

C

Cable 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
carrier 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Current 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

E

EIA-310D 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Etasis 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Expander 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

F

failed LED 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Fan 5, 7, 9, 13, 14, 15, 17, 18, 22, 47, 65, 66, 88, 101, 103, 105, 107, 109, 115, 117, 118, 119
FDD 12, 13, 2, 3, 4, 36, 38, 39, 56, 61, 62, 87, 92, 115
Field Replacement Unit
FRU 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Front Panel 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

H

hard disk drive 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
HDD LED 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Heat Sink 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
hot swap fan 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
hot swap hard disk drive 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

I

I/O gasket 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
i2c 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
IDE 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
ipass 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

J

jumper 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

L

LED 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

User Manual ESR 312, 316, 420, 424, 524, 528

M

miniSAS 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
motherboard 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

P

Power LED 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Power Supply 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Power Switch 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
PWM Fan 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

R

Rackmount 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Reset 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
RMA 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

S

SAS 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
SAS backplane 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
SATA 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
SATA backplane 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Screws 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
SCSI backplane 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Serial ATA 8, 9, 11, 14, 15, 1, 20, 21, 22, 23, 26, 27, 28, 29, 100, 102. *See also* SATA
Serial Attached SCSI 5, 7, 9, 13, 14, 17, 18, 15, 17, 22, 47, 65, 66, 88, 101, 103, 105, 107, 109, 115, 117, 118, 119
Server Board 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
SFF 8087 8
SFF 8470 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
SFF 8484 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Slide Rail 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
slim CD 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
slim HDD 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

T

top cover 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

W

Warranty 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119
Watts 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119

Z

Zippy 9, 11, 15, 20, 26, 27, 53, 100, 101, 117, 118, 119